

DRIVER UTILITY BA-0891(PMB-891LF) Driver 1.3

All rights reserved. Copyright 2013

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3.The sequence of setup is UTILITY --> NET Framework 3.5(only for WinXP) --> VGA --> LAN --> SOUND --> ME --> USB3.0(Only for Win7 32bit\_64bit)

=====  
=====

DRIVER CD CONTENT

=====  
=====

```
DRIVER\----+---->\Flash BIOS\AFU.bat
|
|
+---->\Microsoft .NET Framework 3.5\NET Framework 3.5.exe
|
|
+---->\Platform\XP(32-bit)\Utility\Setup.exe (Intel Chipset Software
Installation Utility only for windows OS)
+---->\Platform\Win7(32-bit)\Utility\Setup.exe (Intel Chipset Software
Installation Utility only for windows OS)
+---->\Platform\Win7(64-bit)\Utility\Setup.exe (Intel Chipset Software
Installation Utility only for windows OS)
+---->\Platform\Win8(32-bit)\Utility\Setup.exe (Intel Chipset Software
Installation Utility only for windows OS)
+---->\Platform\Win8(64-bit)\Utility\Setup.exe (Intel Chipset Software
Installation Utility only for windows OS)
|
```

|  
+---->\Platform\XP(32-bit)\VGA\Setup.exe (Intel HD Graphics Series  
Driver only for windows OS)  
+---->\Platform\Win7(32-bit)\VGA\Setup.exe (Intel HD Graphics Series  
Driver only for windows OS)  
+---->\Platform\Win7(64-bit)\VGA\Setup.exe (Intel HD Graphics Series  
Driver only for windows OS)  
+---->\Platform\Win8(32-bit)\VGA\Setup.exe (Intel HD Graphics Series  
Driver only for windows OS)  
+---->\Platform\Win8(64-bit)\VGA\Setup.exe (Intel HD Graphics Series  
Driver only for windows OS)  
|  
|  
+---->\Platform\XP(32-bit)\LAN\PRO2K3XP\_32.exe (Intel GIGA-LAN  
Driver only for windows OS)  
+---->\Platform\Win7(32-bit)\LAN\PROWin32.exe (Intel GIGA-LAN Driver  
only for windows OS)  
+---->\Platform\Win7(64-bit)\LAN\PROWinx64.exe (Intel GIGA-LAN  
Driver only for windows OS)  
+---->\Platform\Win8(32-bit)\LAN\PROWin32.exe (Intel GIGA-LAN Driver  
only for windows OS)  
+---->\Platform\Win8(64-bit)\LAN\PROWinx64.exe (Intel GIGA-LAN  
Driver only for windows OS)  
|  
|  
+---->\Platform\XP(32-bit)\SOUND\Setup.exe (Realtek ALC888S HD  
Audio Driver only for windows OS)  
+---->\Platform\Win7(32-bit)\SOUND\Setup.exe ((Realtek ALC888S HD  
Audio Driver only for windows OS)  
+---->\Platform\Win7(64-bit)\SOUND\Setup.exe (Realtek ALC888S HD  
Audio Driver only for windows OS)  
+---->\Platform\Win8(32-bit)\SOUND\Setup.exe (Realtek ALC888S HD  
Audio Driver only for windows OS)  
+---->\Platform\Win8(64-bit)\SOUND\Setup.exe (Realtek ALC888S HD  
Audio Driver only for windows OS)  
|  
|  
+---->\Platform\XP(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win7(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win7(64-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win8(32-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

+---->\Platform\Win8(64-bit)\ME\Setup.exe (Intel Management Engine

Interface Driver only for windows OS)

|

|

+---->\Platform\Win7,WES7(32-bit)\USB3.0\Setup.exe (IntelR USB 3.0

eXtensible Host Controller Driver only for windows OS)

+---->\Platform\Win7,WES7(64-bit)\USB3.0\Setup.exe (IntelR USB 3.0

eXtensible Host Controller Driver only for windows OS)

|

|

+---->\Platform\XP(32-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win7(32-bit)\MIntel RST\Setup.exe (IntelR Rapid

Storage Technology Utility only for windows OS)

+---->\Platform\Win7(64-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win8(32-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

+---->\Platform\Win8(64-bit)\Intel RST\Setup.exe (IntelR Rapid Storage

Technology Utility only for windows OS)

|

|

+---->\Platform\XP(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win7(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win7(64-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win8(32-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

+---->\Platform\Win8(64-bit)\F6floppy\ (Intel AHCI & RAID F6 Floppy

Installation Driver only for windows OS)

|  
|

MANUAL\---->\AdbeRdr930\_en\_US.exe (PDF File reader)

=====  
=====

This CD contains

### 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

a. This is found in CD:\Flash BIOS\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE and "BIOS ROM file

(ex.B8910PQ2.rom)" (\*the flash drive need 3MB free space. )

b. Use flash drive to boot, then type " afudos B8910PQ2.rom /p /b /n /x " and press enter to automatically flash BIOS.

(ex. C:\>afudos B8910PQ1.rom /p /b /n /x <enter>)

2 The system has LAN function (Intel 82579LM/Intel 82574L) that can support various network adapters. The content of the LAN driver is found as follows:

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

3 The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

4 Intel Chipset Software Installation Utility.(IntelR System Controller Hub C216 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

5 The VGA interface (Intel(R) HD Graphics) is with our system to support CRT display, Display Port(Optional).

The following illustration briefly showa you the content of VGA driver in sub-directory \VGA\

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

6 IntelR Rapid Storage Technology for Raid / AHCI.

You will find the contents of the directory in the Raid / AHCI.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

7 Intel Management Engine Interface

You will find the contents of the directory in the AMT.

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

8 IntelR F6Floppy Files for F6 Install

You will find the contents of the directory in the RAID / AHCI

a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

9 IntelR USB 3.0 eXtensible Host Controller

You will find the contents of the directory in the USB3.0

- a. for Windows 7 32-bit / Windows 7 64-bit
- b. There is Intel USB3.0 not support Windows XP 32-bit\_64-bit

10 Adobe Acrobat Reader 9.3

- a. for Windows XP 32-bit / Windows 7 32-bit / Windows 7 64-bit / Windows 8 32-bit / Windows 8 64-bit

-----

Revision History

-----

2013/03/04 Release BA-0891 Driver V1.0

2013/04/22 Release BA-0891 Driver V1.1, update Manual change to PMB-891LF\_Quick Guide\_Q2 / PMB-891LF\_User Manual\_M2.

2014/03/04 Release BA-0891 Driver V1.2, update Manual change to PMB-891LF\_Quick Guide\_Q3 / PMB-891LF\_User Manual\_M3.

2017/10/12 Release SA-5897 Driver V1.2 change to SA-5897 Driver V1.3  
1. Win7-32Bit & Win7-64Bit & Win8.1-32Bit & Win8.1-64Bit\_Lan Driver from Ver:17.4 update to Ver:22.3  
2. Win7-32Bit & Win7-64Bit\_USB3 Driver from Ver:1.0.6.245 update to Ver:1.0.10.255

\*\* Third party trademarks or brand names are the property of their owners.\*\*