

DRIVER UTILITY BC-0928 1.0

All rights reserved. Copyright 2014

Driver DVD Revision History

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is Main Chip -->USB3.0(For Win7) --> VGA -->ME --> LAN --> SOUND(For BC-0230Carrier Board) -->RAID

=====
=====

DRIVER DVD CONTENT

=====
=====

DRIVER\---+--->\Driver\Flash BIOS\C2300PQ3

|
|

+--->\Platform\Win7,POSReady7(32-bit)\Main Chip\infinst_autol.exe

+--->\Platform\Win7,POSReady7(64-bit)\Main Chip\infinst_autol.exe

+--->\Platform\Win8.1(32-bit)\Main Chip\infinst_autol.exe

+--->\Platform\Win8.1(64-bit)\Main Chip\infinst_autol.exe

|
|

+--->\Platform\Win7,POSReady7(32-bit)\USB3.0\Setup.exe

+--->\Platform\Win7,POSReady7(64-bit)\USB3.0\Setup.exe

|
|

+--->\\Platform\Win7,POSReady7(32-bit)\VGA\Setup.exe (WIN7 32bit

DRIVER)

+---->\Platform\Win7,POSReady7(64-bit)\VGA\Setup.exe \((WIN7 64bit DRIVER)
+---->\Platform\Win8.1(32-bit)\LAN\VGA\Setup.exe (WIN8.132bit DRIVER)
+---->\Platform\Win8.1(64-bit)\LAN\VGA\Setup.exe (WIN8.1 64bit DRIVER)
|
+---->\Platform\Win7,POSReady7(32-bit)\LAN\IntelR I217-LM\Setup.exe (WIN7 32bit DRIVER)
+---->\Platform\Win7,POSReady7(64-bit)\LAN\IntelR I217-LM\Setup.exe \((WIN7 64bit DRIVER)
+---->\Platform\Win8.1(32-bit)\LAN\IntelR I217-LM\Setup.exe (WIN8.132bit DRIVER)
+---->\Platform\Win8.1(64-bit)\LAN\IntelR I217-LM\Setup.exe (WIN8.1 64bit DRIVER)
|
|
+---->\Platform\Win7,POSReady7(32-bit)\SOUND\Realtek ALC888S\R273.exe(For BC-0230Carrier Board)
+---->\Platform\Win7,POSReady7(64-bit)\SOUND\Realtek ALC888S\R273.exe(For BC-0230Carrier Board)
+---->\Platform\Win8.1(32-bit)\SOUND\Realtek ALC888S\R273.exe(For BC-0230Carrier Board)
+---->\Platform\Win8.1(64-bit)\SOUND\Realtek ALC888S\R273.exe(For BC-0230Carrier Board)
|
|
+---->\Platform\ ME\SetupME.exe
|
|
+---->\Platform\Intel RAID\SetupRST.exe

MANUAL\AdbeRdr930_en_US.exe (PDF File reader)

=====
=====

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in DVD-ROM for BIOS update.

- a. This is found in DVD:\Flash\C2300PQ3
- b. For BC-0230 MB-->afudos C2300PQ3.bin /p /b /n /x

BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE, AFU.BAT and "BIOS ROM file

(ex. C2300PQ3.bin" (*the flash drive need 4MB free space.)

- b. Use flash drive to boot, then type "AFU c2300XXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu C2300PQ3.bin <enter>)

2. The system has LAN function (IntelR I217-LM) that can support various network adapters. The content of the LAN driver is found as follows:

- a. Windows 7_32_64bit/Windows 8.1_32_64bit

3. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

- a. Windows 7_32_64bit/Windows 8.1_32_64bit

4. The Main Chip directory is contained in CD-ROM for INTEL H61 Driver

- a. Windows 7_32_64bit/Windows 8.1_32_64bit

5. The VGA interface (Intel(R) HD Graphic Driver) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows 7_32_64bit/Windows 8.1_32_64bit

**** Third party trademarks or brand names are the property of their owners.****