

DRIVER UTILITY BH-1105R v1.0

All rights reserved. Copyright 2014

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Main Chip --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

Driver\--->\Flash BIOS\afua.bat

|  
|  
|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Main Chip\Setup.exe

+-->\Platform\XP,POSReady2009(32-bit)\LAN\PCIE\_Install\_5794\_05212012\Setup.exe

e

|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Sound\Setup.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFUA.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:Driver\Flash BIOS\afua.bat

### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFUA.BAT and "BIOS ROM file.

(ex.1105xxxx.ROM)" (\*the flash drive need 4MB free space)

- b. Use flash drive to boot, then type "AFUA 1105XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afua 11050P01.ROM <enter>)

## 2. The Main Chip directory is contained in CD-ROM for AMD A55 Driver.

- a. WindowsXP\_32bit

## 3. The system has LAN function (Realtek RTL8111E) that can support various network adapters.

The content of the LAN driver is found as follows:

- a. WindowsXP\_32bit

## 4. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with Windows XP,

Windows Vista you will find the content of the Sound driver.

- a. WindowsXP\_32bit

\*\*\*\*Third party trademarks or brand names are the property of their owners.\*\*\*\*

DRIVER UTILITY BH-1105R v1.0

All rights reserved. Copyright 2014

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Main Chip --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

Driver\--->\Flash BIOS\afua.bat

|  
|  
|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Main Chip\Setup.exe

+-->\Platform\XP,POSReady2009(32-bit)\LAN\PCIE\_Install\_5794\_05212012\Setup.exe  
e

|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Sound\Setup.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFUA.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:Driver\Flash BIOS\afua.bat

### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFUA.BAT and "BIOS ROM file.

(ex.1105xxxx.ROM)" (\*the flash drive need 4MB free space)

- b. Use flash drive to boot, then type "AFUA 1105XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afua 11050P01.ROM <enter>)

## 2. The Main Chip directory is contained in CD-ROM for AMD A55 Driver.

- a. WindowsXP\_32bit

## 3. The system has LAN function (Realtek RTL8111E) that can support various network adapters.

The content of the LAN driver is found as follows:

- a. WindowsXP\_32bit

## 4. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with Windows XP,

Windows Vista you will find the content of the Sound driver.

- a. WindowsXP\_32bit

\*\*\*\*Third party trademarks or brand names are the property of their owners.\*\*\*\*

DRIVER UTILITY BH-1105R v1.0

All rights reserved. Copyright 2014

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Main Chip --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

Driver\--->\Flash BIOS\afua.bat

|  
|  
|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Main Chip\Setup.exe

+-->\Platform\XP,POSReady2009(32-bit)\LAN\PCIE\_Install\_5794\_05212012\Setup.exe  
e

|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Sound\Setup.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFUA.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:Driver\Flash BIOS\afua.bat

### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFUA.BAT and "BIOS ROM file.

(ex.1105xxxx.ROM)" (\*the flash drive need 4MB free space)

- b. Use flash drive to boot, then type "AFUA 1105XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afua 11050P01.ROM <enter>)

## 2. The Main Chip directory is contained in CD-ROM for AMD A55 Driver.

- a. WindowsXP\_32bit

## 3. The system has LAN function (Realtek RTL8111E) that can support various network adapters.

The content of the LAN driver is found as follows:

- a. WindowsXP\_32bit

## 4. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with Windows XP,

Windows Vista you will find the content of the Sound driver.

- a. WindowsXP\_32bit

\*\*\*\*Third party trademarks or brand names are the property of their owners.\*\*\*\*

DRIVER UTILITY BH-1105R v1.0

All rights reserved. Copyright 2014

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Main Chip --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

Driver\--->\Flash BIOS\afua.bat

|  
|  
|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Main Chip\Setup.exe

+-->\Platform\XP,POSReady2009(32-bit)\LAN\PCIE\_Install\_5794\_05212012\Setup.exe

e

|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Sound\Setup.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====

=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFUA.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:Driver\Flash BIOS\afua.bat

### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFUA.BAT and "BIOS ROM file.

(ex.1105xxxx.ROM)" (\*the flash drive need 4MB free space)

- b. Use flash drive to boot, then type "AFUA 1105XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afua 11050P01.ROM <enter>)

## 2. The Main Chip directory is contained in CD-ROM for AMD A55 Driver.

- a. WindowsXP\_32bit

## 3. The system has LAN function (Realtek RTL8111E) that can support various network adapters.

The content of the LAN driver is found as follows:

- a. WindowsXP\_32bit

## 4. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with Windows XP,

Windows Vista you will find the content of the Sound driver.

- a. WindowsXP\_32bit

\*\*\*\*Third party trademarks or brand names are the property of their owners.\*\*\*\*



DRIVER UTILITY BH-1105R v1.0

All rights reserved. Copyright 2014

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Main Chip --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

Driver\--->\Flash BIOS\afua.bat

|  
|  
|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Main Chip\Setup.exe

+-->\Platform\XP,POSReady2009(32-bit)\LAN\PCIE\_Install\_5794\_05212012\Setup.exe

e

|  
|

+-->\Platform\XP,POSReady2009(32-bit)\Sound\Setup.exe

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFUA.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:Driver\Flash BIOS\afua.bat

### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFUA.BAT and "BIOS ROM file.

(ex.1105xxxx.ROM)" (\*the flash drive need 4MB free space)

- b. Use flash drive to boot, then type "AFUA 1105XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afua 11050P01.ROM <enter>)

## 2. The Main Chip directory is contained in CD-ROM for AMD A55 Driver.

- a. WindowsXP\_32bit

## 3. The system has LAN function (Realtek RTL8111E) that can support various network adapters.

The content of the LAN driver is found as follows:

- a. WindowsXP\_32bit

## 4. The Realtek ALC888S HD Audio codec sound function enhanced in this system fully compatible with Windows XP,

Windows Vista you will find the content of the Sound driver.

- a. WindowsXP\_32bit

\*\*\*\*Third party trademarks or brand names are the property of their owners.\*\*\*\*

