

BPC-8960

Quick Reference Guide



Manual ver Q3

All Right Reserved Copyright 2011

Packing Checklist

If you discover any item below was damaged or lost, please contact your vendor.

- | | | |
|-------------------------------------|---------------------------------|-----|
| <input checked="" type="checkbox"/> | BPC-8960 | X1 |
| <input checked="" type="checkbox"/> | This Quick Reference Guide | X1 |
| <input checked="" type="checkbox"/> | Driver/ Manual CD | X1 |
| <input checked="" type="checkbox"/> | Keyboard/ Mouse Cable (L=250mm) | X1 |
| <input checked="" type="checkbox"/> | Mini Jumper (2.00mm) | X11 |

Specifications

System

CPU Support	Intel® Atom™ D525 (Dual-Core) (1.8GHz)
Chipset	Intel® ICH8M
Memory Support	2 x 204-pin DDR3 DIMM Socket
Power Supply	ATX 110W (open frame)
Operation System	Windows 7/ XP/ Vista/ XPE/ 2000/ WEPOS/ CE
System Weight	3.3kg (7.26lb)
Dimension (WxHxD)	260 x 62 x 240 mm (10.24" x 2.44" x9.45")
Certificate	CE/ FCC (Class B)

I/O Ports


Drive Bays	1 x 2.5" SATA HDD or 1 x slim DVD-ROM (optional) or 2 x 2.5" SATA HDD without DVD-ROM
USB	3 x USB2.0
Serial Port	4 ports, COM1/3/4 for RS232, COM2 for RS232/422/485 (+5V/+12V optional set with jumper)
Parallel Port	1 x Parallel port (SPP/ EPP/ ECP)
Keyboard/ Mouse	1 x PS/2 port with Y-cable
LAN	1 x RJ-45, 10/100/1000 Mbps (Intel® 82567V)
DVI	1 x DVI-I (Resolution up to 1366 x 768)
VGA	1 x VGA
Audio	1 x Audio, Line-in/ Line-out/ MIC
Expansion Slot	1 x PCI or 1 x PCI-E (optional)

Environment


Operating Temp.	0 ~ 40 °C
Storage Temp.	-20 ~ 60 °C
Humidity	20% ~ 90%

System View


Front View

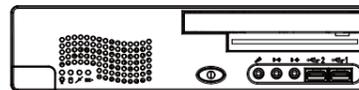


Rear View

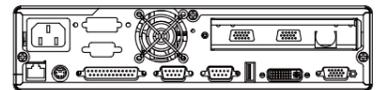


Top View

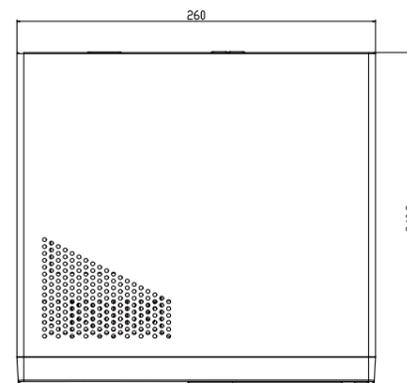


Bottom View

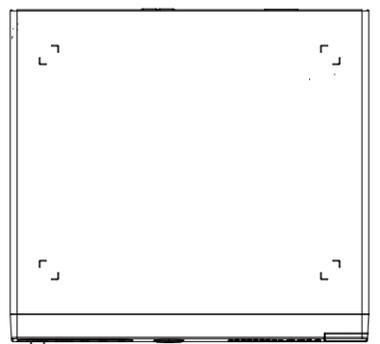

Side View

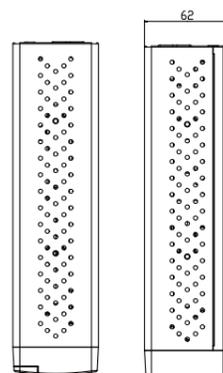


Quarter View

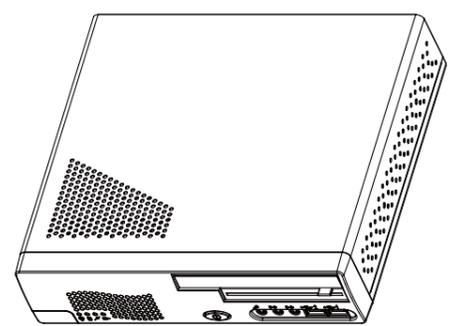

BPC-8960

Slim, Dual Core Atom D525 Book Size PC

Jumper Setting

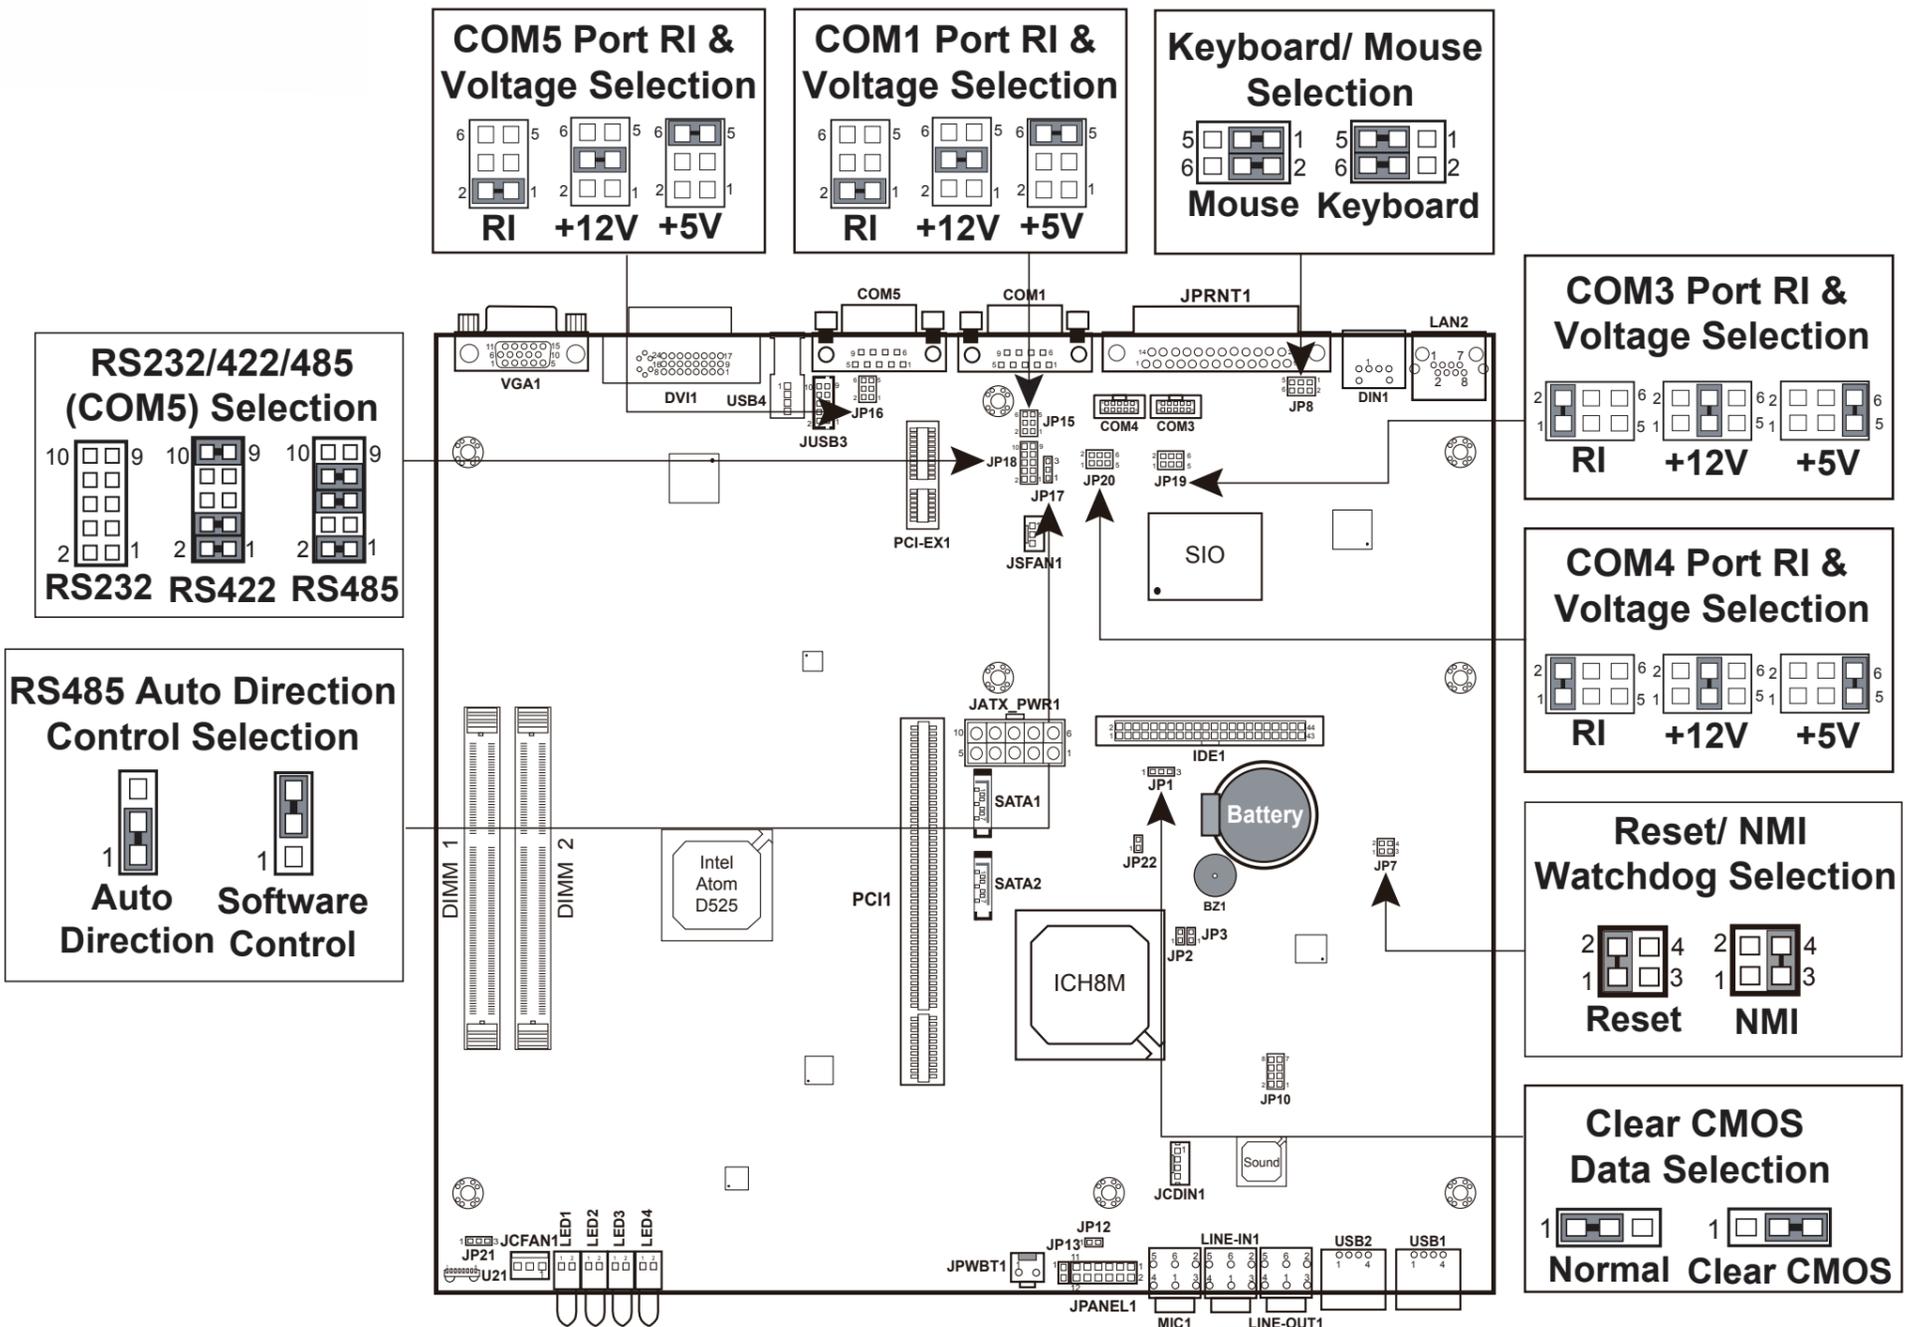

Safety Precaution

Following messages are safety reminders on how to protect your systems from damages. And thus, helps you lengthen the life cycle of the system.

1. Check the Line Voltage
 - a. The operating voltage for the power supply should cover the range of 100V~240V, otherwise the system may be damaged.
2. Environmental Conditions
 - a. Place your BPC-8960 on a sturdy, level surface. Be sure to allow enough room on each side to have easy access.
 - b. Avoid moving the system rapidly from a hot place to a cold place or vice versa because condensation may come from inside of the system.
 - c. Place BPC-8960 against strong vibrations, which may cause hard disk failure.
3. Handling
 - a. Do not turn the system upside down. This may cause the floppy drive and hard drive to mal-function.
 - b. Do not allow foreign objects to fall into this product.
 - c. If water or other liquid spills into this product, unplug the power cord immediately.
4. Good Care
 - a. When the outside of the case is stained, remove the stain with neutral washing agent with a dry cloth.
 - b. If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computer.