

DRIVER UTILITY PA-3051(POS-3152) 1.2

=====
=====

All rights reserved. Copyright 2012

Driver DVD Revision History

20121017-->Add Win7,POSReady(64bit)

(\Driver\Plaform\Win7,POSReady(64bit))

20140507-->LAN and TOUCH CONTROLLER EOL Modify driver

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3.The sequence of setup is Main Chip --> VGA --> LAN --> SOUND --> TOUCH

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\---+--->\FLASH BIOS\AFU.bat

|

|

+--->\Plaform\XP,POSReady2009 (32-bit)\Main Chip\infinst_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

+--->\Plaform\Win7,POSReady7(32-bit)\Main Chip\infinst_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

+--->\Platform\Win7,POSReady7(64-bit)\Main Chip\Setup.exe (Intel

Chipset Software Installation Utility only for windows OS)

```
|
|
+---->\Plaform\VGA\XP,POSReady2009 (32-bit)(WINXP ,POS Ready 2009
DRIVER)
+---->\Plaform\VGA\Win7,POSReady7(32-bit) (WIN7 32bit DRIVER)
+---->\Platform\Win7,POSReady7(64-bit)\VGA\Setup.exe(WIN7 64bit
DRIVER)
|
|
+---->\Plaform\XP,POSReady2009 (32-bit)\LAN\Realtek
RTL8111DL\WinXP_32bit\PCIE_Install_5736_0820\setup.exe (WINXP ,POS Ready
2009 DRIVER)
+---->\Plaform\Win7,POSReady7(32-bit)\LAN\Realtek
RTL8111DL\Win7_32_64bit\Install_Win7_7041_03212011\Setup.exe (WIN7 32bit
and 64bit DRIVER)

+---->\Plaform\Win7,POSReady(64bit)\LAN\Install_Win7_7061_07272012\Setup.exe
(WIN7 64bit DRIVER)
|
|
+---->\Plaform\XP,POSReady2009 (32-bit)\SOUND\Realtek
ALC888\Win_XP_32bit\WDM_R236.exe (WINXP ,POS Ready 2009 DRIVER)
+---->\Plaform\Win7,POSReady7(32-bit)\SOUND\Realtek
ALC888\Win7_32_64bit\Vista_Win7_R266.exe (WINVISTA/7 32bit and 64bit
DRIVER)

+---->\Plaform\Win7,POSReady(64bit)\Sound\64bit_Vista_Win7_R270.exe(WIN7
64bit DRIVER)
|
|
+---->\Device\Touch Screen\Setup.exe(WINXP ,POS Ready 2009,
WIN_7_32_64bit DRIVER)
|
|
+---->\Device\fingerpint\DigitalPersonal\SETUP.EXE (Option)
|
|
+---->\Device\MSR\ID Tech MSR and Sysking MSR , demo AP , OPOS
```

Driver) (Option)

```
|
|
+---->\Device\vertical module\SYSKING\IMI300\Driver) (Option)
```

API Package\---+---->\DEMO PROJECT\

```
|
|
+---->\ProxAPI standard\
|
|
+---->\Document\
```

MANUAL\AdbRdr930_en_US.exe (PDF File reader)

=====
=====

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:\Flash\AFU.bat

BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE, AFU.BAT and "BIOS ROM file

(ex.3152XXXX.ROM)" (*the flash drive need 2MB free space.)

- b. Use flash drive to boot, then type "AFU 3152XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 31521P01.ROM <enter>)

2. The system has LAN function (Realtek RTL8111DL) that can support various network adapters. The content of the LAN driver is found as follows:

a. Windows XP_POS Ready2009 /Windows 7_32_64bit

3. The Realtek ALC888 HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

a. Windows XP_POS Ready2009 /Windows 7_32_64bit

4. The UTILITY directory is contained in CD-ROM for INTEL D525 Driver

a. Windows XP_POS Ready2009 /Windows 7_32_64bit

5. The VGA interface (Intel(R) Graphics Media Accelerator 3150) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows XP_POS Ready2009 /Windows 7_32_64bit

**** Third party trademarks or brand names are the property of their owners.****