

DRIVER UTILITY DVD\_PA-3252 Driver V1.2

All rights reserved. Copyright 2012

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

3. The sequence of setup is Mainchip --> VGA --> LAN --> SOUND --> TOUCH

=====  
=====

DRIVER CD CONTENT

=====  
=====

DRIVER\---->\Flash BIOS\AFU.bat

|

+---->\Plaform\XP,POSReady2009 (32-bit)\Main Chip\infinst\_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

+---->\Plaform\Win7,POSReady7(32-bit)\Main Chip\infinst\_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

+---->\Plaform\Win7,POSReady7(64-bit)\Main Chip\infinst\_autol.exe

(Intel Chipset Software Installation Utility only for windows OS)

|

+---->\Plaform\XP,POSReady2009 (32-bit)\VGA\Setup.exe (WINXP ,POS

Ready 2009 DRIVER)

+---->\Plaform\Win7,POSReady7(32-bit)\VGA\Setup.exe (WIN7 32bit

DRIVER)

+---->\Plaform\Win7,POSReady7(64-bit)\VGA\Setup.exe (WIN7 64bit

DRIVER)

|

RA

+---->\Plaform\XP,POSReady2009 (32-bit)\LAN\setup.exe (WINXP ,POS

Ready 2009 DRIVER)  
+---->\Plaform\Win7,POSReady7(32-bit)\LAN\Setup.exe (WIN7 32bit  
DRIVER)  
+---->\Plaform\Win7,POSReady7(64-bit)\LAN\Setup.exe (WIN7 64bit  
DRIVER)  
RB  
+---->\Plaform\XP,POSReady2009 (32-bit)\LAN\setup.exe (WINXP ,POS  
Ready 2009 DRIVER)  
+---->\Plaform\Win7,POSReady7(32-bit)\LAN\Setup.exe (WIN7 32bit  
DRIVER)  
+---->\Plaform\Win7,POSReady7(64-bit)\LAN\Setup.exe (WIN7 64bit  
DRIVER)  
|  
+---->\Plaform\XP,POSReady2009 (32-bit)\SOUND\WDM\_R266.exe  
(WINXP ,POS Ready 2009 DRIVER)  
+---->\Plaform\Win7,POSReady7(32-bit)\SOUND\Vista\_Win7\_R266.exe  
(WIN7 32bit DRIVER)  
+---->\Plaform\Win7,POSReady7(64-bit)\SOUND\Vista\_Win7\_R268.exe  
(WIN7 64bit DRIVER)  
|  
+---->\Device\MSR\ID Tech MSR Driver and Utility (ID Tech MSR, demo  
AP, OPOS Driver) (Option)  
+---->\Device\MSR\Sysking\_MSR\_iButton\_AP (Sysking MSR, demo AP,  
OPOS Driver) (Option)  
+---->\Device\MSR\Protech\_MSR PS2 OPOS (Protech MSR, OPOS Driver)  
(Option)  
|  
+---->\Device\Embedded Printer\LABAU (Labau Printer Driver,support  
WinXP/Win7/POS Ready 2009\_32bit/64bit OS)  
+---->\Device\Embedded Printer\PROTECH MB-3013 (PROTECH Printer  
Driver,support WinXP/Win7/POS Ready 2009\_32bit/64bit OS)  
+---->\Device\Embedded Printer\SII (SII Printer Driver,support  
WinXP/Win7/POS Ready 2009\_32bit/64bit OS)  
|  
+---->\Device\Wifi Module\Spark LAN\WPER-116GN (support  
WinXP/Win7/POS Ready 2009\_32bit/64bit OS) (Option)  
|  
+---->\Device\Embeded Finger Printer\DigitalPersonal (Platinum

Fingerprint Recognition Software 3.3.0) (Option)

|

+---->\Device\Touch Screen\MB RA\_EETI C8051F321 (support  
WinXP/Win7/POS Ready 2009\_32bit/64bit OS)

+---->\Device\Touch Screen\MB RB\_EETI ETP-CP-MER4485XRU (support  
WinXP/Win7/POS Ready 2009\_32bit/64bit OS)

|

+---->\Device\VFD\LABAU (demp AP ,OPOS Driver) (Option)

+---->\Device\VFD\PROTECH MB-4013 (OPOS Driver) (Option)

|

+---->\Device\Cash drawer OPOS Driver (Option)

API Package\---+---->\DEMO PROJECT\

|

|

+---->\ProxAPI standard\

|

|

+---->\Document\

MANUAL\AdbRdr930\_en\_US.exe (PDF File reader)

=====  
=====

## 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM  
for BIOS update.

a. This is found in CD:\Flash\AFU.bat

### BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT  
and "BIOS ROM file

(ex.3252XXXX.ROM)" (\*the flash drive need 2MB free space. )

b. Use flash drive to boot, then type "AFU 3252XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 32520P01.ROM /p /b /n /x <enter>)

2. The system has LAN function (Realtek RTL8111F(RA) & Realtek RTL8119(RB)) that can support

various network adapters. The content of the LAN driver is found as follows:

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

3. The Realtek ALC888 HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

4. The UTILITY directory is contained in CD-ROM for INTEL D525 Driver

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

5. The VGA interface (Intel(R) Graphics Media Accelerator 3150 ) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

\*\*\*\* Third party trademarks or brand names are the property of their owners.\*\*\*\*

=====

=====

Driver version History

2012/05/21 Release Version: POS-3252 V1.0

2014/04/08 Release Version: POS-3252 V1.1

upadte:

1. Onboard Lan Realtek RTL8111F Gbe Lan driver.
2. Touch EETI ETP-CP-MER4485XRU driver.
3. PROTECH MSR PS2 OPOSdriver.
4. PROTECH Printer MB-3013 driver.
5. PROTECH VFD MB-4013 driver.

2014//05/08

upadte:

1. Onboard Lan Realtek RTL8119 Gbe Lan driver.

=====  
=====