


SA-5872

Quick Reference Guide

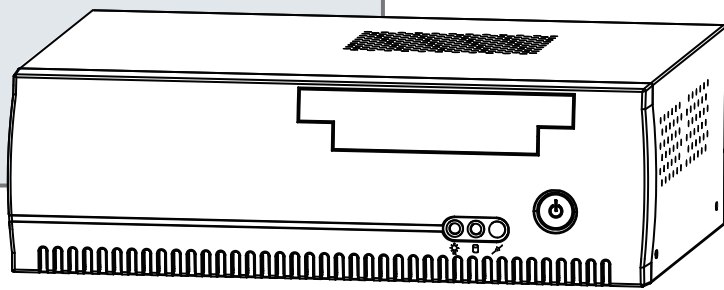

Ver. Q1

All Rights Reserved. Copyright 2013

Packing Checklist

If you discover any item below damaged or lost, please contact your vendor.

- | | |
|--|----|
| <input checked="" type="checkbox"/> SA-5872 | x1 |
| <input checked="" type="checkbox"/> This Quick Reference Guide | x1 |
| <input checked="" type="checkbox"/> Driver/Manual CD | x1 |
| <input checked="" type="checkbox"/> Mini-Jumper (2.0mm) | x6 |
| <input checked="" type="checkbox"/> Hex Washer Head Screw | x2 |

SA-5872

Specifications

System

CPU Support	Intel® 2 nd Gen. Core™ i7/i5/i3, Pentium, Celeron®
Chipset	Intel® PCH H61
Memory Support	2 x DDR3 1333/1066 MHz DIMM socket (up to 16GB)
Power Supply	ATX 220W
Operating System	Microsoft Windows 7/XP
Drive Bay	2 x 2.5" SATA HDD 1 x Slim DVD-ROM
BIOS	AMI BIOS
System Weight	5 kg (11 lb)
Dimension (WxHxD)	300 x 94 x 270 mm (11.8" x 3.7" x 10.6")
Certificate	FCC/CE

I/O Ports

USB	4 x USB 2.0
Serial Port	3 x COM port (COM1/3 for RS-232 only, COM2 for RS-232/422/485)
Parallel Port	1 x Bi-direction, SPP/EPP/ECP
Keyboard/ Mouse	2 x PS/2
LAN	2 x RJ45, 10/100/1000Mbps, Wake-on-LAN (Intel® 82579V & 82583V)
VGA	1 x VGA
Audio	Line-in/Line-out/Mic, Realtek ALC888S High Definition
Expansion Slot	1 x Mini-PCIe 1 x PCIe 16x


Environment

Operating Temp.	0 ~ 40°C (32 ~ 104°F)
Storage Temp.	-20 ~ 60°C (-4 ~ 140°F)
Humidity	20 ~ 90%


SA-5872

System View


Front View

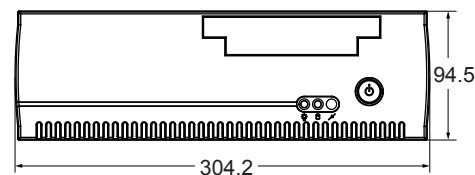

Rear View

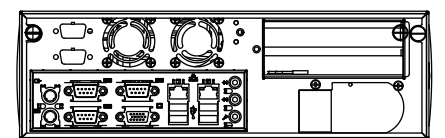


Top View

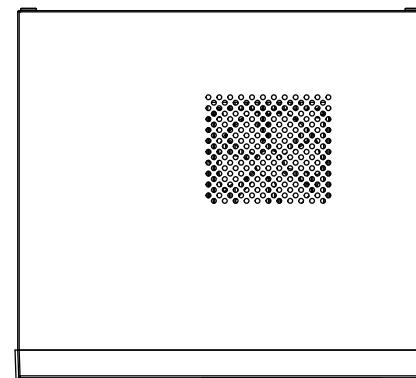


Bottom View



Side View

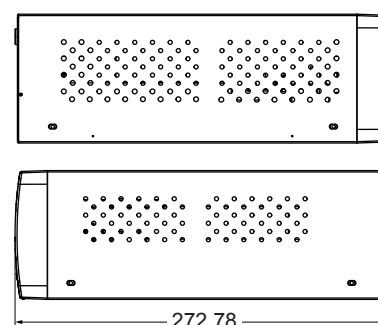

Quarter View

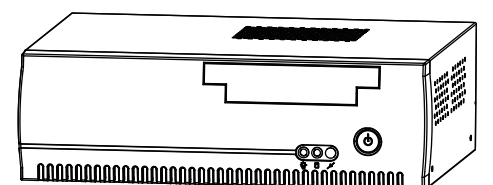

Unit: mm

SA-5872

Intel® i7/i5/i3 (LGA1155) Book-sized PC

Jumper Setting

Front Panel Selection


HDD LED

Speaker

Reset

Power LED

Power Button

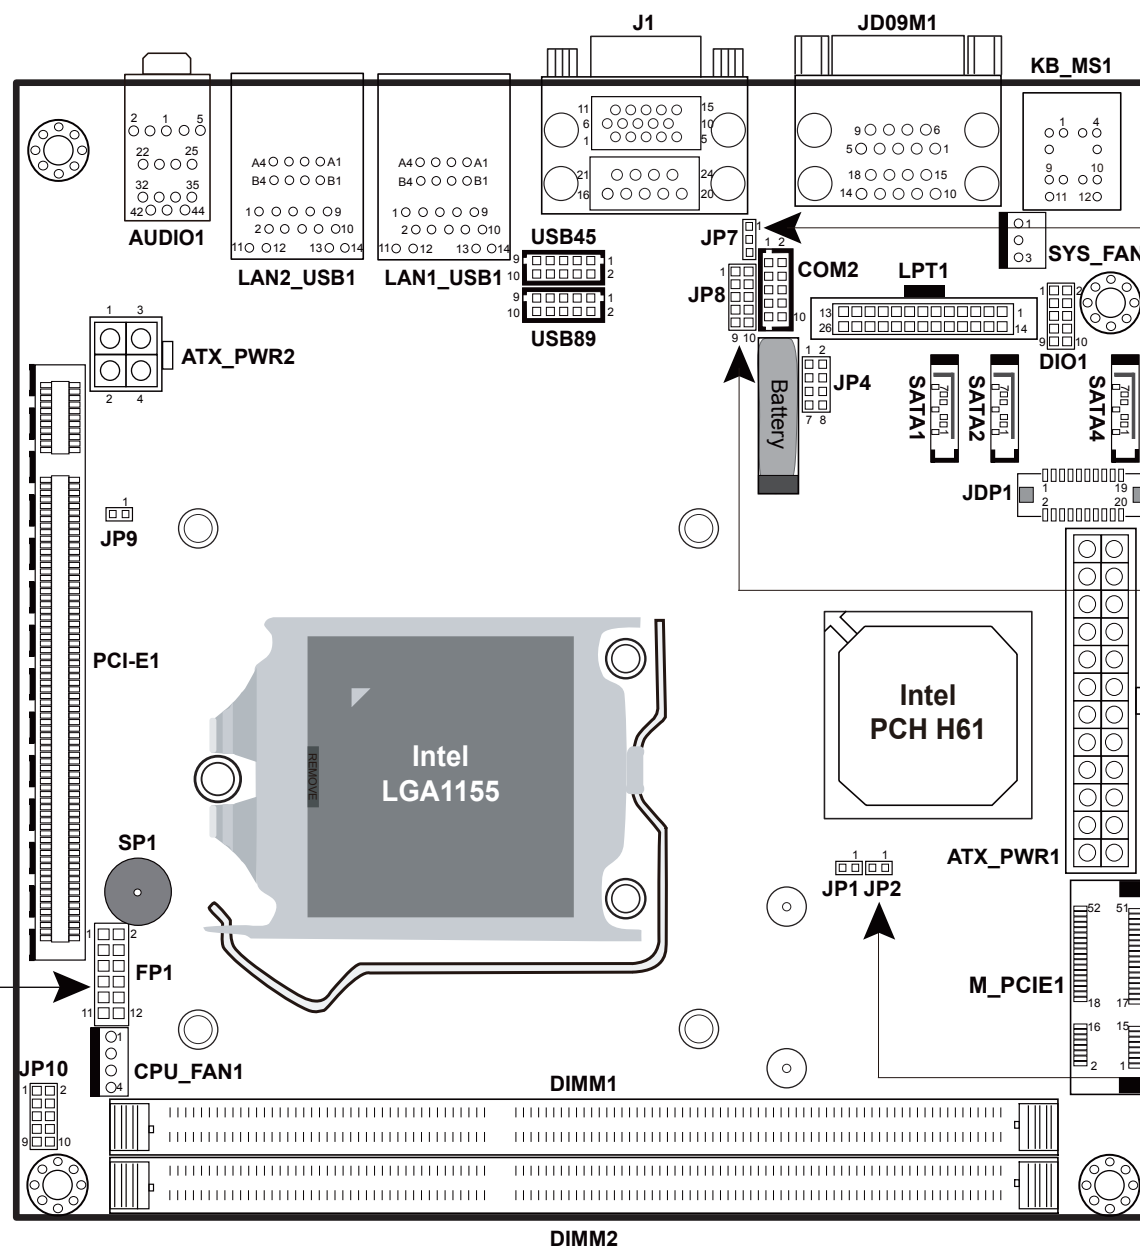

COM2 Auto Detect Selection

Normal (default)

Auto Gating

RS232/422/485 (COM2) Selection

RS232 (default)

RS422

RS485

Clear CMOS Data Selection

Normal (default)

Clear CMOS

Safety Precaution

Following messages are safety reminders on how to protect your system from damages, and thus help you lengthen the life cycle of the system.

1. Check the Line Voltage
 - The operating voltage for the power supply should cover the range of AC 100V~240V, otherwise the system may be damaged.
2. Environmental Conditions
 - Place your SA-5872 on a sturdy, level surface. Be sure to allow enough room on each side to have easy access.
 - Avoid moving the system rapidly from a hot place to a cold place or vice versa because condensation may come from inside of the system.
 - Place SA-5872 against strong vibrations, which may cause hard disk failure.
3. Handling
 - Do not turn the system upside down. This may cause the floppy drive and hard drive to mal-function.

4. Good Care
 - Do not allow foreign objects to fall into this product.
 - If water or other liquid spills into this product, unplug the power cord immediately.
 - When the outside of the case is stained, remove the stain with neutral washing agent with a dry cloth.
 - If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computer.

CAUTION! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING! Some internal parts of the system may have high electrical voltage. Therefore we strongly recommend qualified engineers open and disassemble the system.