

DRIVER UTILITY SA-5872 V1.0

All rights reserved. Copyright 2013

=====  
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is Mainchip --> VGA --> LAN --> SOUND

=====  
=====

DRIVER CD CONTENT

=====  
=====

DRIVER\---+--->\Flash BIOS\AFU.bat

|  
|

+--->\Platform\XP (32-bit)\Utility\infinst\_autol.exe (Intel Chipset Software Installation Utility only for windows OS)

+--->\Platform\Win7(32-bit)\Utility\infinst\_autol.exe (Intel Chipset Software Installation Utility only for windows OS)

|  
|

+--->\Platform\XP (32-bit)\VGA\Setup.exe (WINXP 32bit DRIVER)

+--->\Platform\Win7(32-bit)\VGA\Setup.exe (WIN7 32bit DRIVER)

|  
|

+--->\Platform\XP (32-bit)\LAN\Intel\setup.exe (WINXP 32bit DRIVER)

+--->\Platform\Win7(32-bit)\LAN\Intel\Setup.exe (WIN7 32bit DRIVER)

|  
|

+--->\Platform\XP (32-bit)\SOUND\WDM\_R267.exe (WINXP

32bit DRIVER)

+---->\Platform\Win7(32-bit)\SOUND\Vista\_Win7\_R267.exe (WIN7

32bit DRIVER)

|  
|

+---->\Platform\XP (32-bit)\ME8\_1.5M\_8.1.30.1350\Setup.exe

(WINXP 32bit DRIVER)

+---->\Platform\Win7(32-bit)\ME8\_1.5M\_8.1.30.1350\Setup.exe (WIN7

32bit DRIVER)

=====  
=====

### 1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in CD-ROM for BIOS update.

- a. This is found in CD:\Flash\AFU.bat

#### BIOS FLASH SETUP:

- a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE,AFU.BAT and "BIOS ROM file

(ex.3252XXXX.ROM)" (\*the flash drive need 2MB free space. )

- b. Use flash drive to boot, then type "AFU 3252XXXX.ROM" and press enter to automatically flash BIOS.

(ex. C:\>afu 32520P01.ROM <enter>)

2. The system has LAN function (Realtek RTL8111DL) that can support various network adapters. The content of the LAN driver is found as follows:

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

3. The Realtek ALC888 HD Audio codec sound function enhanced in this system fully compatible with

Windows XP, Windows Vista you will find the content of the Sound driver.

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

4. The UTILITY directory is contained in CD-ROM for INTEL D525 Driver

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

5. The VGA interface (Intel(R) Graphics Media Accelerator 3150 ) is embedded with our system to support

CRT display, Panel Link (optional) and TV-Out Encoder (optional). The following illustration briefly shows

you the content of VGA driver in sub-directory \VGA\

a. Windows XP\_POS Ready2009 /Windows 7\_32\_64bit

\*\*\*\* Third party trademarks or brand names are the property of their owners.\*\*\*\*

=====

=====

Driver version History

2013/10/25 Version: SA-5872 V1.0