

SE-8210 Specifications **System CPU** Support Intel® Core™ 3rd Gen. mobile i3/i5/i7 (rPGA-988) processor Intel® QM77 / HM-76 Chipset Memory Support DDR3/DDR3L 1600/1333/1066 up to 16GB / System OS Support Win8.1 32-bit Win8.1 64-bit, WIn 7. Win XP Watchdog 1~255 secs Watchdog timer 2.5" SATA HDD drive bay x 1 / Slim DVD-ROM X1(option) **Driver Bay Power Supply** 9~36V DC-in Power Adapter 24V, 120W (Option) **Expansion Slot** 1 x mini PCI-E slot (for WLAN module & 3G module) 1 x SIM card slot / 1 x CFast slot 1 x PCle x4 : 10W max./slot(option) System Weight 4.5 kg 260mm(W) x 89mm(H) x 200mm(D) Dimension (WxHxD) Certificate FCC/CE I/O Ports (Front side) 2 ports (COM 5/6 for RS232 only) Serial Port Digital I/O DSUB-25,8in/8out or Phoenix-16p (option) USB 2 x USB 2.0 Display port 2x 1x / 1x SIM card / CFast slot I/O Ports (Rear side) 4 ports support (COM1/3/4 for RS232, COM2 for Serial Port RS232/422/485, pin-9 5V/12V/RI selectable) **VGA** 1 x VGA LAN LAN1: Intel® 82579LM 10/100/1000 LAN LAN2: Intel® 82583V 10/100/1000 LAN Support wake-on-LAN 1 x Line out, 1 x Mic-in, High Definition Audio USB 4 x USB 3.0 1 x 9~36V (DIN type 4 pin connector) DC-In **Environment** Operating Temp. HDD: -5 ~ 45°C

CFast card(Wide-Temp grade): -5°C ~ 55°C (w/o Audio)


Ambient with air flow

-20 ~ 80°C

10 ~ 90%


Storage Temp.

Humidity

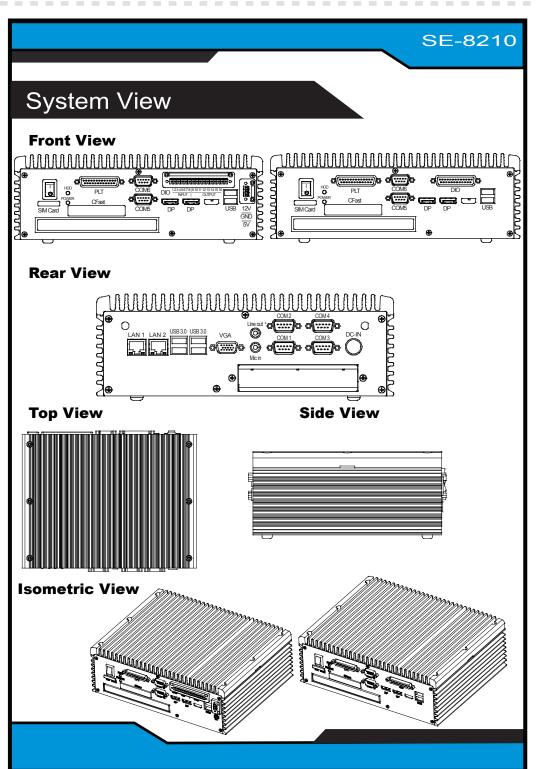

It's the right choice

SE-8210

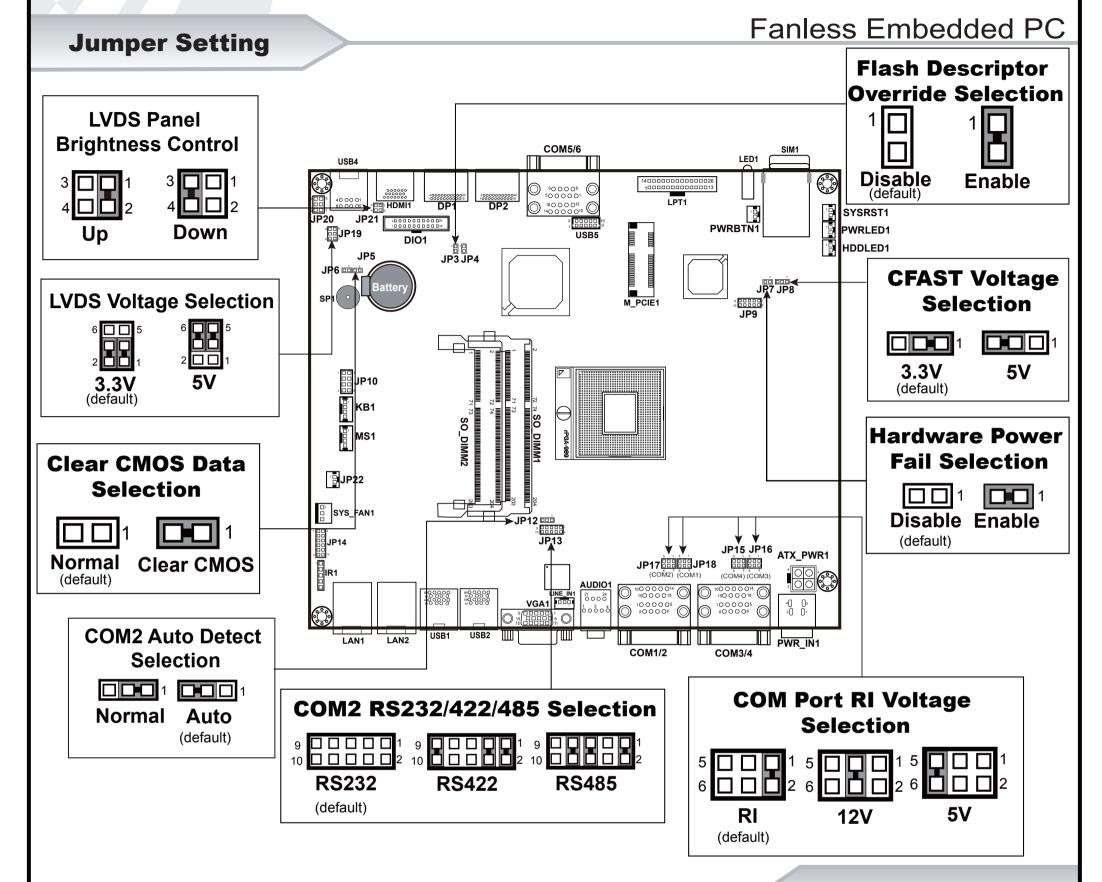

Safety Precaution

Following messages are safety reminders on how to protect your system from damages, and thus help you lengthen the life cycle of the system.

1. Check the Line Voltage

 The operating voltage for the power supply should cover the range of 9V~36V DC, otherwise the system may be damaged.

2. Environmental Conditions

- Place your SE-8210 on a sturdy, level surface. Be sure to allow enough room on each side to have easy access.
- Avoid moving the system rapidly from a hot place to a cold place or vice versa because condensation may come from inside of the system.
- Place SE-8210 against strong vibrations, which may cause hard disk failure.

3. Handling

• Do not turn the system upside down. This may cause the hard drive to mal-function.

- Do not allow foreign objects to fall into this product.
- If water or other liquid spills into this product, unplug the power cord immediately.

4. Good Care

• When the outside of the case is stained, remove the stain with neutral washing agent with a dry cloth.

If dust has been accumulated on the outside, remove it by using a special made vacuum cleaner for computer.

CAUTION!

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

WARNING!

Some internal parts of the system may have high electrical voltage. Therefore we strongly recommend qualified engineers open and disassemble the system.