

SP-611X DRIVER CD RELEASES VERSION 1.0

All rights reserved. Copyright 2014

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.

2. You will be prompted to reboot when installation is complete.

DRIVER CD CONTENT

DRIVER CD\+--->BIOS\AFUDOS.EXE (for AMI BIOS Updata)

|

|

+--->Driver\Platform\{OS}\Utility\EG20T_Win7_Wes7_setup_120.exe

(For Intel® EG20T Package Utility)

|

|

+--->Driver\Platform\{OS}\Graphics\{Select Resolution}\Unzip file (For

Intel® Customer design driver)

|

|

+--->Driver\Platform\{OS}\LAN\PROWin32.exe (For Intel 82574 GbE

Driver)

|

|

+--->Driver\Platform\{OS}\Sound\32bit_Vista_Win7_Win8_R270.exe

(For Realtek ALC888 Driver)

|

|

+--->Driver\Platform\{OS}\Touch Screen\+-->setup.exe (For

eGalaxTouch TouchKit Windows Driver)

|

|

+---->Driver\Platform\WinXP\IOH\--+ \ (For Intel press F6 to install a IOH Driver)

Manual\Adobe\AdbeRdr1011_en_US (PDF File reader)

=====
=====

1. System BIOS Update

Users of AMI BIOS can use the program "AFUDOS.EXE" contained in CD-ROM for BIOS update.

This is found in CD:\BIOS\AFUDOS.EXE

2. The Intel® EG20T Chipset Device Software, You will find the contents of the directory in the Utility.

OS support : Windows 7 / XP

3. The Graphics interface Customer design Driver, You will find the contents of the directory in the Graphics.

OS support : Windows 7 / XP

4. The system has LAN function (Intel 82574 GbE) that can support various network adapters, You will find the contents of the directory in the LAN.

OS support : Windows 7 / XP

5. The Realtek ALC888 High Definition sound function enhanced Driver,

You will find the contents of the directory in the Audio.

OS support : Windows 7 / XP

6. The Touchscreen interface Device Software, You will find the contents of the directory in the Touch Screen.

OS support : Windows 7 / XP

7. The Intel® IOH (F6) Device Software, You will find the contents of the directory in the IOH.

OS support : Windows XP

=====
=====

Note:

BIOS:

61180P05.rom For 8.4" AUO panels, 800*600 resolution

61100P03.rom For 10.4" AUO panels, 800*600 resolution

61100PA3.rom For 10.4" AUO panel, 1024*768 resolution

61120P04.rom For 12.1" AUO panel, 1024*768 resolution

IOH:FD_Inst_WinXP: (F6)

iohsata.cat

iohsata.inf

iohsata.sys

txtsetup.oem

Utility:

1. EG20T_Win7_Wes7_Package_120.zip

2. EG20T_WinXP_WePOS_Package_245.zip

Graphics:

800_600\8.4" and 10.4" AUO panels\

IEMGD_HEAD_Windows7_6118_7317b_lvds_1_16_3228_1102.zip

IEMGD_HEAD_WindowsXP_6118_7317b_lvds_1_16_3228_1102.zip

1024_768\12.1" AUO panel\

IEMGD_HEAD_Windows7_6112_7317b_lvds_1_16_3228_1102.zip

IEMGD_HEAD_WindowsXP_6112_7317b_lvds_1_16_3228_1102.zip

1024_768\10.4" AUO panel\

6110 is the original version with 800*600 panel, please use drivers from 6118 model (also 800*600)

New version 6110a appeared with 1024*768, in which case it's suitable to use 6112 model drivers (also 1024*768)

LAN: Intel(R) Network Connections Software Version 17.4

Sound:

Vista_Win7: 32bit_Vista_Win7_Win8_R270.exe

XP : WDM_R270.exe

Touch Screen:

eGalaxTouch-5.12.0.10517