

DRIVER UTILITY DVD_SP-6130 Driver 1.0

All rights reserved. Copyright 2014

=====
=====

1. Click on the self-extracting and self-installing setup file and answer all prompts presented.
2. You will be prompted to reboot when installation is complete.
3. The sequence of setup is UTILITY --> VGA --> LAN --> SOUND --> Touch

=====
=====

DRIVER CD CONTENT

=====
=====

DRIVER\
|

- +---->\Flash BIOS\Win7_x86(800x600)\AFU.bat
- +---->\Flash BIOS\Win7_x86(1024x768)\AFU.bat
- +---->\Flash BIOS\WinXP_x86(800x600)\AFU.bat
- +---->\Flash BIOS\WinXP_x86(1024x768)\AFU.bat

|
|

+---->\Platform\Win7,POSReady7(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\Utility\Setup.exe (Intel Chipset Software Installation Utility only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\VGA\Setup.exe (Intel GMA3600 Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\VGA\1024x768\WindowsDriverSETUP.bat (Intel GMA3600 Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\VGA\800x600\WindowsDriverSETUP.bat (Intel GMA3600 Driver only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\LAN\Setup.exe (Realtek RTL8111F GIGA-LAN Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\Setup.exe (Realtek RTL8111F GIGA-LAN Driver only for windows OS)

|
|

+---->\Platform\Win7,POSReady7(32-bit)\Audio\Setup.exe ((Realtek ALC888S HD Audio Driver only for windows OS)

+---->\Platform\WinXP,POSReady2009(32-bit)\Audio\Setup.exe ((Realtek ALC888S HD Audio Driver only for windows OS)

|
|

+---->\Device\Touch\eGalaxTouch\Setup.exe(eGalaxTouch Driver only for windows OS)

|
|

+---->\Device\Wifi Module\Spark LAN\WPER-116GN\Setup.exe(PER-116GN Driver only for windows OS)

MANUAL\

+---->\AdbeRdr930_en_US.exe (PDF File reader)

API Package\

+---->\DEMO PROJECT\
|

|

+---->\ProxAPI standard\
|

|

+---->\Document\
|

=====

=====

This DVD contains

1. System BIOS Update

Users of AMI BIOS can use the program "AFU.bat" contained in DVD-ROM for BIOS update.

- a. This is found in CD:\Driver\FIash BIOS\Win7_x86(800x600)\AFU.bat
- b. This is found in CD:\Driver\FIash BIOS\Win7_x86(1024x768)\AFU.bat
- c. This is found in CD:\Driver\FIash BIOS\WinXP_x86(800x600)\AFU.bat
- d. This is found in CD:\Driver\FIash BIOS\WinXP_x86(1024x768)\AFU.bat

BIOS FLASH SETUP:

a. Prepare a bootable flash drive and include DOS files: AFUDOS.EXE and "BIOS ROM file

(ex.6130xxxx.rom) (*the flash drive need 4MB free space.)

b. Use flash drive to boot, then type " afudos 6130xxxx.rom /p /b /n /x " and press enter to automatically flash BIOS.

(ex. C:\>afudos 61300PH4.rom /p /b /n /x <enter>)

2. The system has LAN function (Realtek RTL8111F Gbe Lan) that can support various network adapters. The content of the LAN driver is found as follows:

- a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

3. The Realtek ALC888S High Definition sound function enhanced in this system fully compatible with

You will find the contents of the directory in the SOUND.

- a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

4. Intel Chipset Software Installation Utility.(IntelR System Controller Hub NM10 Chipset),

You will find the contents of the directory in the UTILITY.

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

5. The VGA interface (Intel(R) GMA3600 Graphics) is with our system to support LVDS/DVI-I/CRT display.

The following illustration briefly showa you the content of VGA driver in sub-directory \VGA\

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

6. eGalaxTouch Driver

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

8. Spark LAN Driver

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

7. Adobe Acrobat Reader 9.3

a. for Win7,POSReady7(32-bit) \ WinXP,POSReady2009(32-bit)

Revision History

2014/03/27 Release DVD_SP-6130 Driver 1.0

** Third party trademarks or brand names are the property of their owners.**