

USER MANUAL

BC-2602

**Industrial Rack Mount System
with Intel® 9th / 8th Gen. Core™
i7 / i5 / i3 / Pentium® / Celeron® /
Xeon® E-2200 / 2100 CPU**

BC-2602 M1

BC-2602

***Industrial Rack Mount System with Intel[®] 9th/
8th Gen. Core[™] i7/i5/i3/ Pentium[®] / Celeron[®]
/ Xeon[®] E-2200 / 2100 CPU Processor***

COPYRIGHT NOTICE & TRADEMARK

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

This manual is copyrighted in Jun. 2020. You may not reproduce or transmit in any form or by any means, electronic, or mechanical, including photocopying and recording.

DISCLAIMER

This user's manual is meant to assist users in installing and setting up the system. The information contained in this document is subject to change without any notice.




CE NOTICE

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

	CAUTION: Danger of explosion may occur when the battery is incorrectly replaced. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.
	CAUTION: Always touch the board components by the edges. Never touch components such as a processor by its pins. Take special cares while you are holding electronic circuit boards by the edges only. Do not touch the board components.
	WARNING: Some internal parts of the board may have high electrical voltage. We strongly recommend that only qualified engineers are allowed to service and disassemble the system. If any damages should occur and are caused by unauthorized servicing, it will not be covered by the product warranty.

Contents

1	Introduction	1-1
1.1	About This Manual	1-2
2	Getting Started	2-1
2.1	Package List.....	2-2
2.2	System Overview	2-3
2.2.1	Front View	2-3
2.2.2	Rear View	2-3
2.2.3	Side View.....	2-4
2.2.4	Quarter View.....	2-4
2.3	BC-2602 System Specifications	2-5
2.4	Safety Precautions	2-8
3	Hardware Configuration	3-1
3.1	External I/O Ports Diagram	3-2
3.2	Jumper & Connector Quick Reference Table.....	3-3
3.3	Main Board Component Locations.....	3-5
3.3.1	Top View	3-5
3.3.2	Main Board Jumper Setting	3-6
3.3.3	Main Board Bottom View	3-7
3.3.4	Main Board I/O View.....	3-8
3.4	How To Set Jumpers	3-9
3.5	Setting Connectors and Jumpers.....	3-11
3.5.1	COM1 and COM2 Port (COM1, COM2).....	3-11
3.5.2	COM3, COM4, COM5, COM6 Connector (COM3 ~ COM6)	3-12

3.5.3	COM3 and COM4 Pin9 Definition Selection Guide (JPCOM3, JPCOM4).....	3-13
3.5.4	Programmable GPIO Pin Header (JDIO1)	3-14
3.5.5	PS/2 Keyboard & Dual USB 2.0 Port (KB_MS_USB)	3-15
3.5.6	DisplayPort (DP1, DP2).....	3-16
3.5.7	VGA (Video Graphics Array) Port (VGA1)	3-17
3.5.8	Front Panel Connector (JFP1)	3-18
3.5.9	LAN & USB Port (LAN1_USB1, LAN2_USB2).....	3-19
3.5.10	Line In, Line Out, Mic In Port (AUDIO1).....	3-22
3.5.11	Embedded Display Port (EDP) Connector (EDP1)	3-23
3.5.12	Front Panel Audio Connector (JAUDIO1)	3-24
3.5.13	Hardware Power Failure Selection (JP_AT1).....	3-25
3.5.14	PCH Configuration / Recovery Selection (JP2).....	3-26
3.5.15	Flash Descriptor Override Selection (JP3).....	3-27
3.5.16	VCCIO Voltage Selection (JP6).....	3-28
3.5.17	USB Standby +5V / Normal Power Selection (JP7)	3-29
3.5.18	Parallel Port (LPT) Connector (LPT1)	3-30
3.5.19	I2C Wafer (JI2C1, JI2C2)	3-31
3.5.20	Case Open Connector (JP5)	3-31
3.5.21	Mini PCI Express Slot (For C246/Q370 Only) (M_PCIE1)	3-32
3.5.22	M.2 M-Key Slot (M2_SSD)	3-33
3.5.23	PCIe Bus (PCI_E1 (x16), PCI_E2 (x4), PCI_E3 (x4), PCI_E4 (x4), PCI_E5 (x1)).....	3-35
3.5.24	PCI Bus Slot (PCI1, PCI2).....	3-45
3.5.25	CPU / System Fan Connector (CPU_FAN1, SYS_FAN1, SYS_FAN2)	3-47
3.5.26	Serial ATA (SATA) Connector (SATA1 ~ SATA6).....	3-48
3.5.27	Internal USB 3.1 Connector (USB1).....	3-50

3.5.28	Internal USB 2.0 Connector (USB2, USB3, USB4).....	3-51
3.5.29	Speaker Connector (JSPK1)	3-52
3.5.30	Power Input Connector (ATX_PWR1, ATX_PWR2).....	3-53
3.5.31	Low Pin Count (LPC) Connector (JLPC1).....	3-54
3.5.32	Clear Cmos Data Selection (JCMOS1).....	3-55
3.5.33	NMI Header (JNMI1)	3-55
3.5.34	Flash Bios Header (JSPI_1).....	3-56
3.5.35	APS Header (JAPS1)	3-56
3.5.36	Micro SIM Card Socket (SIM1).....	3-57
4	Software Utilities	4-1
4.1	Introduction.....	4-2
4.2	Installing Intel® Chipset Software Installation Utility	4-3
4.3	Installing Graphics Driver Utility	4-4
4.4	Installing LAN Driver Utility.....	4-5
4.5	Installing Sound Driver Utility	4-6
4.6	Intel® Management Engine Components Driver Installer Installation	4-7
4.7	Installing RAID Utility (Only for C246/Q370, Optional).....	4-8
4.8	Installing Intel® Serial I/O Driver Utility	4-13
5	BIOS SETUP	5-1
5.1	Introduction.....	5-2
5.2	Accessing Setup Utility.....	5-3
5.3	Main.....	5-6
5.4	Advanced	5-8
5.4.1	Advanced – CPU Configuration	5-9

5.4.2	Advanced – PCH-FW Configuration.....	5-10
5.4.3	Advanced – Trusted Computing	5-11
5.4.4	Advanced – ACPI Settings	5-12
5.4.5	Advanced – Hardware Monitor	5-13
	Smart Fan Mode Configuration	5-14
5.4.6	Advanced – Super IO Watchdog	5-15
5.4.7	Advanced – S5 RTC Wake Settings.....	5-16
5.4.8	Advanced – Super IO Configuration.....	5-17
	Super IO Configuration – Serial Port 1 Configuration	5-18
	Super IO Configuration – Serial Port 2 Configuration	5-19
	Super IO Configuration – Serial Port 3 Configuration	5-20
	Super IO Configuration – Serial Port 4 Configuration	5-21
	Super IO Configuration – Serial Port 5 Configuration (For Q370/C246 SKU Only)	5-22
	Super IO Configuration – Serial Port 6 Configuration (For Q370/C246 SKU Only)	5-23
	Super IO Configuration – Parallel Port Configuration	5-24
5.4.9	Advanced – USB Configuration.....	5-25
5.4.10	Advanced – NVMe Configuration	5-26
5.4.11	Advanced – Network Stack Configuration	5-27
5.5	Chipset	5-29
5.5.1	Chipset – System Agent (SA) Configuration	5-30
	System Agent (SA) Configuration – Memory Configuration	5-31
	System Agent (SA) Configuration – Graphics Configuration.....	5-32
	System Agent (SA) Configuration – PEG Port Configuration.....	5-33
5.5.2	Chipset – PCH IO Configuratioin.....	5-34
	PCH-IO Configuration – PCI Express Configuration	5-35
	PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#2 (For Q370 / C246 SKU Only)	5-36

PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#3 (For Q370 / C246 SKU Only)	5-37
PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#4	5-38
PCH-IO Configuration – PCI Express Configuration – PCI Express x1 – SLOT#5 (For Q370 / C246 SKU Only)	5-40
PCH-IO Configuration – PCI Express Configuration – Mini PCI Express x1 Slot (For Q370 / C246 SKU Only)	5-41
PCH-IO Configuration – PCI Express Configuration – SATA Configuration	5-42
5.6 Security	5-44
5.7 Boot	5-46
5.8 Save & Exit.....	5-47

Appendix A Technical SummaryA-1

BA-2602 Block Diagram	A-2
Interrupt Map	A-3
I/O MAP	A-16
Memory Map.....	A-18
DMA Map.....	A-19
Configuring WatchDog Timer	A-20
Flash BIOS Update.....	A-22

Revision History

The revision history of BC-2602 User Manual is described below:

Version No.	Revision History	Date
M1	Initial Release	2020/06/04

1 Introduction

This chapter provides the introduction for the BC-2602 system as well as the framework of the user manual.

The following topic is included:

- About This Manual

1.1 About This Manual

Thank you for purchasing our BC-2602 system. The BC-2602 provides faster processing speed, greater expandability and can handle more tasks than before. This manual is designed to assist you how to install and set up the whole system. It contains 5 chapters and 1 appendix. Users can configure the system according to their own needs. This user manual is intended for service personnel with strong hardware background. It is not intended for general users.

The following section outlines the structure of this user manual.

Chapter 1 Introduction

This chapter provides the introduction for the BC-2602 system as well as the framework of the user manual.

Chapter 2 Getting Started

This chapter describes the package contents and outlines the system specifications. Read the safety reminders carefully on how to take care of your system properly.

Chapter 3 Hardware Configuration

This chapter provides the external I/O Ports diagram, outlines the locations of the mainboard components and their respective functions. You will learn how to set the jumpers and configure the system to meet your own needs.

Chapter 4 Software Utilities

This chapter contains helpful information for proper installations of the Intel Chipset Software Installation Utility, Graphics Driver Utility, LAN Driver Utility, Sound Driver Utility, Intel[®] Management Engine Components Driver Installer, Intel[®] Rapid Storage Utility and Intel[®] Serial I/O Driver Utility.

Chapter 5 BIOS Setup

This chapter indicates you how to change the BIOS configurations.

Appendix A Technical Summary

This appendix provides the information about the allocation maps for the block diagram, system resources, Watchdog Timer Configuration and Flash BIOS Update.

2 Getting Started

This chapter provides the information for the BC-2602 system. It describes the package contents and outlines the system specifications.

The following topics are included:

- Package List
- System Overview
- System Specification
- Safety Precautions

Experienced users can go to Chapter 3 Hardware Configuration on page 3-1 for a quick start.


2.1 Package List

If you discover any of the items listed below are damaged or lost, please contact your local distributor immediately.


Item	Q'ty
BC-2602	1
Quick Reference Guide	1
Manual / Driver DVD	1
Mini Jumper (2 mm)	6

2.2 System Overview


2.2.1 Front View

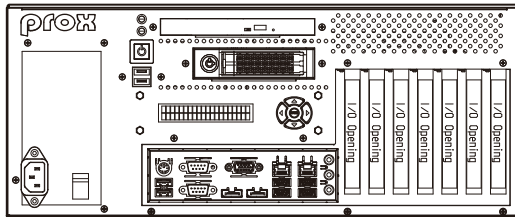


2.2.2 Rear View

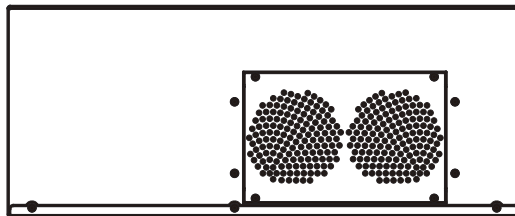

2.2.3 Side View

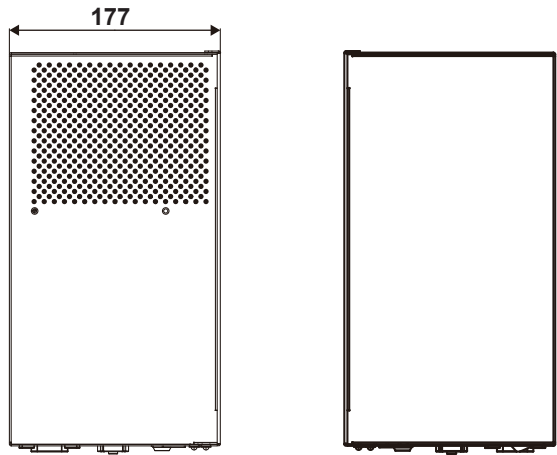

2.2.4 Quarter View

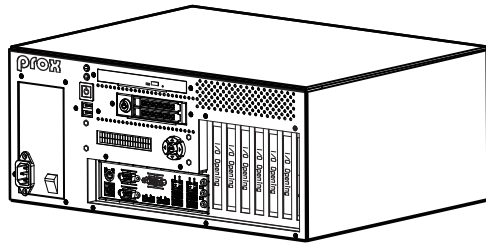

2.3 BC-2602 System Specifications

System				
CPU Support	<ul style="list-style-type: none"> ➤ LGA1151 socket for Intel® 9th / 8th Gen. Core™ i7 / i5 / i3 / Pentium® / Celeron® desktop CPU ➤ Xeon® E-2200 / E-2100 server CPU 			
CPU List	<ul style="list-style-type: none"> ➤ Xeon®: E-2278GE(GEL), E-2276GE, E-2176G, E-2124G ➤ 9th Core™: i7-9700E(TE), i5-9500E(TE), i3-9100E(TE) ➤ 8th Core™: i7-8700(T), i5-8500(T), i3-8100(T) ➤ Pentium®: G5400, G5400T ➤ Celeron®: G4900, G4900T 			
Chipset	<ul style="list-style-type: none"> ➤ Intel® C246 (supports Xeon® / Core™ / Pentium® / Celeron® CPU) ➤ Intel® Q370 / H310 (supports Core™ / Pentium® / Celeron® CPU) 			
Memory Support	<ul style="list-style-type: none"> ➤ 4 x DIMM sockets, supporting 2400/2666MHz DDR4 (up to 64GB) (C246/Q370) ➤ 2 x DIMM sockets, supporting 2400/2666MHz DDR4 (up to 32GB) (H310) ➤ Supports ECC (C246)/non-ECC (C246/Q370/H310) 			
BIOS	➤ AMI UEFI BIOS			
Power Supply	➤ ATX 500W power			
Dimensions	➤ 430 x 331.3 x 177mm (W x D x H)			
O.S. Support	➤ Windows® 10 IoT Enterprise			
Certifications	➤ CE / FCC			
I/O Ports				
SATA Interface	<ul style="list-style-type: none"> ➤ C246 and Q370 SKU: 6 x SATA III (6.0Gb/s) with RAID 0,1,5,10 ➤ H310 SKU: 4 x SATA III (6.0Gb/s) without RAID 			
USB			C246/Q370	H310
		Total (Max.)	12	10
	I/O	LAN1_USB1	2xUSB 3.1 Gen2	2xUSB 3.1 Gen1
		LAN2_USB2	2xUSB 3.1 Gen1	2xUSB 2.0
		KB_MS_USB	2xUSB 2.0	2xUSB 2.0
	Internal	USB_1	2xUSB 3.1 Gen1	2xUSB 3.1 Gen1
		USB_2	2xUSB 2.0	2xUSB 2.0
USB_3		2xUSB 2.0	N/A	

		C246/Q370	H310	
Serial Ports	Total	6	4	
	I/O, D-sub	COM1	RS232	
		COM2	RS232/422/485 selectable under BIOS	
	Internal, Pitch 2.0mm header	COM3	5V and 12V selectable by jumper	
		COM4		
		COM5	RS232	N/A
		COM6		
Parallel Port	➤ 1 x LPT connector			
LAN	➤ Dual LAN (2 x RJ45) ➤ LAN1: Intel® PHY 219LM (GbE) ➤ LAN 2: Intel® LAN 211AT (GbE) ➤ Supports Wake-On-LAN & PXE			
FAN	➤ 1 x CPU fan, 2 x system fans			
Keyboard / Mouse	➤ 1 x PS/2 Combo connector for keyboard & mouse Note: PS/2 Keyboard can work alone. If customer intends to insert PS/2 Keyboard and Mouse simultaneously, the enclosed PS/2 extension cable in the package must be used.			
Audio	➤ Mic In / Line In / Line Out			
Expansion Bus		C246/Q370	H310	
	1st slot	PCIeX16	PCIeX16	
	2nd slot	PCIeX4	N/A	
	3rd slot	PCIeX4	N/A	
	4th slot	PCIeX4	PCIeX4	
	5th slot	PCIeX1	N/A	
	6th slot	PCI	PCI	
	7th slot	PCI	PCI	
	M_PCIE1	Mini PCIe	N/A	
M.2 Slot	➤ 1 x M.2 slot, NVMe up to PCIeX4, support 2242 & 2260, Co-lay with 4th PCIe slot			
SIM Slot	➤ 1 x SIM slot, to be used together with 3G or 4G/LTE M.2 module. Support Micro SIM card			
LPC	➤ 1 x LPC pin header for TPM module			

Display	
Flexible Display	<ul style="list-style-type: none"> ➤ Standard SKU: 1 x VGA, 2 x DP ➤ C246/Q370 support triple independent display ➤ H310 supports dual independent display
VGA	➤ 1 x VGA up to 1920 x 1200 @60Hz (default)
DP	➤ 2 x DP up to 4096 x 2304 @60Hz (default)
Others	
I²C	➤ 2 x I ² C 4-pin wafer
Front Panel LED Indicator	➤ HDD LED, Power LED, Power Switch
TPM on board (option)	➤ Co-lay TPM1.2 / TPM2.0 chip (optional)
Shock	➤ 15G peak-to-peak, 11ms duration, non-operation
Vibration	➤ Non-operation: 2G, 5-200Hz, X, Y, Z axis
Environment	
Operating Temp.	➤ 0°C ~ 40°C (32°F ~ 104°F)
Storage Temp.	➤ -40°C ~ 85°C (-40°F ~ 185°F)
Operation Humidity	➤ 20%~ 90% (non-condensing)

2.4 Safety Precautions

Before operating this system, read the following information carefully to protect your systems from damages, and extend the life cycle of the system.

1. Check the Line Voltage

- The operating voltage for the power supply should be within the range of 100V to 240V AC; otherwise, the system may be damaged.

2. Environmental Conditions

- Place your BC-2602 on a sturdy, level surface. Be sure to allow enough space around the system to have easy access needs.
- Avoid installing your BC-2602 system in extremely hot or cold places.
- Avoid direct sunlight exposure for a long period of time (for example, in a closed car in summer time. Also avoid the system from any heating device.). Or do not use BC-2602 when it has been left outdoors in a cold winter day.
- Avoid moving the system rapidly from a hot place to a cold place, and vice versa, because condensation may occur inside the system.
- Protect your BC-2602 from strong vibrations which may cause hard disk failure.
- Do not place the system too close to any radio-active device. Radio-active device may cause signal interference.
- Always shut down the operating system before turning off the power.

3. Handling

- Avoid placing heavy objects on the top of the system.
- Do not turn the system upside down. This may cause the hard drive to malfunction.
- Do not allow any objects to fall into this device.
- If water or other liquid spills into the device, unplug the power cord immediately.

4. Good Care

- When the outside case gets stained, remove the stains using neutral washing agent with a dry cloth.
- Never use strong agents such as benzene and thinner to clean the surface of the case.
- If heavy stains are present, moisten a cloth with diluted neutral washing agent or alcohol and then wipe thoroughly with a dry cloth.
- If dust is accumulated on the case surface, remove it by using a special vacuum cleaner for computers.


3 **Hardware Configuration**

This chapter contains helpful information about the external I/O Ports diagram, jumper & connector settings, and component locations.

The following sections are included:

- External I/O Ports Diagram
- Jumper & Connector Quick Reference Table
- Component Locations
- Configuration and Jumper Settings
- Connector Pin Assignments

3.1 External I/O Ports Diagram

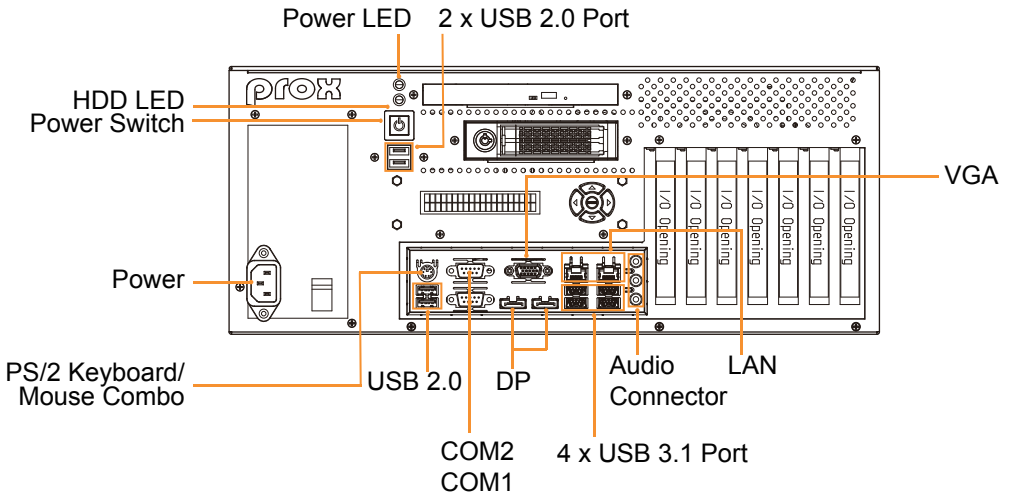

3.2 Jumper & Connector Quick Reference Table

Jumper Description	NAME
Clear CMOS Data Selection	JCMOS1
Hardware Power Failure ON Selection	JP_AT1
PCH Configuration / Recovery Selection	JP2
Flash Descriptor Override Selection	JP3
VCCIO Voltage Selection	JP6
USB Standby +5V / Normal Power Selection	JP7
COM3 Pin9 RI/5V/12V Selection	JPCOM3
COM4 Pin9 RI/5V/12V Selection	JPCOM4


Connector Description	NAME
Power Input Connectors	ATX_PWR1, ATX_PWR2
Line In, Line Out and Mic In Port	AUDIO1
COM Ports	COM1, COM2
COM Connectors (COM5 & COM6 for C246/Q370 SKU Only)	COM3, COM4, COM5, COM6
CPU / System FAN Connectors	CPU_FAN1, SYS_FAN1, SYS_FAN2
Embedded DisplayPort (EDP) Connector (For C246/Q370 SKU Only)	EDP1
Front Panel Header	JFP1
Programmable GPIO Pin Header	JDIO1
Low Pin Count (LPC) Header	JLPC1
Speaker Header	JSPK1
PS/2 + Dual USB 2.0 Ports (PS/2 Keyboard only)	KB_MS_USB
LAN + USB Connectors	LAN1_USB1, LAN2_USB2
Mini PCI Express Slot (For C246/Q370 SKU Only)	M_PCIE1
PCI Express Slots	PCI_E1, PCI_E2, PCI_E3,

Connector Description	NAME
(PCI_E2, PCI_E3, PCI_E5 For C246/Q370 SKU Only)	PCI_E4, PCI_E5
PCI Bus Slots	PCI1~PCI2
SATA Connectors (SATA5, SATA6 for C246/Q370 SKU only)	SATA1, SAT2, SATA3, SATA4, SATA5, SATA6
Universal Serial Bus 3.1 Connector	USB1
Universal Serial Bus 2.0 Connector	USB2, USB3
VGA (Video Graphics Array) Port	VGA1
DisplayPort Connectors	DP1, DP2
Parallel Port (LPT) Connector	LPT1
Front Audio Line In, Line Out and Mic In Connector	JAUDIO1
Case Open Header	JP5
I2C Wafers	JI2C1, JI2C2
M.2 M-Key Slot	M2_SSD
NMI Header	JNMI1
Flash BIOS Header	JSPI_1
APS Header	JAPS1
Micro SIM Card Socket (rear side)	SIM1

3.3 Main Board Component Locations


M/B: BA-2602

3.3.1 Top View

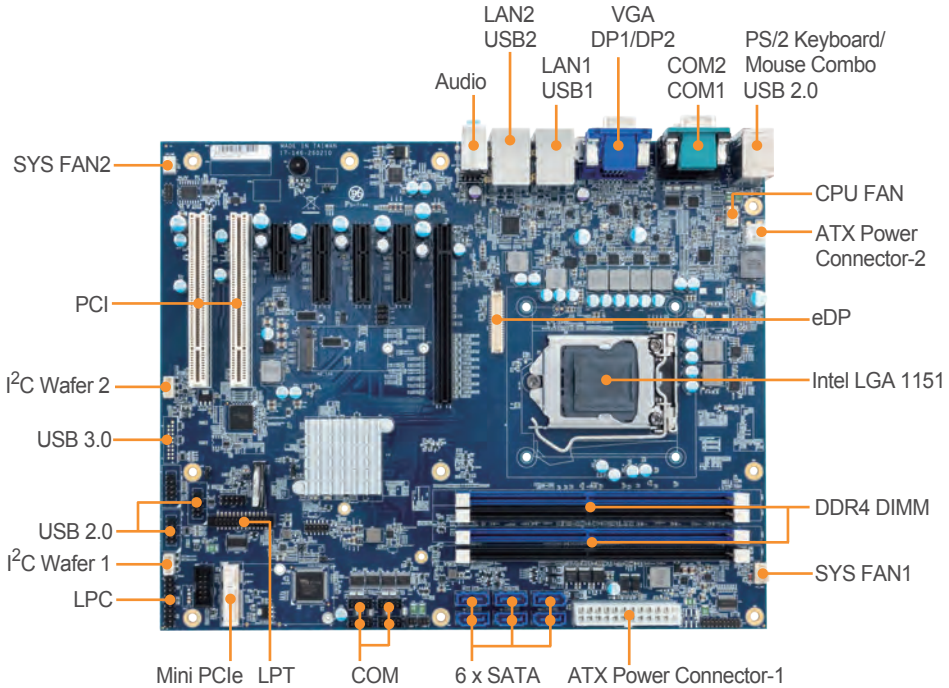


	<p>WARNING: Always disconnect the power cord when you are working with connectors and jumpers on the main board. Make sure both the system and peripheral devices are turned OFF as sudden surge of power could damage sensitive components. Make sure the board is properly grounded.</p>
	<p>CAUTION: Observe precautions while handling electrostatic sensitive components. Make sure to ground yourself to prevent static charge while you are working on the connectors and jumpers. Use a grounding wrist strap and place all electronic components in any static-shielded devices.</p>

3.3.2 Main Board Jumper Setting

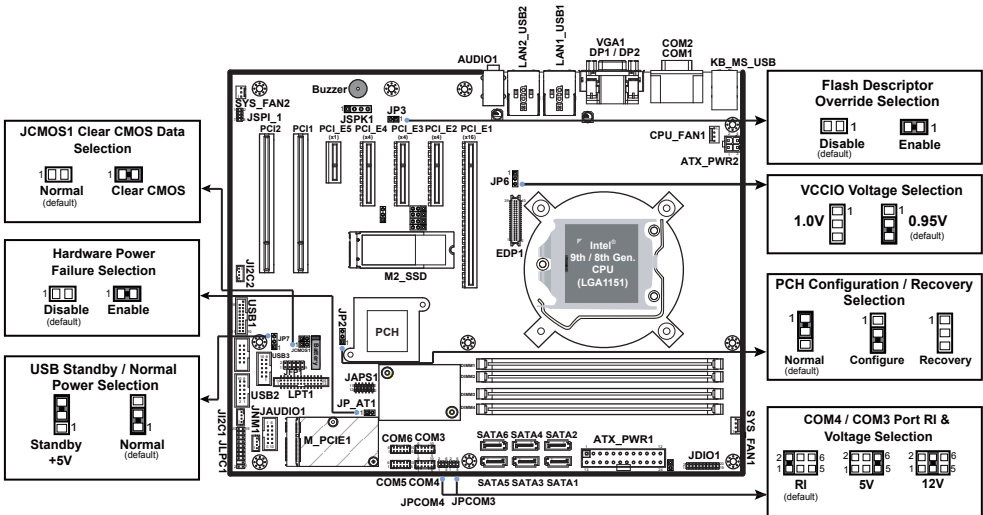


- Note 1:** COM5, COM6, EDP1, M_PCIE1, PCI_E2, PCI_E3, PCI_E5 are only supported in C246 / Q370 SKU.
- Note 2:** C246 / Q370 SKU supports USB 3.1 Gen2 on LAN1_USB1. H310 SKU supports USB 3.1 Gen1 on LAN1_USB1.
- Note 3:** C246 / Q370 SKU supports USB 3.1 Gen1 on LAN2_USB2. H310 SKU supports USB 2.0 on LAN2_USB2.
- Note 4:** C246 / Q370 SKU supports 6 SATA ports on SATA1~SATA6. H310 SKU supports 4 SATA ports on SATA1~SATA4.

3.3.3 Main Board Bottom View

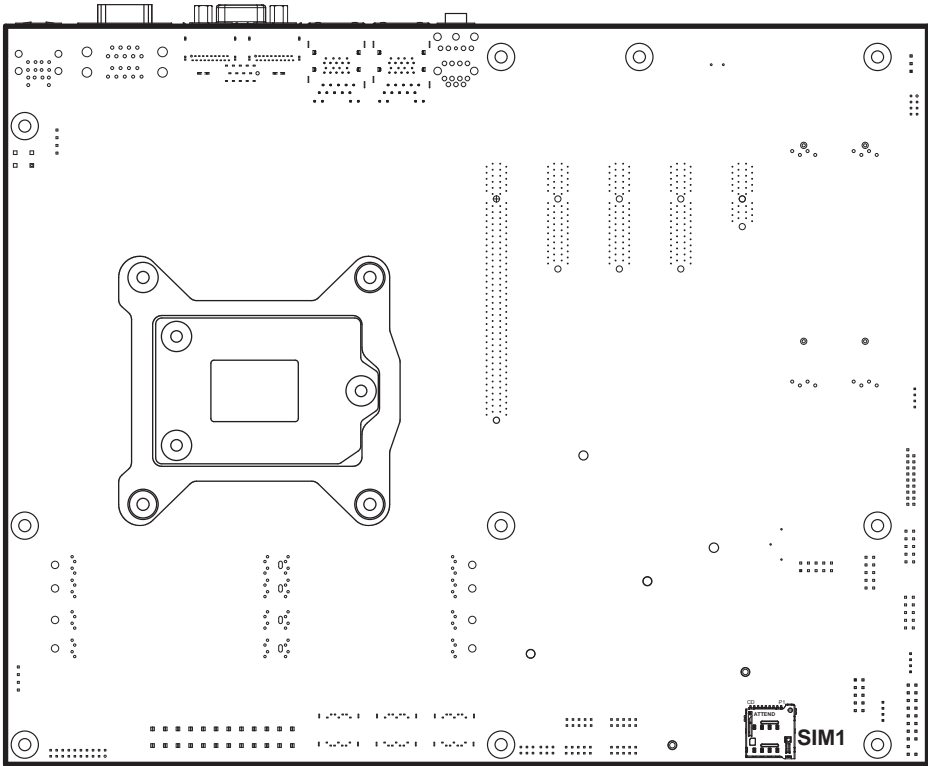

3.3.4 Main Board I/O View

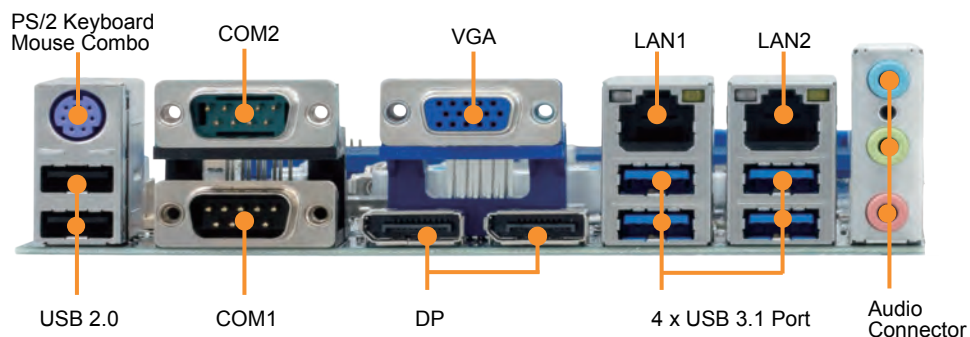


3.4 How To Set Jumpers

You can configure your board by setting jumpers. A jumper consists of two or three metal pins with a plastic base mounted on the board. By using a small plastic "cap", (also known as the jumper cap (with a metal contact inside)), you are able to connect the pins. So you can set up your hardware configuration by "opening" or "closing" pins.

The jumper can be combined into sets that are called jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks like.

JUMPERS AND CAPS

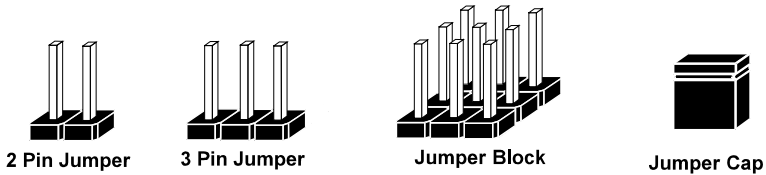


If a jumper has three pins (for examples, labeled PIN1, PIN2, and PIN3), you can connect PIN1 & PIN2 to create one setting by shorting. You can either connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below illustrates what the jumper diagrams look and what they represent.


Jumper Diagrams




Jumper Cap
looks like this

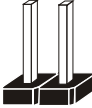


2 pin Jumper
looks like this

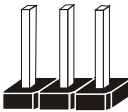

3 pin Jumper
looks like this

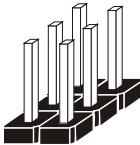

Jumper Block
looks like this

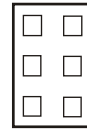


Jumper Settings



2 pin Jumper close(enabled)
Looks like this



1

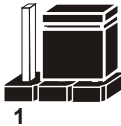


3 pin Jumper
2-3 pin close(enabled)
Looks like this



1



Jumper Block
1-2 pin close(enabled)
Looks like this

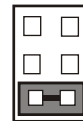

1 2


3.5 Setting Connectors and Jumpers

3.5.1 COM1 and COM2 Port (COM1, COM2)

Port Location: COM1, COM2

Description: COM1 and COM2 Connectors (Default: RS-232)

PIN	ASSIGNMENT
1	DCD
2	RX
3	TX
4	DTR#
5	GND
6	DSR#
7	RTS#
8	CTS#
9	RI#

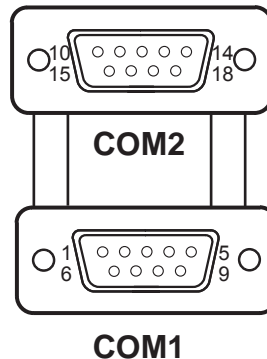

COM2: COM2 Connector, selectable as RS-232/422/485.

The pin assignments are as follows:

PIN	Signal		
	RS-232	RS-422	RS-485
10	DCD#	TX-	RS-485-
11	RX	TX+	RS-485+
12	TX	RX+	NC
13	DTR#	RX-	NC
14	GND	GND	GND
15	DSR#	NC	NC
16	RTS#	NC	NC
17	CTS#	NC	NC
18	RI#	NC	NC

Notes:


- COM2 is selectable as RS-232, RS-422, RS-485 under BIOS setting.
- Default setting is RS-232. Please see **Chapter 5 “Advanced – Super IO Configuration”** for details.

3.5.2 COM3, COM4, COM5, COM6 Connector (COM3 ~ COM6)

Connector Location: COM3, COM4, COM5, COM6

Description: COM Connector, fixed as RS-232

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	DCD#	6	DSR#
2	RX	7	RTS#
3	TX	8	CTS#
4	DTR#	9	RI#
5	GND	-	-

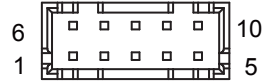

COM3/
COM4/
COM5/
COM6




Notes:

1. COM3, COM4: Pin 9 is selectable for RI, +5V or +12V by jumper setting. Default setting is RI. Please see “**COM3 and COM4 PIN9 Definition Selection Guide**” for details.
2. COM5 and COM6 are available for C246/Q370 SKU only.

3.5.3 COM3 and COM4 Pin9 Definition Selection Guide (JPCOM3, JPCOM4)

Jumper Location: JPCOM3, JPCOM4

Description: COM3 and COM4 RI & Voltage Selection

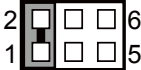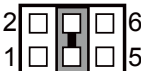Selection	Jumper Setting (Pin Closed)	Jumper Illustration
RI	1-2 <i>(Default Setting)</i>	 <p>JPCOM3/JPCOM4</p>
12V	3-4	 <p>JPCOM3/JPCOM4</p>
5V	5-6	 <p>JPCOM3/JPCOM4</p>

3.5.4 Programmable GPIO Pin Header (JDIO1)

Connector Location: JDIO1

Description: General Purpose Input / Output Pin Header

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	VCC5	2	VCC12
3	DIN0	4	DOUT0
5	DIN1	6	DOUT1
7	DIN2	8	DOUT2
9	DIN3	10	DOUT3
11	DIN4	12	DOUT4
13	DIN5	14	DOUT5
15	DIN6	16	DOUT6
17	DIN7	18	DOUT7
19	GND	20	GND



3.5.5 PS/2 Keyboard & Dual USB 2.0 Port (KB_MS_USB)

Port Location: KB_MS_USB

Description: PS/2 Keyboard Port & Dual USB 2.0 Ports


Supports mouse function on PS/2 by Y-cable.

PS/2:

PIN	ASSIGNMENT	PIN	ASSIGNMENT
9	GND	12	+5V
10	KB DATA	13	KB CLK
11	MS DATA	14	MS CLK

Dual USB 2.0:

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	5	GND
2	USB D+	6	USB D+
3	USB D-	7	USB D-
4	+5V	8	+5V

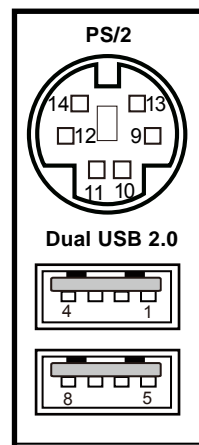


KB_MS_USB

3.5.6 DisplayPort (DP1, DP2)

Port Location: DP1, DP2

Description: DisplayPort

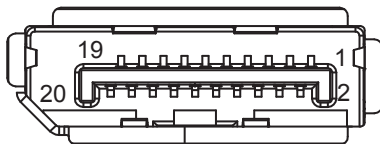

DP1 / DP2

DP1 signals:

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	DDP B P0	2	GND
3	DDP B N0	4	DDP B P1
5	GND	6	DDP B N1
7	DDP B P2	8	GND
9	DDP B N2	10	DDP B P3
11	GND	12	DDP B N3
13	DDP B AUX ENJ	14	GND
15	DDP B AUX P	16	GND
17	DDP B AUX N	18	DDP B HPD
19	GND	20	DP_PWR

DP2 signals:


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	DDP C P0	2	GND
3	DDP C N0	4	DDP C P1
5	GND	6	DDP C N1
7	DDP C P2	8	GND
9	DDP C N2	10	DDP C P3
11	GND	12	DDP C N3
13	DDP C AUX ENJ	14	GND
15	DDP C AUX P	16	GND
17	DDP C AUX N	18	DDP C HPD
19	GND	20	DP_PWR

3.5.7 VGA (Video Graphics Array) Port (VGA1)

Port Location: VGA1

Description: VGA (Video Graphics Array) Port

PIN	ASSIGNMENT
1	CRT_RED
2	CRT_GREEN
3	CRT_BLUE
4	NC
5	GND
6	NC
7	GND
8	GND
9	CRT_VCC
10	GND
11	NC
12	CRT_SDA
13	CRT_HSYNC
14	CRT_VSYNC
15	CRT_SCL





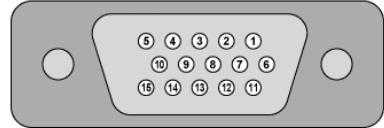


VGA1

3.5.8 Front Panel Connector (JFP1)

Connector Location: JFP1

Description: Front Panel Connector

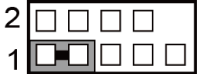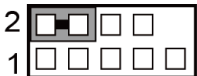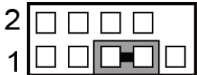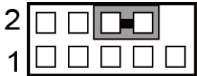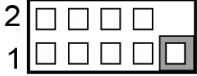SELECTION	PIN & ASSIGNMENT	JUMPER SETTINGS	JUMPER ILLUSTRATION
HDD LED	1. HDD_LED+	1-3	 <p>JFP1</p>
	3. HDD_LED-		
Power LED	2. PWR_LED+	2-4	 <p>JFP1</p>
	4. PWR_LED-		
Reset Button	5. GND	5-7	 <p>JFP1</p>
	7. RST_BTN		
Power Button	6. PWR_BTN	6-8	 <p>JFP1</p>
	8. GND		
5V	9. VCC5	9	 <p>JFP1</p>

3.5.9 LAN & USB Port (LAN1_USB1, LAN2_USB2)

Dual LAN ports are provided to support 10/100/1000Mbps, RJ45, rear I/O, and supports Wake-On-LAN & PXE.

Port Location: LAN1_USB1


Description: LAN1 & Two USB 3.1 Ports

LAN1: Intel® PHY I219-LM (10/100/1000 Mbps)

Note: C246/Q370 SKU supports USB 3.1 Gen2 on LAN1_USB1.

H310 SKU supports USB 3.1 Gen1 on LAN1_USB1.

Green/Orange Yellow

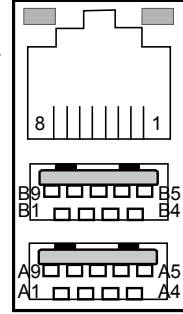

LAN1_USB1

LAN1 pin assignment:

PIN	ASSIGNMENT
1	MDI P0
2	MDI N0
3	MDI 1P
4	MDI 2P
5	MDI 2N
6	MDI 1N
7	MDI P3
8	MDI N3

LAN1 LED Indicator:

Left Side LED

Green Color On	10/100Mbps LAN Speed Indicator
Orange Color On	Giga LAN Speed Indicator
Off	No LAN Switch/HUB connected

Right Side LED

Yellow Color Blinking	LAN Message Active
Off	No LAN Message Active

USB 3.1 signals (Gen.2):

PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	VCC	A9	USB_TX_P
A2	USB D-	A8	USB_TX_N
A3	USB D+	A7	GND
A4	GND	A6	USB_RX_P
-	-	A5	USB_RX_N

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	VCC	B9	USB TX P
B2	USB D-	B8	USB TX N
B3	USB D+	B7	GND
B4	GND	B6	USB RX P
-	-	B5	USB RX N

Port Location: LAN2_USB2

Description: LAN2 & Two USB 3.1 Ports


LAN2: Intel® PHY I211-AT (10/100/1000 Mbps)

Note: C246/Q370 SKU supports USB 3.1 Gen1 on LAN2_USB2.
H310 SKU supports USB 2.0 on LAN2_USB2.

Green/Orange Yellow

LAN2 Pin Assignment:

PIN	ASSIGNMENT
1	MDI_P0
2	MDI_N0
3	MDI_1P
4	MDI_2P
5	MDI_2N
6	MDI_1N
7	MDI_P3
8	MDI_N3

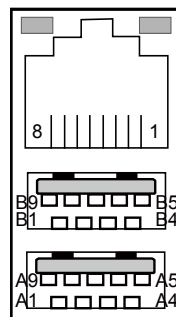

LAN2_USB2

LAN2 LED Indicator:

Left Side LED

Green Color On	10/100Mbps LAN Speed Indicator
Orange Color On	Giga LAN Speed Indicator
Off	No LAN Switch/HUB connected

Right Side LED

Yellow Color Blinking	LAN Message Active
Off	No LAN Message Active

USB 3.1 signals (Gen.1):

PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	VCC	A9	USB TX P
A2	USB D-	A8	USB TX N
A3	USB D+	A7	GND
A4	GND	A6	USB RX P
-	-	A5	USB RX N

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	VCC	B9	USB TX P
B2	USB D-	B8	USB TX N
B3	USB D+	B7	GND
B4	GND	B6	USB RX P
-	-	B5	USB RX N

3.5.10 Line In, Line Out, Mic In Port (AUDIO1)

Port Location: AUDIO1

Description: Line In, Line Out & Microphone

Line In:


PIN	ASSIGNMENT
32	HD_LINE-IN-L
33	GND
34	GND
35	HD_LINE-IN-R

Line Out:

PIN	ASSIGNMENT
22	LINE-OUT-L
23	GND
24	GND
25	LINE-OUT-R

Mic In:

PIN	ASSIGNMENT
2	HD_MIC1-L_L
3	GND
1	GND
4	GND
5	HD_MIC1-R_L

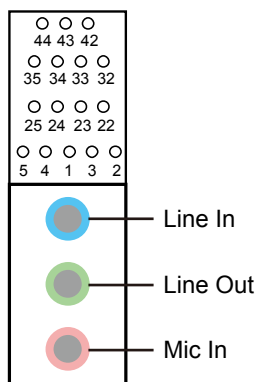


AUDIO1

3.5.11 Embedded Display Port (EDP) Connector (EDP1)

Connector Location: EDP1

Description: Embedded DisplayPort (EDP) Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	NC	2	GND
3	EDP_TX3_DN	4	EDP_TX3_DP
5	GND	6	EDP_TX2_DN
7	EDP_TX2_DP	8	GND
9	EDP_TX1_DN	10	EDP_TX1_DP
11	GND	12	EDP_TX0_DN
13	EDP_TX0_DP	14	GND
15	EDP_AUX_DP_C	16	EDP_AUX_DN_C
17	GND	18	LCDVCC
19	LCDVCC	20	LCDVCC
21	LCDVCC	22	NC
23	LCDGND	24	LCDGND
25	LCDGND	26	LCDGND
27	EDP_PANEL_HPD	28	BackLight GND
29	BackLight GND	30	BackLight GND
31	BackLight GND	32	EDP_BKLTEN
33	EDP_BKLTCTL	34	NC
35	NC	36	VCC12
37	VCC12	38	VCC12
39	VCC12	40	NC

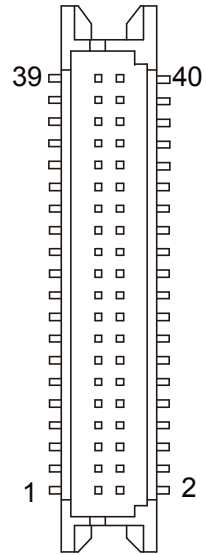

EDP1


eDP (Embedded DisplayPort) was developed to be used specifically in embedded display applications, such as Notebook and Notepad PCs. eDP is based on the VESA DisplayPort Standard. It aims to define a standardized display panel interface for internal connections; e.g., graphics cards to notebook display panels. It has advanced power-saving features including seamless refresh rate switching. It has become the new mainstream display panel interface for LCD panels with the realized higher resolution.

3.5.12 Front Panel Audio Connector (JAUDIO1)

Connector Location: JAUDIO1

Description: Front Panel Audio Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	MIC1-L	6	MIC1-R
2	GND	7	GND
3	LINE-IN-L	8	LINE-IN-R
4	GND	9	GND
5	LINE-OUT-L	10	LINE-OUT-R

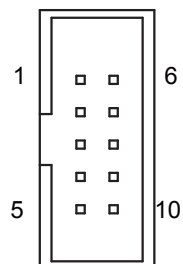



JAUDIO1

3.5.13 Hardware Power Failure Selection (JP_AT1)

Jumper Location: JP_AT1




Description: Hardware Power Failure Selection

Selection	Jumper Setting (Pin Closed)	Jumper Illustration
Enable	1-2	 1 JP_AT1
Disable	Open (Default Setting)	 1 JP_AT1

3.5.14 PCH Configuration / Recovery Selection (JP2)

Jumper Location: JP2

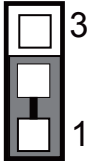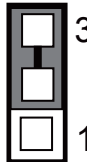

Description: PCH Configuration / Recovery Selection

Selection	Jumper Setting (Pin Closed)	Jumper Illustration
Normal	1-2 <i>(Default Setting)</i>	 <p>JP2</p>
Configure	2-3	 <p>JP2</p>
Recovery	Open	 <p>JP2</p>

3.5.15 Flash Descriptor Override Selection (JP3)

Jumper Location: JP3



Description: Flash Descriptor Override Selection

Selection	Jumper Setting (Pin Closed)	Jumper Illustration
Enable	1-2	 JP3
Disable	Open (Default Setting)	 JP3

3.5.16 VCCIO Voltage Selection (JP6)

Jumper Location: JP6



Description: VCCIO Voltage Selection

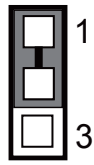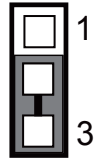Selection	Jumper Setting (Pin Closed)	Jumper Illustration
1.0V	1-2	 <p>JP6</p>
0.95V	2-3 <i>(Default Setting)</i>	 <p>JP6</p>

3.5.17 USB Standby +5V / Normal Power Selection (JP7)

Jumper Location: JP7


Description: USB Standby +5V / Normal Power Selection

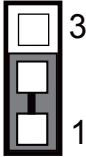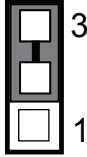Selection	Jumper Setting (Pin Closed)	Jumper Illustration
Normal	1-2 <i>(Default Setting)</i>	 <p>JP7</p>
Standby +5V	2-3	 <p>JP7</p>

3.5.18 Parallel Port (LPT) Connector (LPT1)

Connector Location: LPT1

Description: Parallel Port Connector

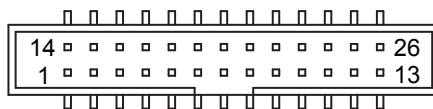

LPT1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	PRN_STRBJ_R	14	PRN_AFD
2	PRN_R_D0	15	PRN_ERRJ
3	PRN_R_D1	16	PRN_INIT
4	PRN_R_D2	17	PRN_SLIN
5	PRN_R_D3	18	GND
6	PRN_R_D4	19	GND
7	PRN_R_D5	20	GND
8	PRN_R_D6	21	GND
9	PRN_R_D7	22	GND
10	PRN_ACKJ	23	GND
11	PRN_BUSY	24	GND
12	PRN_PE	25	GND
13	PRN_SLCT	26	GND

3.5.19 I2C Wafer (JI2C1, JI2C2)


Connector Location: JI2C1, JI2C2

Description: I2C Wafer

PIN	ASSIGNMENT
1	GND
2	3.3V
3	I2C_SCL
4	I2C_SDA

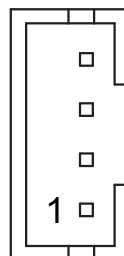

JI2C1

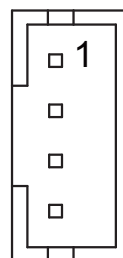

JI2C2

3.5.20 Case Open Connector (JP5)

Connector Location: JP5

Description: Case Open Connector

PIN	ASSIGNMENT
1	COPENJ
2	GND



JP5


3.5.21 Mini PCI Express Slot (For C246/Q370 Only) (M_PCIE1)

Connector Location: M_PCIE1

Description: Mini-PCI Express Slot

Note: C246 and Q370 SKUs support Mini-PCI Express Slot only.

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	WAKE_N	2	3.3V_SB
3	NC	4	GND
5	NC	6	1.5V
7	CLKREQ#	8	NC
9	GND	10	NC
11	REFCLK+	12	NC
13	REFCLK-	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	NC
21	GND	22	PERST#
23	PE_RX_N	24	3.3V_SB
25	PE_RX_P	26	GND
27	GND	28	1.5V
29	GND	30	SMB_CLK
31	PE_TX_N	32	SMB_DATA
33	PE_TX_P	34	GND
35	GND	36	USB_N
37	GND	38	USB_P
39	3.3V_SB	40	GND
41	3.3V_SB	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	1.5V
49	NC	50	GND
51	NC	52	3.3V_SB

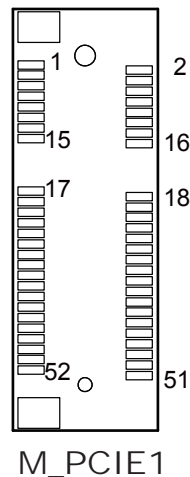


3.5.22 M.2 M-Key Slot (M2_SSD)

Connector Location: M2_SSD

Description: M.2 M-key supports PCIe x4 and M-2242/2260-sized cards.

Note: M.2 or PCI_E4 function is selectable under BIOS. (Default: PCI_E4).

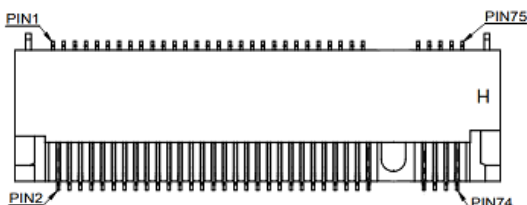

M2_SSD


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	+3.3V
3	GND	4	+3.3V
5	PCIe Lane3 RX-	6	NC
7	PCIe Lane3 RX+	8	NC
9	GND	10	NC
11	PCIe Lane3 TX-	12	+3.3V
13	PCIe Lane3 TX+	14	+3.3V
15	GND	16	+3.3V
17	PCIe Lane2 RX-	18	+3.3V
19	PCIe Lane2 RX+	20	NC
21	GND	22	NC
23	PCIe Lane2 TX-	24	NC
25	PCIe Lane2 TX+	26	NC
27	GND	28	NC
29	PCIe Lane1 RX-	30	NC
31	PCIe Lane1 RX+	32	NC
33	GND	34	NC
35	PCIe Lane1 TX-	36	NC
37	PCIe Lane1 TX+	38	NC
39	GND	40	NC
41	PCIe Lane0 RX-	42	NC
43	PCIe Lane0 RX+	44	NC
45	GND	46	NC
47	PCIe Lane0 TX-	48	NC
49	PCIe Lane0 TX+	50	PLTRST

PIN	ASSIGNMENT	PIN	ASSIGNMENT
51	GND	52	CLK REQ#
53	PCIe CLK-	54	Wake#
55	PCIe CLK+	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	NC	68	NC
69	NC	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	GND	-	-

3.5.23 PCIe Bus (PCI_E1 (x16), PCI_E2 (x4), PCI_E3 (x4), PCI_E4 (x4), PCI_E5 (x1))

Connector Location: PCI_E1

Description: 164-pin PCIe Bus (x16)

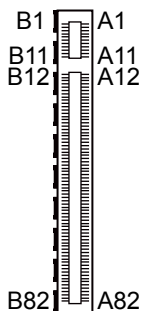

PCI_E1

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	+12V	A1	PRSNT#1
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMB_CLK	A5	NC
B6	SMB_DATA	A6	NC
B7	GND	A7	NC
B8	+3.3V	A8	NC
B9	NC	A9	+3.3V
B10	+3.3V_AUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RSVD	A12	GND
B13	GND	A13	REFCLK+
B14	HSOP0	A14	REFCLK-
B15	HSOP0	A15	GND
B16	GND	A16	HSIP0
B17	PRSNT#2	A17	HSIN0
B18	GND	A18	GND
B19	HSOP1	A19	RSVD
B20	HSOP1	A20	GND
B21	GND	A21	HSIP1
B22	GND	A22	HSIN1
B23	HSOP2	A23	GND

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B24	HSO _N 2	A24	GND
B25	GND	A25	HSIP2
B26	GND	A26	HSIN2
B27	HSOP3	A27	GND
B28	HSO _N 3	A28	GND
B29	GND	A29	HSIP3
B30	RSVD	A30	HSIN3
B31	PR _{SNT} #2	A31	GND
B32	GND	A32	RSVD
B33	HSOP4	A33	RSVD
B34	HSO _N 4	A34	GND
B35	GND	A35	HSIP4
B36	GND	A36	HSIN4
B37	HSOP5	A37	GND
B38	HSO _N 5	A38	GND
B39	GND	A39	HSIP5
B40	GND	A40	HSIN5
B41	HSOP6	A41	GND
B42	HSO _N 6	A42	GND
B43	GND	A43	HSIP6
B44	GND	A44	HSIN6
B45	HSOP7	A45	GND
B46	HSO _N 7	A46	GND
B47	GND	A47	HSIP7
B48	PR _{SNT} #2	A48	HSIN7
B49	GND	A49	GND
B50	HSOP8	A50	RSVD
B51	HSO _N 8	A51	GND
B52	GND	A52	HSIP8
B53	GND	A53	HSIN8
B54	HSOP9	A54	GND
B55	HSO _N 9	A55	GND
B56	GND	A56	HSIP9
B57	GND	A57	HSIN9
B58	HSOP10	A58	GND
B59	HSO _N 10	A59	GND
B60	GND	A60	HSIP10
B61	GND	A61	HSIN10
B62	HSOP11	A62	GND
B63	HSO _N 11	A63	GND


PIN	ASSIGNMENT	PIN	ASSIGNMENT
B64	GND	A64	HSIP11
B65	GND	A65	HSIN11
B66	HSOP12	A66	GND
B67	HSOP12	A67	GND
B68	GND	A68	HSIP12
B69	GND	A69	HSIN12
B70	HSOP13	A70	GND
B71	HSOP13	A71	GND
B72	GND	A72	HSIP13
B73	GND	A73	HSIN13
B74	HSOP14	A74	GND
B75	HSIN14	A75	GND
B76	GND	A76	HSIP14
B77	GND	A77	HSIN14
B78	HSIP15	A78	GND
B79	HSIN15	A79	GND
B80	GND	A80	HSIP15
B81	PRSNT#2	A81	HSIN15
B82	RSVD	A82	GND

Connector Location: PCI_E2 (x4)

Description: PCIe Bus (x4)

You will find the **PCI_E2** connector with 64 pins on BC-2602.

PCI_E2 (x4) is supported in C246 and Q370 SKUs only.

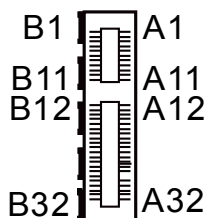

PCI_E2

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	+12V	A1	PRSNT#1
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMB_CLK	A5	NC
B6	SMB_DATA	A6	NC
B7	GND	A7	NC
B8	+3.3V	A8	NC
B9	NC	A9	+3.3V
B10	+3.3V_AUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RSVD	A12	GND
B13	GND	A13	REFCLK+
B14	HSOP0	A14	REFCLK-
B15	HSOP0	A15	GND
B16	GND	A16	HSIP0
B17	PRSNT#2	A17	HSIN0
B18	GND	A18	GND
B19	HSOP1	A19	RSVD
B20	HSOP1	A20	GND
B21	GND	A21	HSIP1
B22	GND	A22	HSIN1
B23	HSOP2	A23	GND
B24	HSOP2	A24	GND
B25	GND	A25	HSIP2


PIN	ASSIGNMENT	PIN	ASSIGNMENT
B26	GND	A26	HSIN2
B27	HSOP3	A27	GND
B28	HSON3	A28	GND
B29	GND	A29	HSIP3
B30	RSVD	A30	HSIN3
B31	PRSNT#2	A31	GND
B32	GND	A32	RSVD

Connector Location: PCI_E3 (x4)

Description: PCIe Bus (x4)

You will find the **PCI_E3** connector with 64 pins on BC-2602.

PCI_E3 (x4) is supported in C246 and Q370 SKUs only.

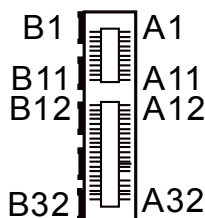

PCI_E3


PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	+12V	A1	PRSNT#1
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMB_CLK	A5	NC
B6	SMB_DATA	A6	NC
B7	GND	A7	NC
B8	+3.3V	A8	NC
B9	NC	A9	+3.3V
B10	+3.3V_AUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RSVD	A12	GND
B13	GND	A13	REFCLK+
B14	HSOP0	A14	REFCLK-
B15	HSO0	A15	GND
B16	GND	A16	HSIP0
B17	PRSNT#2	A17	HSIN0
B18	GND	A18	GND
B19	HSOP1	A19	RSVD
B20	HSO1	A20	GND
B21	GND	A21	HSIP1
B22	GND	A22	HSIN1
B23	HSOP2	A23	GND
B24	HSO2	A24	GND
B25	GND	A25	HSIP2

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B26	GND	A26	HSIN2
B27	HSOP3	A27	GND
B28	HSOP3	A28	GND
B29	GND	A29	HSIP3
B30	RSVD	A30	HSIN3
B31	PRSNT#2	A31	GND
B32	GND	A32	RSVD

Connector Location: PCI_E4 (x4)

Description: PCIe Bus (x4)

You will find the **PCI_E4** connector with 64 pins on BC-2602.

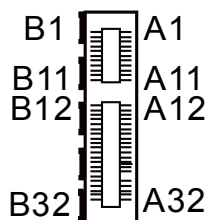

PCI_E4

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	+12V	A1	PRSNT#1
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMB_CLK	A5	NC
B6	SMB_DATA	A6	NC
B7	GND	A7	NC
B8	+3.3V	A8	NC
B9	NC	A9	+3.3V
B10	+3.3V_AUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RSVD	A12	GND
B13	GND	A13	REFCLK+
B14	HSOP0	A14	REFCLK-
B15	HSO0	A15	GND
B16	GND	A16	HSIP0
B17	PRSNT#2	A17	HSIN0
B18	GND	A18	GND
B19	HSOP1	A19	RSVD
B20	HSO1	A20	GND
B21	GND	A21	HSIP1
B22	GND	A22	HSIN1
B23	HSOP2	A23	GND
B24	HSO2	A24	GND
B25	GND	A25	HSIP2
B26	GND	A26	HSIN2


PIN	ASSIGNMENT	PIN	ASSIGNMENT
B27	HSOP3	A27	GND
B28	HSO3	A28	GND
B29	GND	A29	HSIP3
B30	RSVD	A30	HSIN3
B31	PRSNT#2	A31	GND
B32	GND	A32	RSVD

Connector Location: PCI_E5 (x1)

Description: PCIe Bus (x1)


You will find the **PCI_E5** connector with 36 pins on BC-2602.

PCI_E5 (x1) is supported in C246 and Q370 SKUs only.

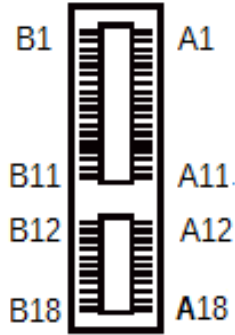

PCI_E5

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	+12V	A1	PRSNT#1
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMB_CLK	A5	NC
B6	SMB_DATA	A6	NC
B7	GND	A7	NC
B8	+3.3V	A8	NC
B9	NC	A9	+3.3V
B10	+3.3V_AUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RSVD	A12	GND
B13	GND	A13	REFCLK+
B14	HSOP0	A14	REFCLK-
B15	HSO0	A15	GND
B16	GND	A16	HSIP0
B17	PRSNT#2	A17	HSIN0
B18	GND	A18	GND

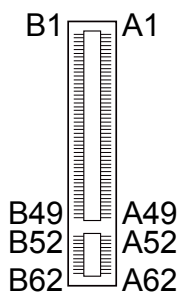3.5.24 PCI Bus Slot (PCI1, PCI2)**Connector Location: PCI1, PCI2****Description: 124-pin PCI Bus Slot****PCI1 / PCI2**

PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	-12V	A1	TRST#
B2	TCK	A2	+12V
B3	GND	A3	TMS
B4	TDO	A4	TDI
B5	+5V	A5	+5V
B6	+5V	A6	INTA#
B7	INTB#	A7	INTC#
B8	INTD#	A8	+5V
B9	RSV	A9	RSV
B10	RSV	A10	+5V
B11	RSV	A11	RSV
B12	GND	A12	GND
B13	GND	A13	GND
B14	RSV	A14	RSV
B15	GND	A15	RST#
B16	CLK	A16	+5V
B17	GND	A17	GNT#
B18	REQ#	A18	GND
B19	+5V	A19	RSV
B20	AD31	A20	AD30
B21	AD29	A21	+3.3V
B22	GND	A22	AD28
B23	AD27	A23	AD26
B24	AD25	A24	GND


PIN	ASSIGNMENT	PIN	ASSIGNMENT
B25	+3.3V	A25	AD24
B26	C/BE3#	A26	IDSEL
B27	AD23	A27	+3.3V
B28	GND	A28	AD22
B29	AD21	A29	AD20
B30	AD19	A30	GND
B31	+3.3V	A31	AD18
B32	AD17	A32	AD16
B33	C/BE2#	A33	+3.3V
B34	GND	A34	FRAME#
B35	IRDY#	A35	GND
B36	+3.3V	A36	TRDY#
B37	DEVSEL#	A37	GND
B38	GND	A38	STOP#
B39	LOCK#	A39	+3.3V
B40	PERR#	A40	SDONE
B41	+3.3V	A41	SB0#
B42	SERR#	A42	GND
B43	+3.3V	A43	PAR
B44	C/BE1#	A44	AD15
B45	AD14	A45	+3.3V
B46	GND	A46	AD13
B47	AD12	A47	AD11
B48	AD10	A48	GND
B49	GND	A49	AD09
B50	-	A50	-
B51	-	A51	-
B52	AD08	A52	C/BE0#
B53	AD07	A53	+3.3V
B54	+3.3V	A54	AD06
B55	AD05	A55	AD04
B56	AD03	A56	GND
B57	GND	A57	AD02
B58	AD01	A58	AD00
B59	+5V	A59	+5V
B60	ACK64#	A60	REQ64#
B61	+5V	A61	+5V
B62	+5V	A62	+5V

3.5.25 CPU / System Fan Connector (CPU_FAN1, SYS_FAN1, SYS_FAN2)


Connector Location: CPU_FAN1, SYS_FAN1

Description: CPU Fan Connector (CPU_FAN1),
System Fan Connector 1 (SYS_FAN1)

PIN	ASSIGNMENT
1	GND
2	+12V
3	CPU_FANTAC
4	CPU_FANCTRL

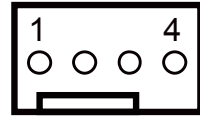

CPU_FAN1

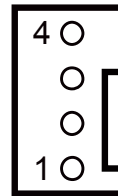


SYS_FAN1

Connector Location: SYS_FAN2

Description: System Fan Connector 2

PIN	ASSIGNMENT
3	NC
2	+12V
1	GND

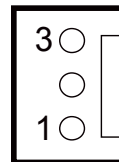

SYS_FAN2


3.5.26 Serial ATA (SATA) Connector (SATA1 ~ SATA6)

Connector Location: SATA1, SATA2, SATA3, SATA4, SATA5, SATA6

Description: SATA Connectors

SATA1 Pin Assignment:


PIN	ASSIGNMENT
1	GND
2	SATA_TXP0
3	SATA_TXN0
4	GND
5	SATA_RXN0
6	SATA_RXP0
7	GND

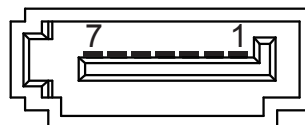

SATA1/
SATA3/
SATA5

SATA2 Pin Assignment:

PIN	ASSIGNMENT
1	GND
2	SATA_TXP1
3	SATA_TXN1
4	GND
5	SATA_RXN1
6	SATA_RXP1
7	GND

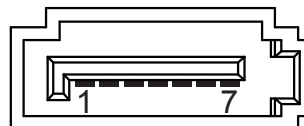

SATA2/
SATA4/
SATA6

SATA3 Pin Assignment:

PIN	ASSIGNMENT
1	GND
2	SATA_TXP2
3	SATA_TXN2
4	GND
5	SATA_RXN2
6	SATA_RXP2
7	GND

SATA4 Pin Assignment:

PIN	ASSIGNMENT
1	GND
2	SATA_TXP3
3	SATA_TXN3
4	GND
5	SATA_RXN3
6	SATA_RXP3
7	GND

SATA5 Pin Assignment:

PIN	ASSIGNMENT
1	GND
2	SATA_TXP4
3	SATA_TXN4
4	GND
5	SATA_RXN4
6	SATA_RXP4
7	GND

SATA6 Pin Assignment:

PIN	ASSIGNMENT
1	GND
2	SATA_TXP5
3	SATA_TXN5
4	GND
5	SATA_RXN5
6	SATA_RXP5
7	GND

Notes:


1. C246 SKU supports SATA1~SATA6.
2. Q370 SKU supports SATA1~SATA6.
3. H310 SKU supports SATA1~SATA4.

3.5.27 Internal USB 3.1 Connector (USB1)

Connector Location: USB1

Description: Internal USB 3.1 Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+5V	11	USB D+
2	USB RX N	12	USB D-
3	USB RX P	13	GND
4	GND	14	USB TX P
5	USB TX N	15	USB TX N
6	USB TX P	16	GND
7	GND	17	USB RX P
8	USB D-	18	USB RX N
9	USB D+	19	+5V
10	GND	-	-

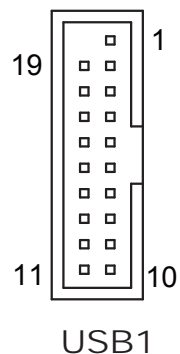


3.5.28 Internal USB 2.0 Connector (USB2, USB3, USB4)

Connector Location: USB2, USB3, USB4

Description: Internal USB 2.0 Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+5V	2	+5V
3	USB D-	4	USB D-
5	USB D+	6	USB D+
7	GND	8	GND
9	NC	10	GND

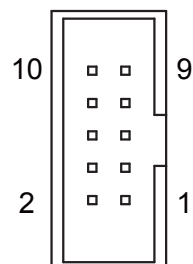

USB2/
USB3/
USB4

3.5.29 Speaker Connector (JSPK1)

Connector Location: JSPK1

Description: Speaker Connector

PIN	ASSIGNMENT
1	SPKR_VCC
2	SPKR_SIGNAL
3	SPKR_SIGNAL
4	SPKR_SIGNAL




JSPK1

3.5.30 Power Input Connector (ATX_PWR1, ATX_PWR2)

Connector Location: ATX_PWR1

Description: ATX Power Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PSON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	POK	20	-5V
9	+5V_SB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+12V	24	GND

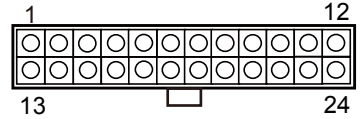


ATX_PWR1

Connector Location: ATX_PWR2

Description: Power Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
4	+12V	2	GND
3	+12V	1	GND

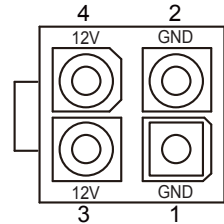


ATX_PWR2

3.5.31 Low Pin Count (LPC) Connector (JLPC1)

Connector Location: JLPC1

Description: LPC Connector

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	CLK	2	GND
3	FRAME	4	NC
5	RESET	6	VCC5
7	LAD3	8	LAD2
9	VCC3	10	LAD1
11	LAD0	12	GND
13	SMBCLK	14	SMBDATA
15	3VSB	16	SERIRQ
17	GND	18	CLK RUN
19	SUS_TAT	20	DREQ0

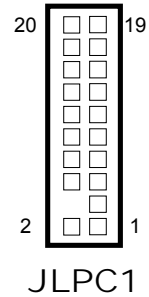



3.5.32 Clear Cmos Data Selection (JCMOS1)

Jumper Location: JCMOS1

Description: Clear CMOS Data Selection

- Step 1.** Remove the main power of the PC.
- Step 2.** Close JCMOS1 (pins 1-2) for 6 seconds by a cap.
- Step 3.** Remove the cap which is just used on JCMOS1 (1-2), so that JCMOS1 returns to “OPEN”.
- Step 4.** Power on the PC and the PC will then auto-reboot for once in order to set SoC’s register.
- Step 5.** Done!


Selection	Jumper Setting (Pin Closed)	Jumper Illustration
Normal	Open <i>(Default Setting)</i>	
Clear CMOS	1-2	

3.5.33 NMI Header (JNMI1)

Connector Location: JNMI1

Description: NMI Header

PIN	ASSIGNMENT
1	3.3V
2	GND
3	NMI
4	GND

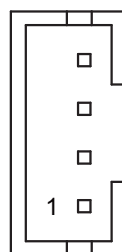


JNMI1

3.5.34 Flash Bios Header (JSPI_1)

Connector Location: JSPI_1

Description: Flash BIOS Header

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+3.3V	2	GND
3	CS#	4	SCLK
5	MISO	6	MOSI
7	HOLD#	8	WP#

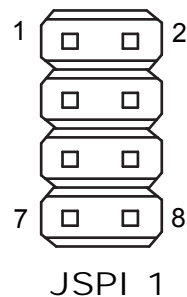


3.5.35 APS Header (JAPS1)

Connector Location: JAPS1

Description: APS Header

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+3.3V	2	+3.3V
3	SLP_S5#	4	SLP_S3#
5	SLP_A#	6	RTC_RST#
7	SLP_S4#	8	GND
9	SYS_RST#	10	Power BTN
11	GND	12	GND

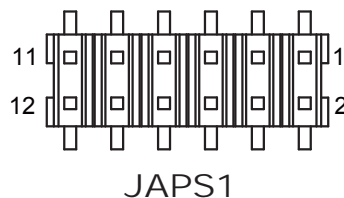


3.5.36 Micro SIM Card Socket (SIM1)

Connector Location: SIM1

Description: Micro SIM Push/Push type (located on the rear side of BC-2602)

PIN	ASSIGNMENT
P1	SIM PWR
P5	GND
P2	SIM RST
P6	SIM VPP
P3	SIM CLK
P7	SIM DATA
P4	Reserved
P8	Reserved
CD	-

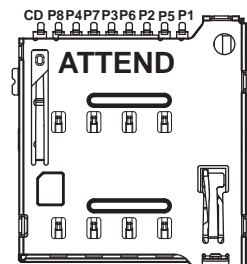

SIM1

4 Software Utilities

This chapter provides the detailed information that guides users to install driver utilities for the system. The following topics are included:

- Installing Intel® Chipset Software Installation Utility
- Installing Graphics Driver Utility
- Installing LAN Driver Utility
- Installing Sound Driver Utility
- Installing Intel® Management Engine Components Driver Installer
- Installing Intel® Rapid Storage Utility
- Installing Intel® Serial I/O Driver Utility

4.1 Introduction

Enclosed with the BC-2602 Series package is our driver utilities contained in a DVD-ROM disk. Refer to the following table for driver locations:

Filename (Assume that DVD-ROM drive is D:)	Purpose
D:\Driver\Platform\1_Main Chip\Win10(64-bit)	Intel(R) Chipset Device Software installer
D:\Driver\Platform\2_Graphics\Win10 (64-bit)	Intel(R) HD Graphics Driver installer
D:\Driver\Platform\3_Sound\Win10 (64-bit)	Realtek(R) ALC888S HD Audio Driver installer
D:\Driver\Platform\4_ME\Win10 (64-bit)\H310	Intel(R) <i>Management Engine</i> Driver installer for H310
D:\Driver\Platform\4_ME\Win10 (64-bit)\ Q370&C246	Intel(R) <i>Management Engine</i> Driver installer for Q370&C246
D:\Driver\Platform\5_LAN Chip\Win10 (64-bit)	Intel(R) LAN Driver installer
D:\Driver\Platform\6_Serial IO\Win10 (64-bit)	Intel(R) Serial IO Driver installer
D:\Driver\Platform\7_RAID\Win10 (64-bit)	Intel(R) RST Driver installer for RAID

Note: Install the driver utilities immediately after the OS installation is completed.

For more details on the installation sequence, refer to the [Readme.txt](#) file.

4.2 Installing Intel® Chipset Software Installation Utility

Introduction

The Intel® Chipset Software Installation Utility installs the Windows *.INF files to the target system. These files outline to the operating system how to configure the Intel chipset components in order to ensure that the following functions work properly:

- Core PCI and ISAPNP Services
- PCI-e Support
- SATA Storage Support
- USB Support
- Identification of Intel® Chipset Components in the Device Manager

Intel® Chipset Software Installation Utility

The utility pack is to be installed only for Windows 10 (64-bit), and it should be installed immediately after the OS installation is finished. Please follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Enter the **Main Chip** folder where the Chipset driver is located (depending on your OS platform).
- 3** Click **SetupChipset.exe** file for driver installation.
- 4** Follow the on-screen instructions to install the driver.
- 5** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

4.3 Installing Graphics Driver Utility

The Graphics interface embedded in BC-2602 can support triple displays via VGA, DP and eDP (for Q370 & C246 SKU only) interfaces and make the system work simultaneously.

To install the Graphics driver utility, follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Enter the **Graphics** folder where the driver is located (depending on your OS platform).
- 3** Click the **igxpim.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

4.4 Installing LAN Driver Utility

Enhanced with LAN function, BC-2602 supports various network adapters. To install the LAN Driver, follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Enter the **LAN** folder where the driver is located (depending on your OS platform).
- 3** Click **LAN_WIN10_64_23.5.2.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

4.5 Installing Sound Driver Utility

To install the Sound Driver, follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Open the **Sound** folder where the driver is located (depending on your OS platform).
- 3** Click the **Setup.exe** file for driver installation.
- 4** Follow the on-screen instructions to complete the installation.
- 5** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

4.6 Intel® Management Engine Components Driver Installer Installation

Installation Instructions for Intel® Management Engine Components Driver Installer

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Enter the **ME** folder where the driver is located.
- 3** Select **H310** or **Q370&C246** SKU.
- 4** Click **SetupME.exe** file for ME driver installation.
- 5** Follow the on-screen instructions to complete the installation.
- 6** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

4.7 Installing RAID Utility (Only for C246/Q370, Optional)


The Intel® Rapid Storage Technology option ROM provides the following functions:

- Pre-operating system user interface for RAID volume management
- Ability to create, delete and reset RAID volumes
- RAID recovery


Entering option ROM User Interface from BIOS Setup Utility

Follow the instructions below to enter the Intel® Rapid Storage Technology option ROM user interface:


- 1 Press to access the BIOS Setup Utility program when prompted during the Power-On Self-Test (POST).
- 2 Enter **Chipset > PCH-IO Configuration > SATA Configuration** menu screen and select “RAID” option for **SATA Controller(s)** option item. See the picture below:

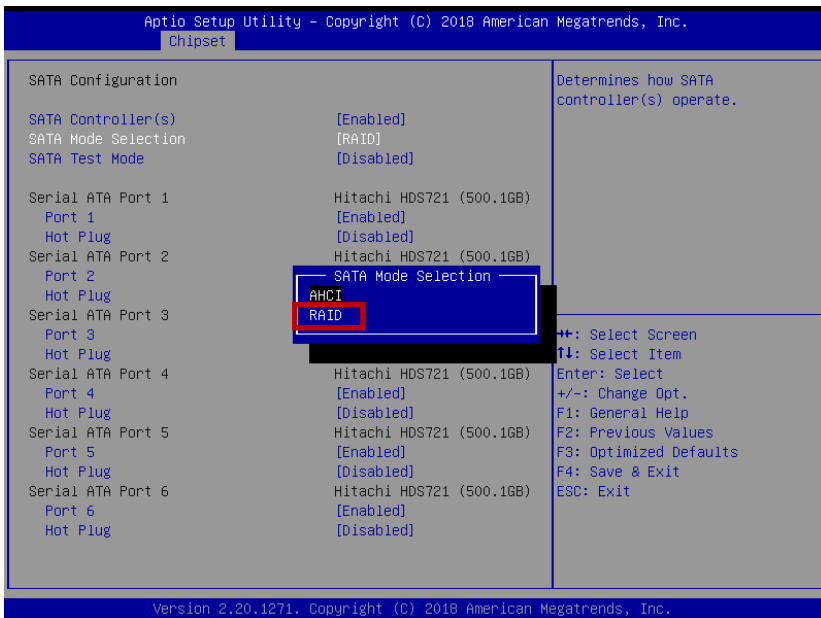


- 3 Press **F4** to save and validate the changed BIOS configuration and reset the system.
- 4 Press **** to enter the BIOS Setup Utility program again and the **Intel(R) Rapid Storage Technology** option item will display under the **Advanced** menu screen as below:

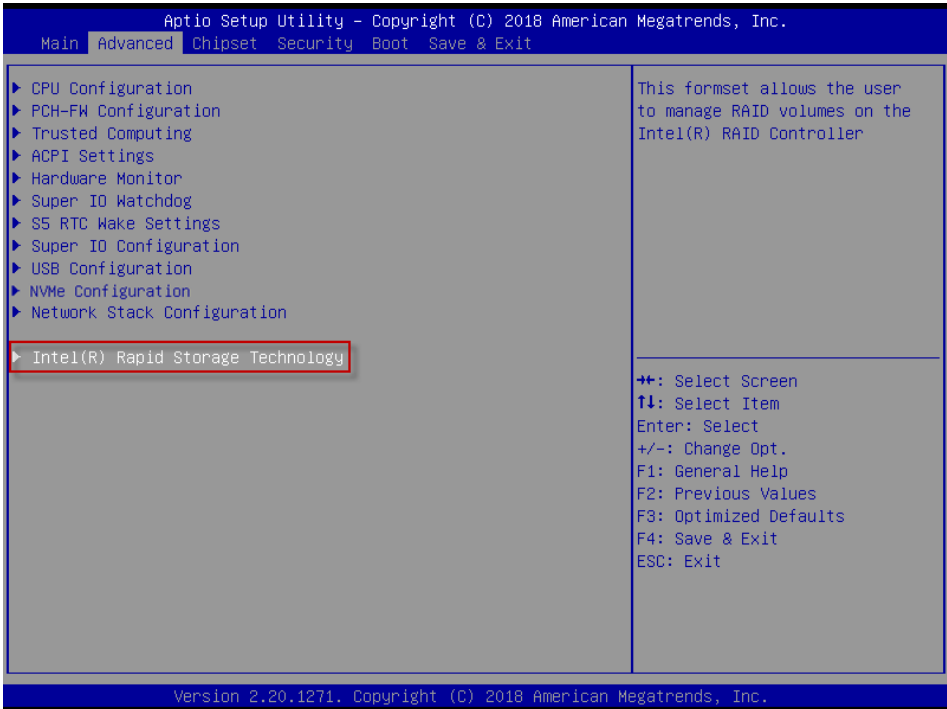

- 5 Select the **Intel(R) Rapid Storage Technology** option item and press **<Enter>**, and the following screen will display. Select a RAID level that you want to enter and press **<Enter>**.

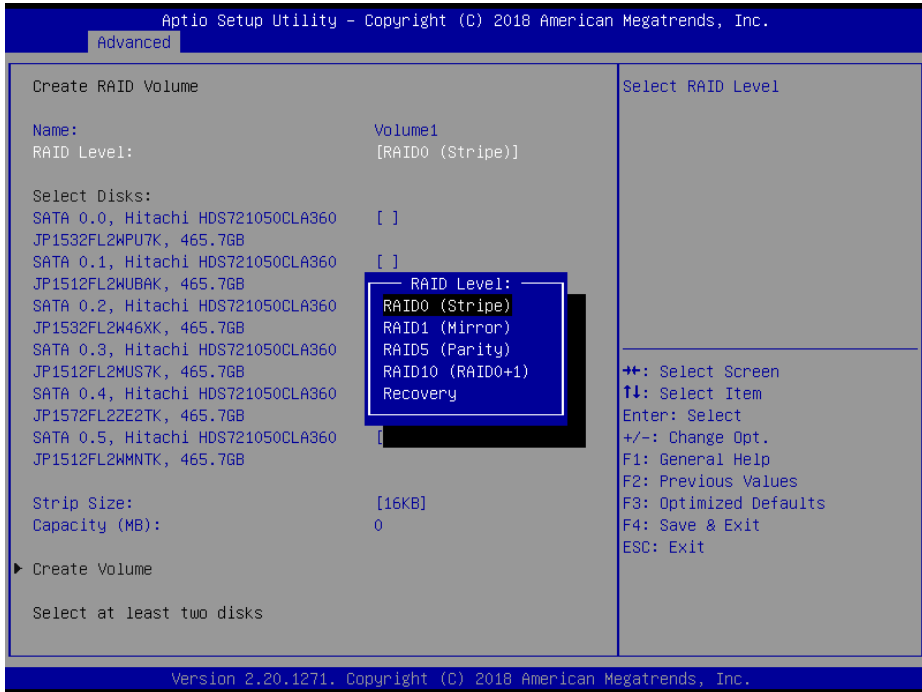

The hard drive(s) and hard drive information of the RAID level you selected in the previous step will display:

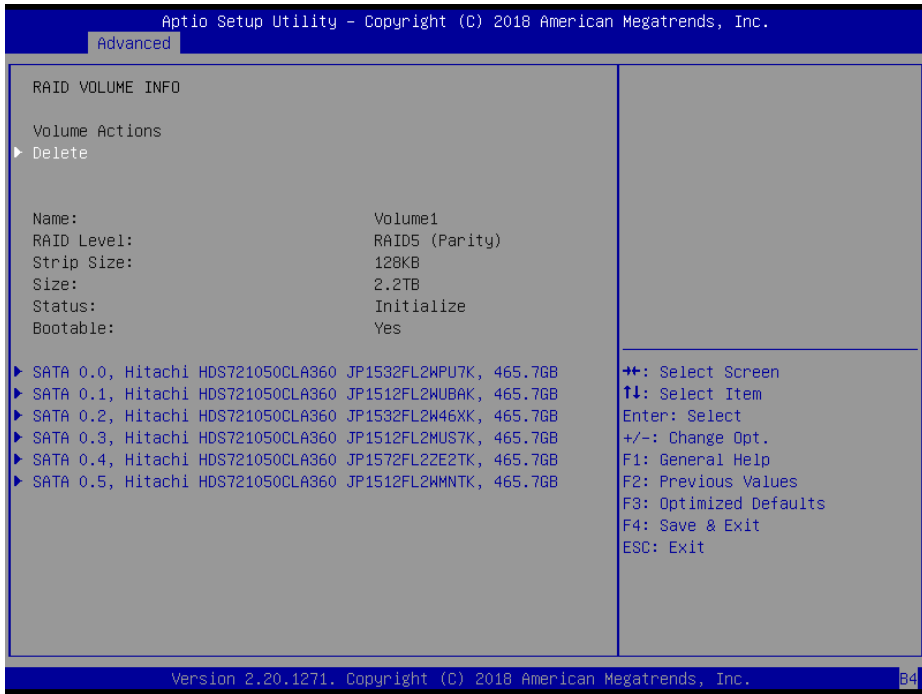

Heed that in the user interface, the hard drive(s) and hard drive information listed for your system will differ from the example above.

Installing RAID Utility (Only for C246/Q370, Optional)

The Intel[®] Rapid Storage Technology (Intel[®] RST) utility supports RAID 0, 1, 5, 10 in C246/Q370 SKU.

To install the RAID utility, follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Enter the **RAID** folder where the utility is located.
- 3** Select Windows 10 (64-bit) for your OS platform.
- 4** Click **Setup.exe** file for utility installation.
- 5** Follow the on-screen instructions to complete the installation.
- 6** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

Note: The RAID utility is not supported for H310 SKU.

4.8 Installing Intel® Serial I/O Driver Utility

To install the Serial I/O Driver, follow the steps below:

- 1** Connect the USB DVD-ROM device to BC-2602 and insert the driver disk.
- 2** Open the **Serial I/O** folder where the driver is located.
- 3** Select Windows 10 (64-bit) for your OS platform.
- 4** Click the **SetupSerialIO.exe** file for driver installation.
- 5** Follow the on-screen instructions to complete the installation.
- 6** Once the installation is completed, shut down the system and restart BC-2602 for the changes to take effect.

5 BIOS SETUP

This chapter guides users how to configure the basic system configurations via the BIOS Setup Utilities. The information of the system configuration is saved in BIOS NVRAM so that the Setup information is retained when the system is powered off. The BIOS Setup Utilities consist of the following menu items:

- Main Menu
- Advanced Menu
- Chipset Menu
- Security Menu
- Boot Menu
- Save & Exit Menu

5.1 Introduction

The BA-2602 board uses an AMI (American Megatrends Incorporated) Aptio BIOS that is stored in the Serial Peripheral Interface Flash Memory (SPI Flash) and can be updated. The SPI Flash contains the built-in BIOS setup program, Power-On Self-Test (POST), PCI auto-configuration utility, LAN EEPROM information, and Plug and Play support.

Aptio is AMI's BIOS firmware based on the UEFI (Unified Extensible Firmware Interface) specifications and the Intel Platform Innovation Framework for EFI. The UEFI specification defines an interface between the operating system and platform firmware. The interface consists of data tables that contain platform-related information, boot service calls, and runtime service calls that are available to the operating system and its loader. These elements have combined to provide a standard environment for booting the operating system and running pre-boot applications.

The diagram below shows the Extensible Firmware Interface's location in the software stack.

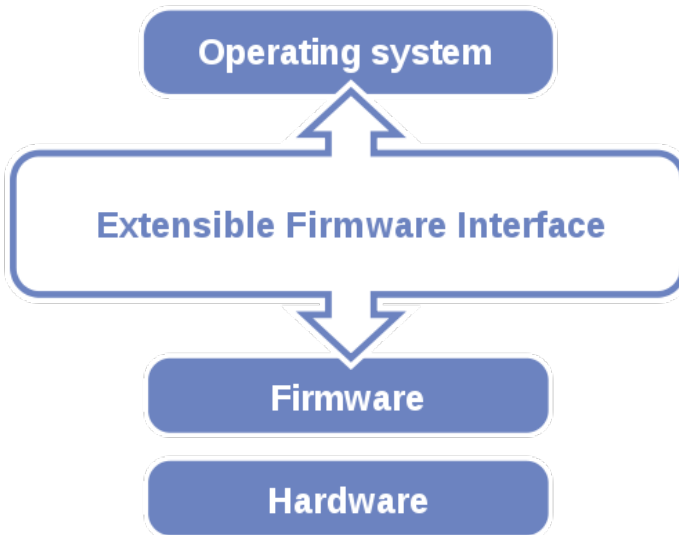


Figure 5-1. Extensible Firmware Interface Diagram

EFI BIOS provides an user interface that allows you to modify hardware configuration, e.g. change the system date and time, enable/disable a system component, determine bootable device priority, set up personal password, etc., which is convenient for engineers to perform modifications and customize the computer

system and allows technicians to troubleshoot the occurred errors when the hardware is faulty.

The BIOS setup menu allows users to view and modify the BIOS settings for the computer. After the system is powered on, users can access the BIOS setup menu by pressing or <Esc> immediately while the POST message is running before the operating system is loading.

All the menu settings are described in details in this chapter.

5.2 Accessing Setup Utility

After the system is powered on, BIOS will enter the Power-On Self-Test (POST) routines and the POST message will be displayed:



Figure 5-2. POST Screen with AMI Logo

Press or <Esc> to access the Setup Utility program and the **Main** menu of the Aptio Setup Utility will appear on the screen as below:



BIOS Setup Menu Initialization Screen

You may move the cursor by <↑> and <↓> keys to highlight the individual menu items. As you highlight each item, a brief description of the highlighted selection will appear on the right side of the screen.

The language of the BIOS setup menu interface and help messages are shown in US English. You may use <↑> or <↓> key to select among the items and press <Enter> to confirm and enter the sub-menu. The following table provides the list of the navigation keys that you can use while operating the BIOS setup menu.

BIOS Setup Navigation Key	Description
<←> and <→>	Select a different menu screen (move the cursor from the selected menu to the left or right).
<↑> and <↓>	Select a different item (move the cursor from the selected item upwards or downwards)
<Enter>	Execute the command or select the sub-menu.
<F2>	Load the previous configuration values.
<F3>	Load the default configuration values.
<F4>	Save the current values and exit the BIOS setup menu.
<Esc>	Close the sub-menu. Trigger the confirmation to exit BIOS setup menu.

5.3 Main

Menu Path *Main*

The **Main** menu allows you to view the BIOS Information and change the system date and time. Use tab to switch between date elements. Use <↑> or <↓> arrow keys to highlight the item and enter the value you want in each item. This screen also displays the BIOS version (project) and BIOS Build Date and Time.



Main Screen


BIOS Setting	Options	Description/Purpose
BIOS Vendor	No changeable options	Displays the name of the BIOS vendor.
Core Version	No changeable options	Displays the current BIOS core version.
Compliancy	No changeable options	Displays the current UEFI version.
Project Version	No changeable options	Displays the version of the BIOS currently installed on the platform.
Build Date and Time	No changeable options	Displays the date that the current BIOS version is built.
Name	No changeable options	Displays the name of the PCH.
PCH SKU	No changeable options	Displays the SKU for the PCH.
Stepping	No changeable options	Displays the stepping of the PCH.

BIOS Setting	Options	Description/Purpose
System Date	Month, day, year	Sets the system date. The format is [Day Month/ Date/ Year]. Users can directly enter values or use <+> or <-> arrow keys to increase/decrease it. The “Day” is automatically changed.
System Time	Hour, minute, second	Sets the system time. The format is [Hour: Minute: Second]. Users can directly enter values or use <+> or <-> arrow keys to increase/decrease it.

5.4 Advanced

Menu Path *Advanced*

This menu provides advanced the sub-menu items such as CPU Configuration, PCH-FW Configuration, Trusted Computing, ACPI Settings, Hardware Monitor, Super IO Watchdog, S5 RTC Wake Settings, Super IO Configuration, USB Configuration, NVMe Configuration and Network Stack Configuration.

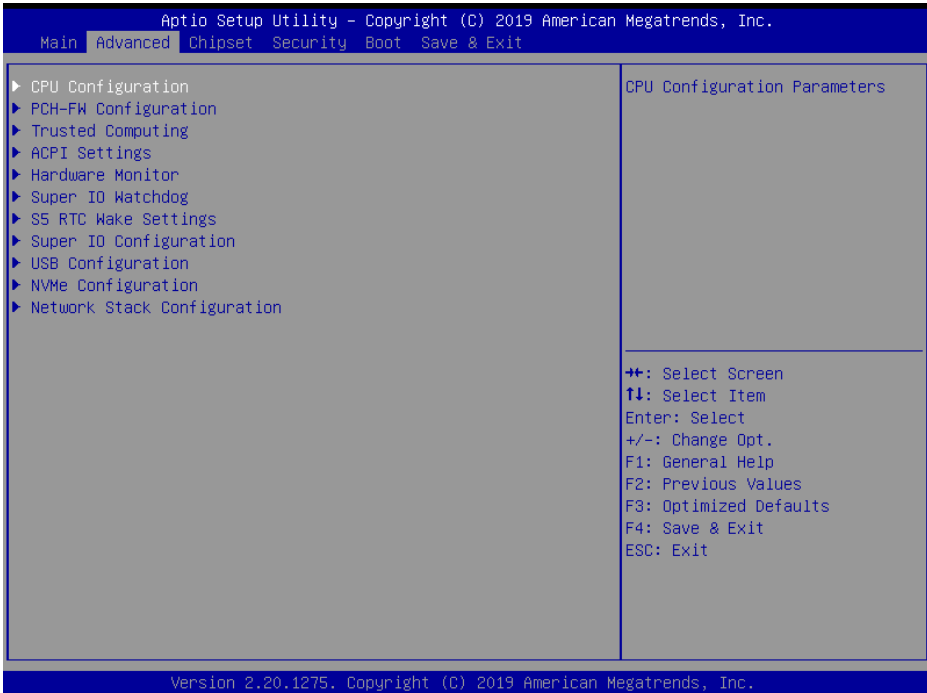


Advanced Menu Screen

BIOS Setting	Options	Description/Purpose
CPU Configuration	Sub-Menu	CPU Configuration Parameters.
PCH-FW Configuration	Sub-Menu	Management Engine Technology Parameters.
Trusted Computing	Sub-Menu	Trusted Computing Settings.
ACPI Settings	Sub-Menu	System ACPI Parameters.
Hardware Monitor	Sub-Menu	Monitors hardware status.
Super IO Watchdog	Sub-Menu	Super I/O Watchdog Parameters.
S5 RTC Wake Settings	Sub-Menu	S5 RTC Wake Parameters.
Super IO Configuration	Sub-Menu	System Super I/O Chip Parameters.
USB Configuration	Sub-Menu	USB Configuration Parameters.
NVMe Configuration	Sub-Menu	NVMe Device Options Settings.
Network Stack Configuration	Sub-Menu	Network Stack Settings.

5.4.1 Advanced – CPU Configuration

Menu Path *Advanced > CPU Configuration*

The **CPU Configuration** provides advanced CPU settings and some information about CPU.

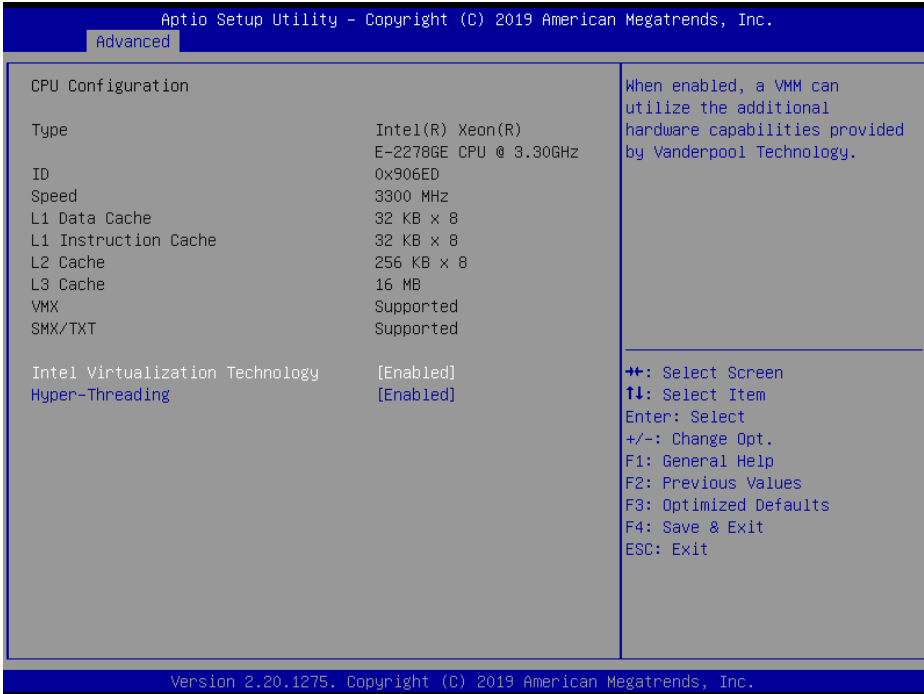

CPU Configuration Screen


BIOS Setting	Options	Description/Purpose
Type	No changeable options	Displays the CPU Type.
ID	No changeable options	Displays the CPU ID.
Speed	No changeable options	Displays the CPU Speed.
L1 Data Cache	No changeable options	L1 Data Cache Size.
L1 Instruction Cache	No changeable options	L1 Instruction Cache Size.
L2 Cache	No changeable options	L2 Cache Size.
L3 Cache	No changeable options	L3 Cache Size.
VMX	No changeable options	CPU VMX hardware support for virtual machines.
SMX (Secure Mode Extensions) / TXT	No changeable options	Secure Mode extensions support.
Intel Virtualization Technology	- Disabled - Enabled (default)	When enabled, VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

BIOS Setting	Options	Description/Purpose
Hyper-Threading	- Disabled - Enabled (default)	When Disabled, only one thread per enabled core is enabled.

5.4.2 Advanced – PCH-FW Configuration

Menu Path *Advanced > PCH-FW Configuration*

The **PCH-FW** allows users to view the information about ME (Management Engine) firmware information, such ME firmware version, firmware mode and firmware SKU.

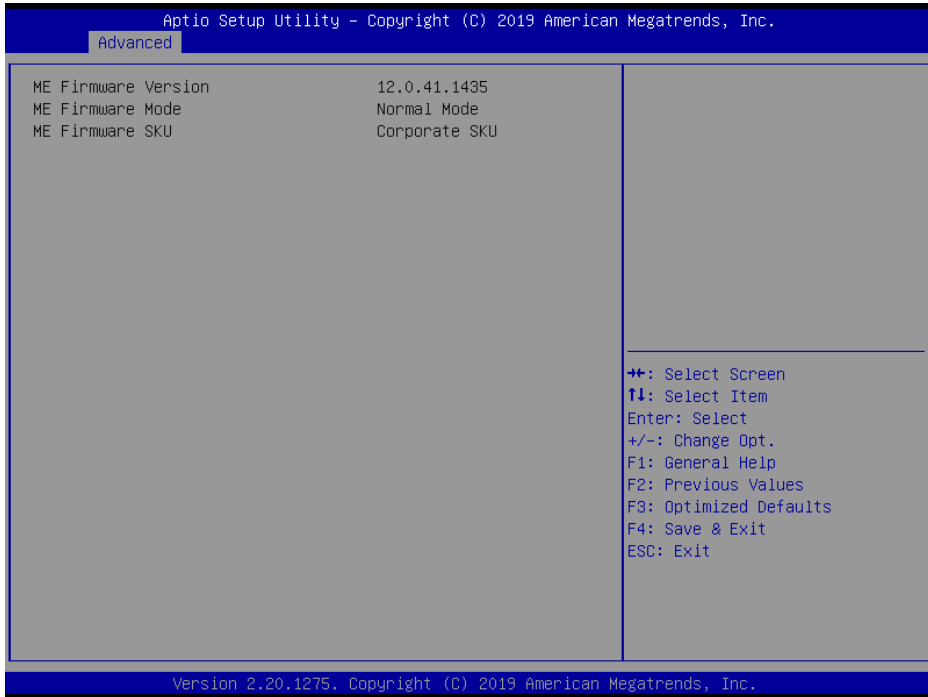


PCH-FW Configuration Screen

BIOS Setting	Options	Description/Purpose
ME Firmware Version	No changeable options	Displays the ME Firmware Version.
ME Firmware Mode	No changeable options	Displays the ME Firmware Mode.
ME Firmware SKU	No changeable options	Displays the ME Firmware SKU.

5.4.3 Advanced – Trusted Computing

Menu Path *Advanced > Trusted Computing*

The Trusted Computing allows users to enable/disable BIOS support for security device. The operating system will not show Security Device. The TCG EFI protocol and INT1A interface will not be available.

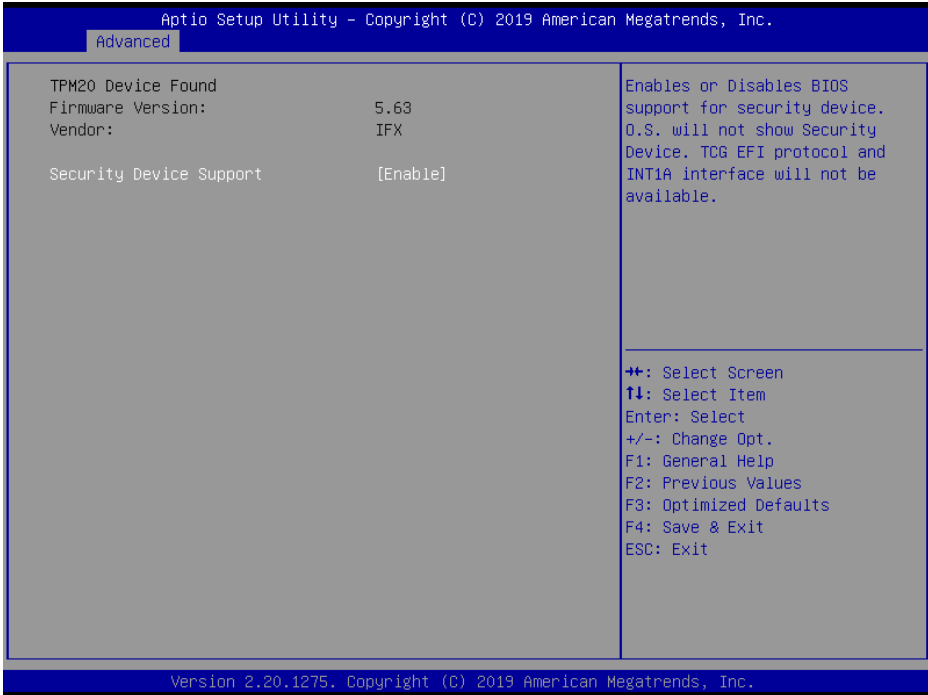


Trusted Computing Screen

BIOS Setting	Options	Description/Purpose
Firmware Version:	No changeable options	TPM firmware version.
Vendor:	No changeable options	TPM module vendor.
Security Device Support	- Enable (default) - Disable	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

5.4.4 Advanced – ACPI Settings

Menu Path *Advanced > ACPI Settings*

The **ACPI Settings** allows users to configure relevant ACPI (Advanced Configuration and Power Management Interface) settings, such as enable/disable Hibernation, ACPI Sleep State, lock legacy resources and S3 Video Repost.

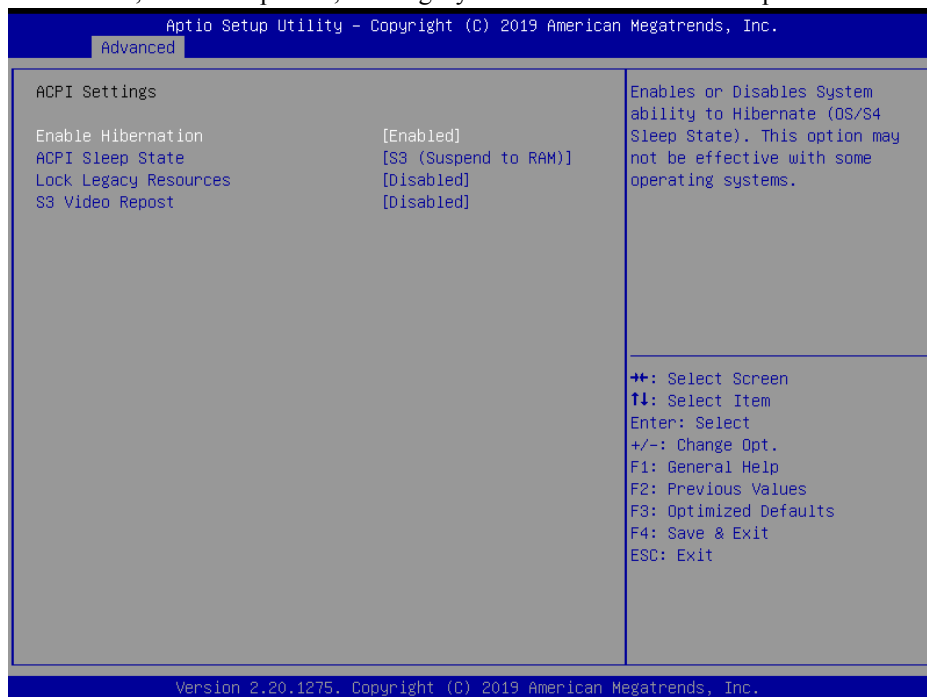


ACPI Settings Screen

BIOS Setting	Options	Description/Purpose
Enable Hibernation	- Disabled - Enabled (default)	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
ACPI Sleep State	- Suspend Disabled - S3 (Suspend to RAM) (default)	Selects the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.
Lock Legacy Resources	- Disabled (default) - Enabled	Enables or Disables Lock of Legacy Resources.
S3 Video Repost	- Disabled (default) - Enabled	Enables or Disables S3 Video Repost.

5.4.5 Advanced – Hardware Monitor

Menu Path *Advanced > Hardware Monitor*

The **Hardware Monitor** allows users to configure Smart Fan Mode for CPU fan, monitor the health and status of the system such as CPU temperature, system temperature, system fan speed and voltage levels in supply.

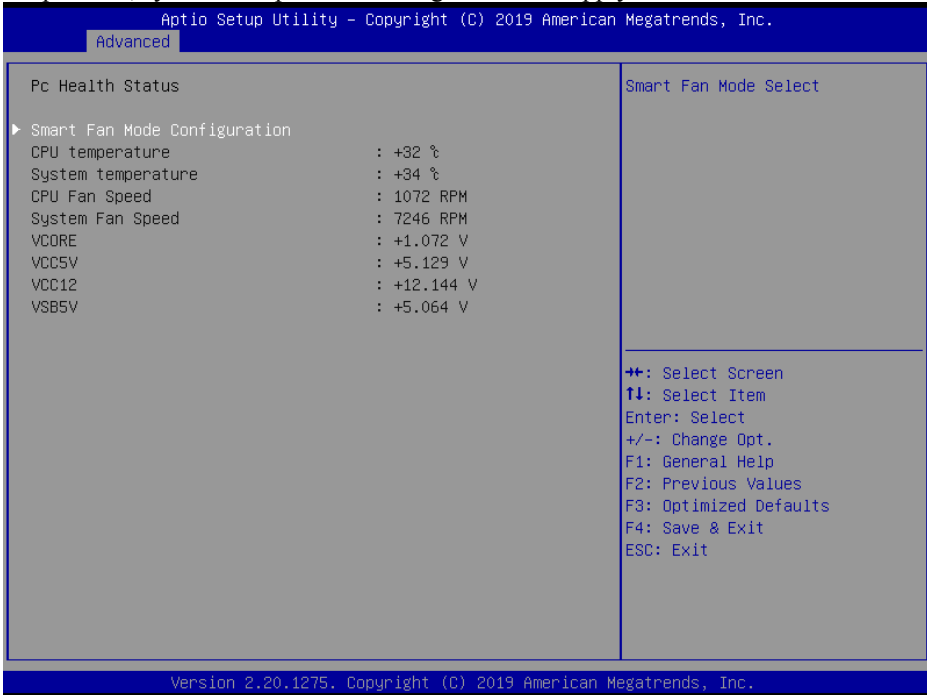


Hardware Monitor Screen

BIOS Setting	Options	Description/Purpose
Smart Fan Mode Configuration	Sub-Menu	Smart Fan Mode Selection.
CPU Temperature	No changeable options	Displays the processor's temperature.
System Temperature	No changeable options	Displays the system's temperature.
CPU Fan Speed	No changeable options	Display CPU Fan speed.
System Fan Speed	No changeable options	Display System Fan speed.
VCORE	No changeable options	Displays the voltage level of VCORE in supply.
VCC5V	No changeable options	Displays the voltage level of VCC5V in supply.
VCC12	No changeable options	Displays the voltage level of VCC12 in supply.

BIOS Setting	Options	Description/Purpose
VSB5V	No changeable options	Displays the voltage level of VSB5V in supply.

Smart Fan Mode Configuration

Menu Path *Advanced > Hardware Monitor > Smart Fan Mode Configuration*

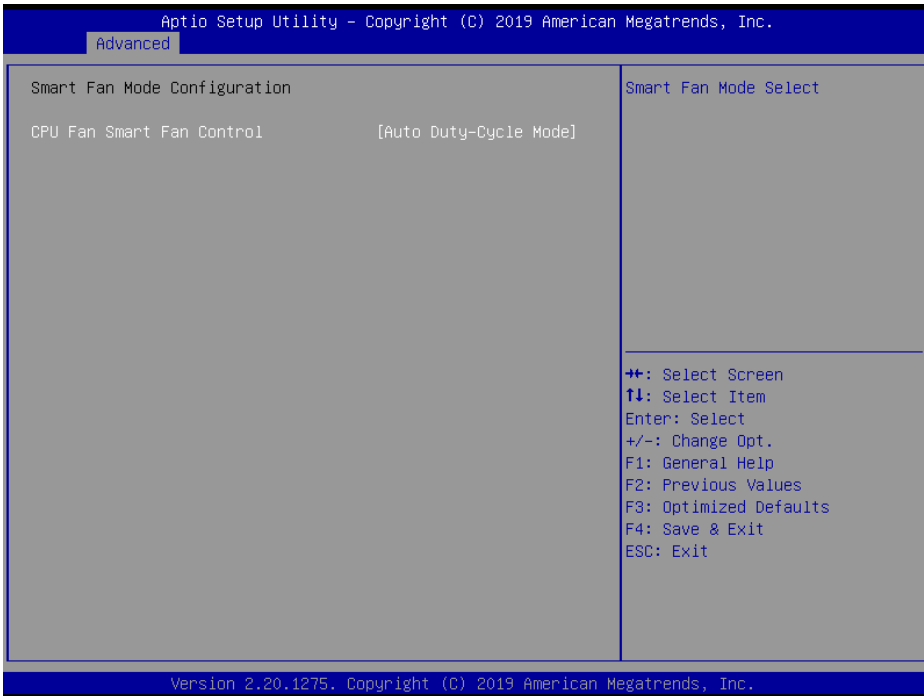


Smart Fan Mode Configuration Screen

BIOS Setting	Options	Description/Purpose
CPU Fan Smart Fan Control	- Manual Duty Mode - Auto Duty-Cycle Mode (default)	Smart Fan Mode selection for CPU Fan.
Manual Duty Mode	Numeric (from 1 to 100)	Manual mode fan control. Users can write expected duty cycle (PWM fan type) from 1 to 100.

5.4.6 Advanced – Super IO Watchdog

Menu Path *Advanced > Super IO Watchdog*

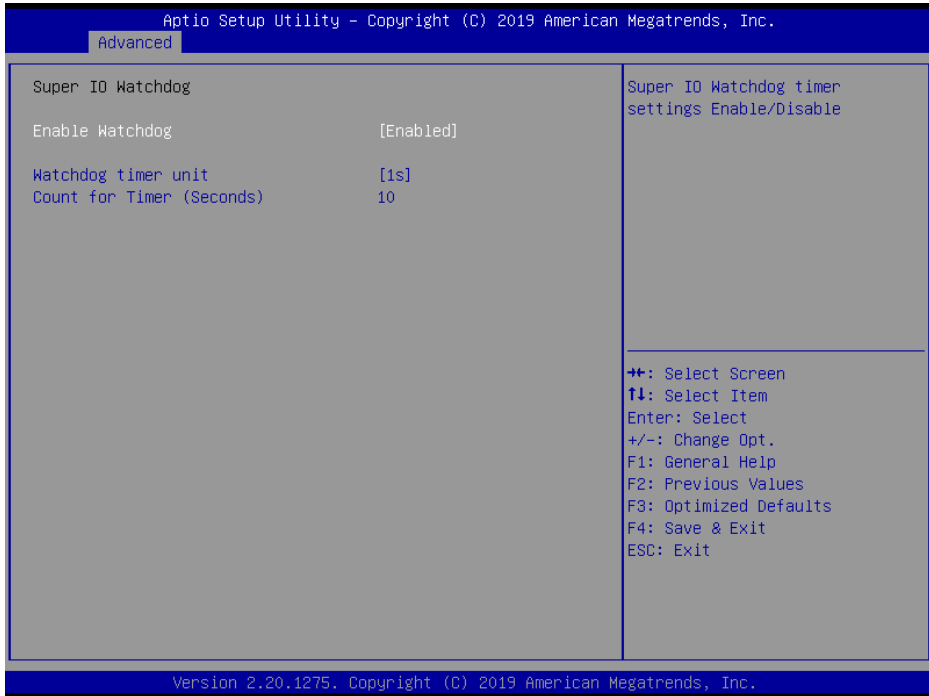


Super IO Watchdog Screen

BIOS Setting	Options	Description/Purpose
Enable Watchdog	- Enabled - Disabled (default)	Enables/Disables F81866 Watchdog timer settings.
Watchdog timer unit	- 1s (default) - 60s	Watchdog timer unit.
Count for Timer (Seconds)	Numeric (from 10 to 255)	The number of count for Timer.

5.4.7 Advanced – S5 RTC Wake Settings

Menu Path *Advanced > S5 RTC Wake Settings*

The **S5 RTC Wake Settings** enables/disables the system to wake up at a preset time of a day from S5 State using RTC alarm.

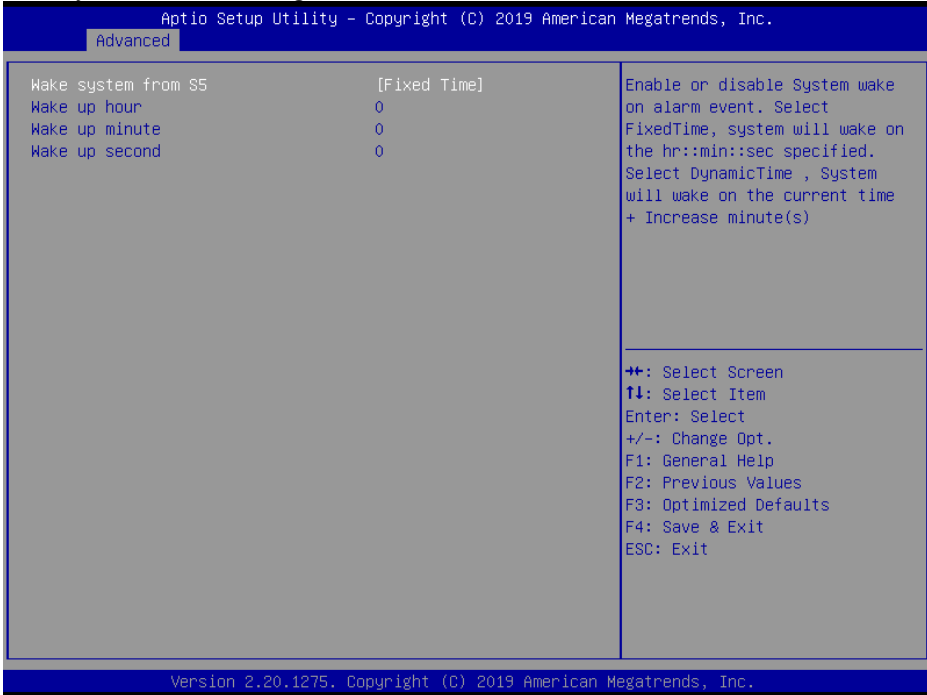


S5 RTC Wake Settings Screen

BIOS Setting	Options	Description/Purpose
Wake system from S5	- Disabled (default) - Fixed Time - Dynamic Time	Enables or disables System wake on alarm events. • Fixed Time: The system will wake on the time (hr::min::sec) specified. • Dynamic Time: The system will wake on the current time + Increase minute(s).
Wake up hour	Numeric (from 0 to 23)	Enters 0-23 to set the wake-up hour, e.g.: enters 3 for 3 a.m. and 15 for 3 p.m.
Wake up minute	Numeric (from 0 to 59)	Enters 0-59 to set the wake-up minute.
Wake up second	Numeric (from 0 to 59)	Enters 0-59 to set the wake-up second.
Wake up minute increase	Numeric (from 1 to 5)	Enters 1-5 to set the increased minute(s) for dynamic wake-up time.

5.4.8 Advanced – Super IO Configuration

Menu Path *Advanced > Super IO Configuration*

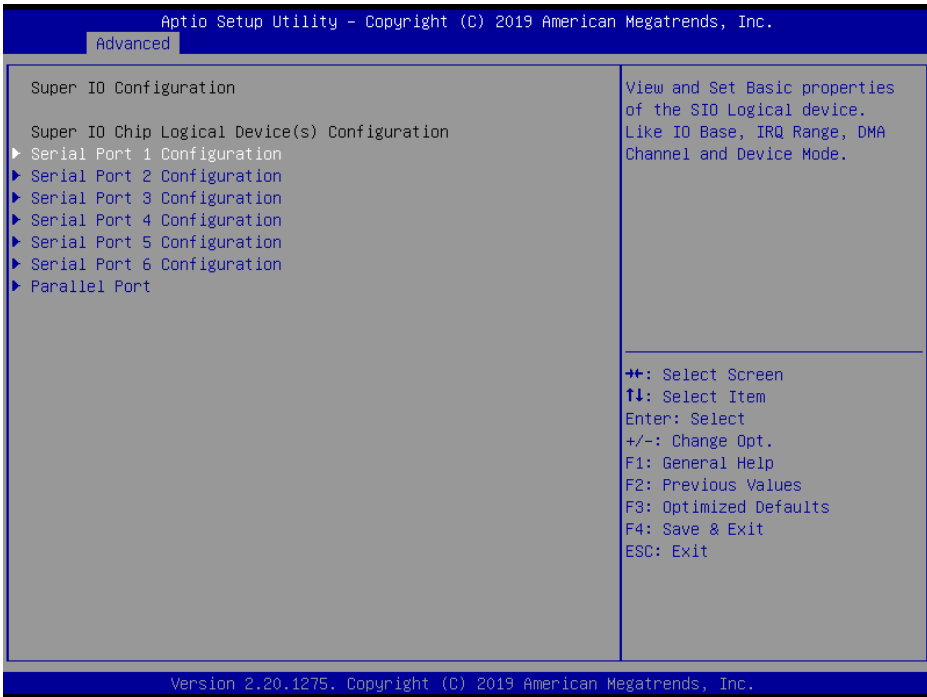


Super IO Configuration Screen

BIOS Setting	Options	Description/Purpose
Serial Port 1 Configuration	Sub-Menu	Sets Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Sub-Menu	Sets Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Sub-Menu	Sets Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Sub-Menu	Sets Parameters of Serial Port 4 (COMD).
Serial Port 5 Configuration <i>(for Q370/C246 only)</i>	Sub-Menu	Sets Parameters of Serial Port 5 (COME).
Serial Port 6 Configuration <i>(for Q370/C246 only)</i>	Sub-Menu	Sets Parameters of Serial Port 6 (COMF).
Parallel Port	Sub-Menu	Sets Parameters of Parallel Port (LPT).

Super IO Configuration – Serial Port 1 Configuration

Menu Path *Advanced > Super IO Configuration > Serial Port 1 Configuration*

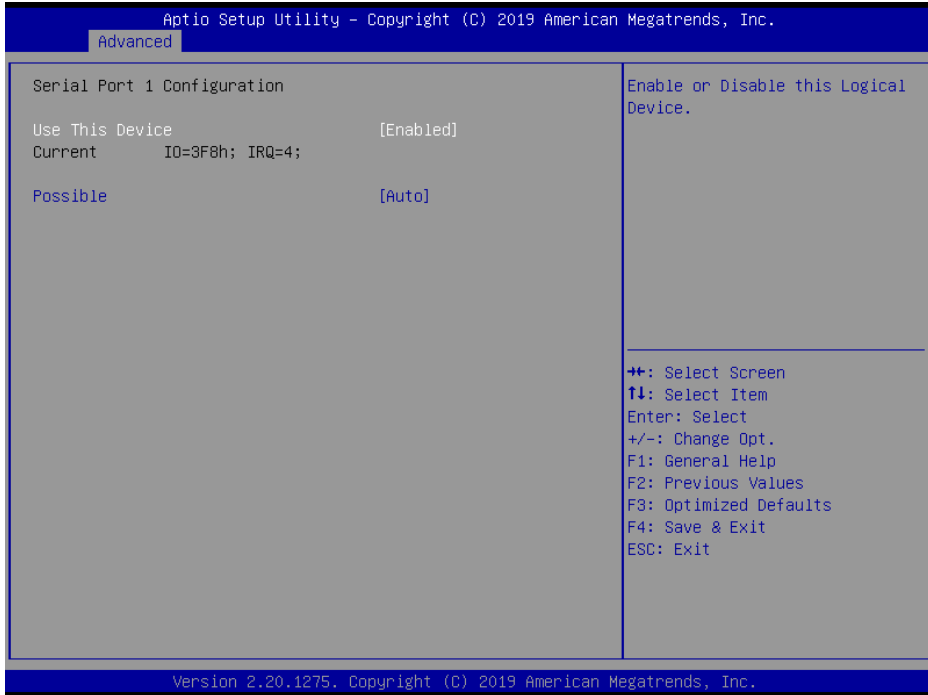


Serial Port 1 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 1.
Current	No changeable options	Displays the current settings of Serial Port 1.
Possible	- Auto (default) - IO=3F8h; IRQ=4; - IO=3F8h; IRQ=3,4,5,6,7,10,11; - IO=2F8h; IRQ=3,4,5,6,7,10,11; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 1.

Super IO Configuration – Serial Port 2 Configuration

Menu Path *Advanced > Super IO Configuration > Serial Port 2 Configuration*

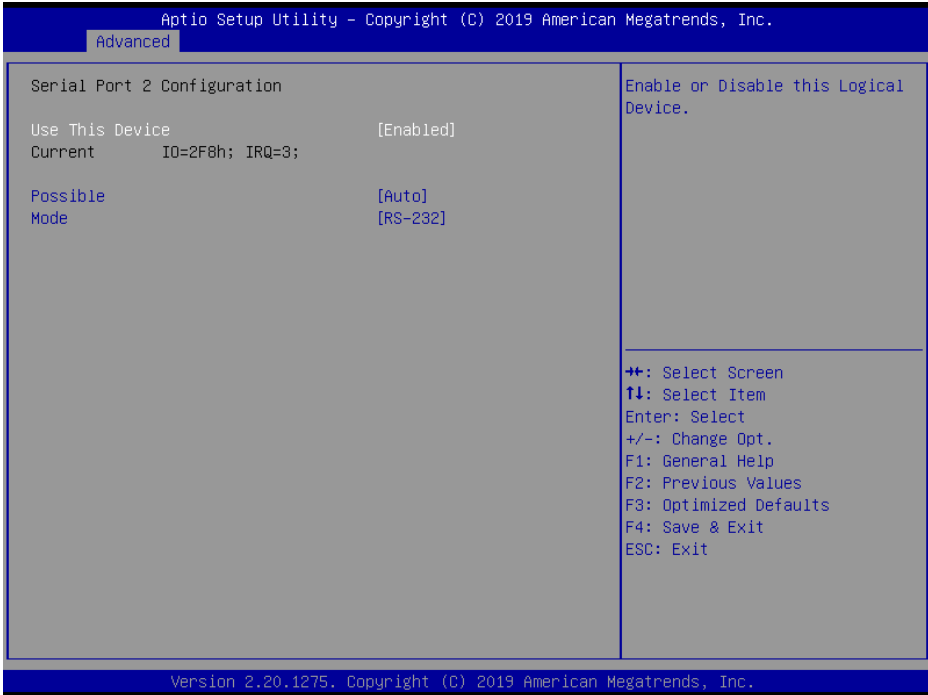


Serial Port 2 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 2.
Current	No changeable options	Displays the current settings of Serial Port 2.
Change Settings	- Auto (default) - IO=2F8h; IRQ=3; - IO=3F8h; IRQ=3,4,5,6,7,10,11; - IO=2F8h; IRQ=3,4,5,6,7,10,11; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 2.
Mode	- RS-232 (default) - RS-422 - RS-485	Selects COM2 mode.

Super IO Configuration – Serial Port 3 Configuration

Menu Path *Advanced > Super IO Configuration > Serial Port 3 Configuration*

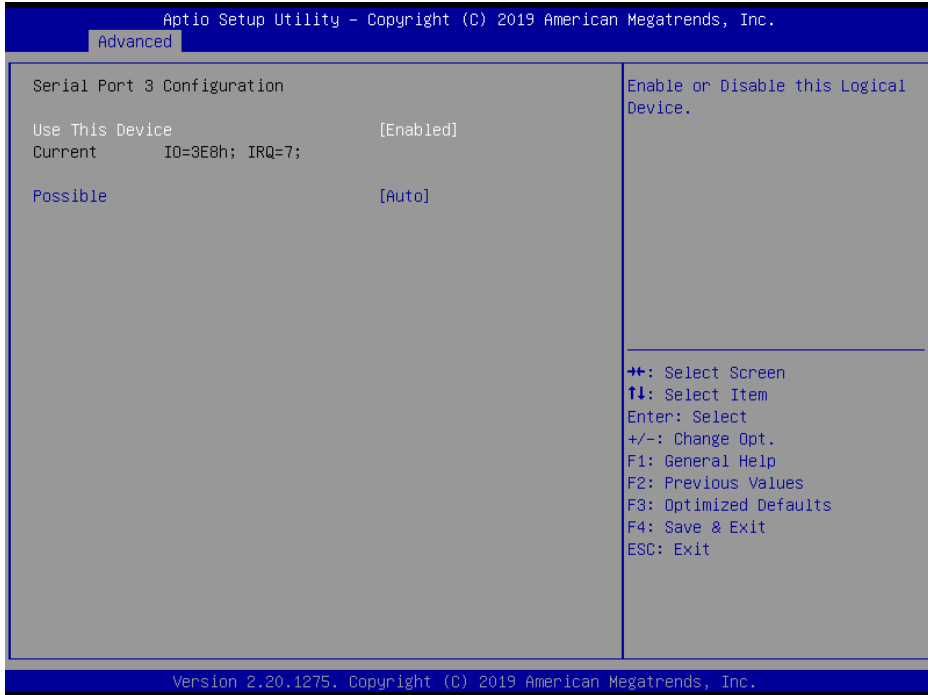


Serial Port 3 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 3.
Current	No changeable options	Displays the current settings of Serial Port 3.
Change Settings	- Auto (default) - IO=3E8h; IRQ=7; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11; - IO=2F0h; IRQ=3,4,5,6,7,10,11; - IO=2E0h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 3.

Super IO Configuration – Serial Port 4 Configuration

Menu Path *Advanced > Super IO Configuration > Serial Port 4 Configuration*

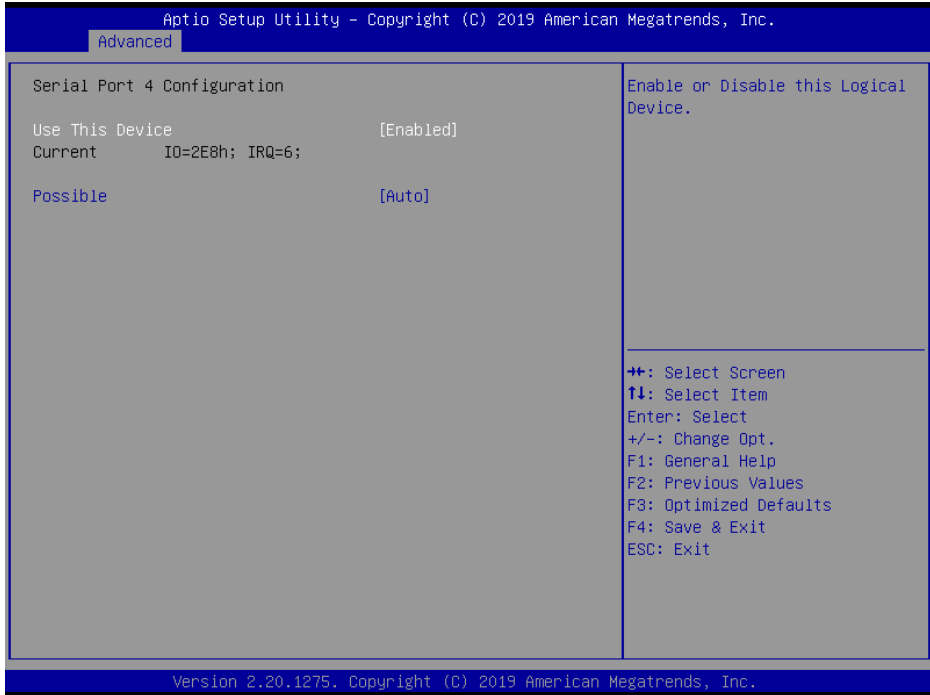


Serial Port 4 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 4.
Current	No changeable options	Displays the current settings of Serial Port 4.
Change Settings	- Auto (default) - IO=2E8h; IRQ=6; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11; - IO=2F0h; IRQ=3,4,5,6,7,10,11; - IO=2E0h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 4.

Super IO Configuration – Serial Port 5 Configuration (For Q370/C246 SKU Only)

Menu Path *Advanced > Super IO Configuration > Serial Port 5 Configuration*

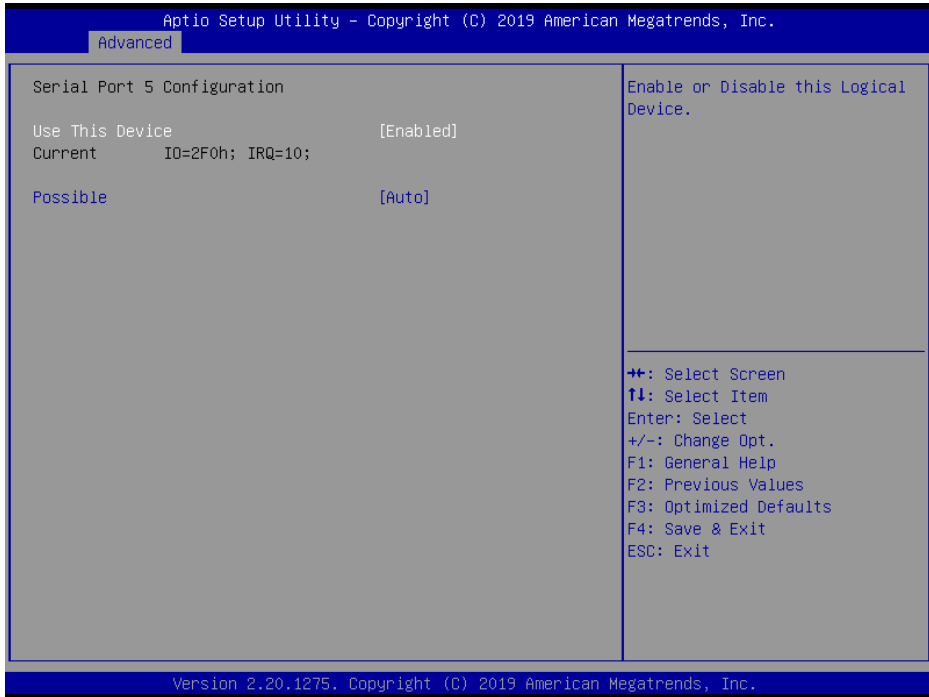


Serial Port 5 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 5.
Current	No changeable options	Displays the current settings of Serial Port 5.
Change Settings	- Auto (default) - IO=2F0h; IRQ=10; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11; - IO=2F0h; IRQ=3,4,5,6,7,10,11; - IO=2E0h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 5.

Super IO Configuration – Serial Port 6 Configuration (For Q370/C246 SKU Only)

Menu Path *Advanced > Super IO Configuration > Serial Port 6 Configuration*

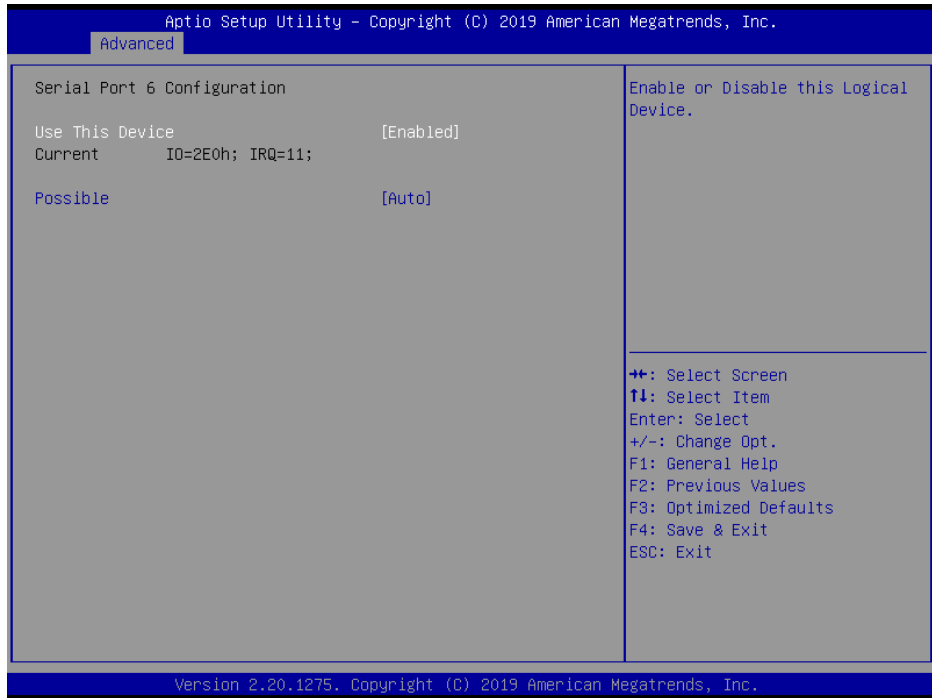


Serial Port 6 Configuration Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Serial Port 6.
Current	No changeable options	Displays the current settings of Serial Port 6.
Change Settings	- Auto (default) - IO=2E0h; IRQ=11; - IO=3E8h; IRQ=3,4,5,6,7,10,11; - IO=2E8h; IRQ=3,4,5,6,7,10,11; - IO=2F0h; IRQ=3,4,5,6,7,10,11; - IO=2E0h; IRQ=3,4,5,6,7,10,11;	Selects IRQ and I/O resource for Serial Port 6.

Super IO Configuration – Parallel Port Configuration

Menu Path *Advanced > Super IO Configuration > Parallel Port*

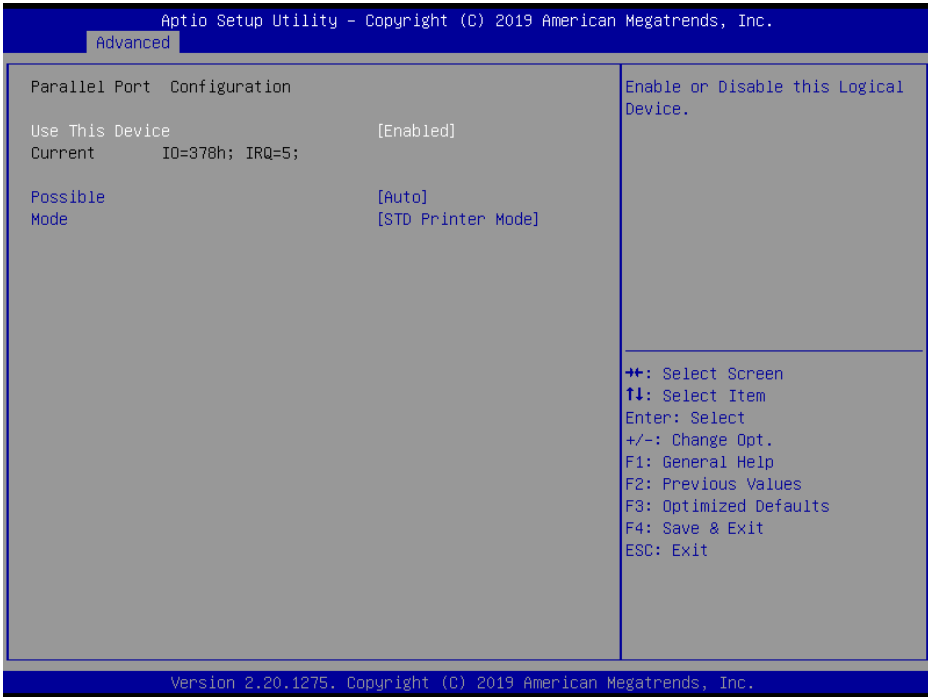


Parallel Port Screen

BIOS Setting	Options	Description/Purpose
Use This Device	- Disabled - Enabled (default)	Enables or Disables Parallel Port.
Current	No changeable options	Displays the current settings of Parallel Port.
Change Settings	- Auto (default) - IO=378h; IRQ=5; - IO=378h; IRQ=5,6,7,9,10,11,12; - IO=278h; IRQ=5,6,7,9,10,11,12; - IO=3BCh; IRQ=5,6,7,9,10,11,12;	Selects IRQ and I/O resource for Parallel Port.
Mode	- STD Printer Mode (default) - SPP Mode - EPP-1.9 and SPP Mode - EPP-1.7 and SPP Mode - ECP Mode - ECP and EPP 1.9 Mode - ECP and EPP 1.7 Mode	Changes Parallel Port mode. Some of the modes required a DMA resource. After the mode is changed, reset the system to reflect the actual device settings.

5.4.9 Advanced – USB Configuration

Menu Path *Advanced > USB Configuration*

The **USB Configuration** allows users to configure advanced USB settings such as USB mass storage driver support.

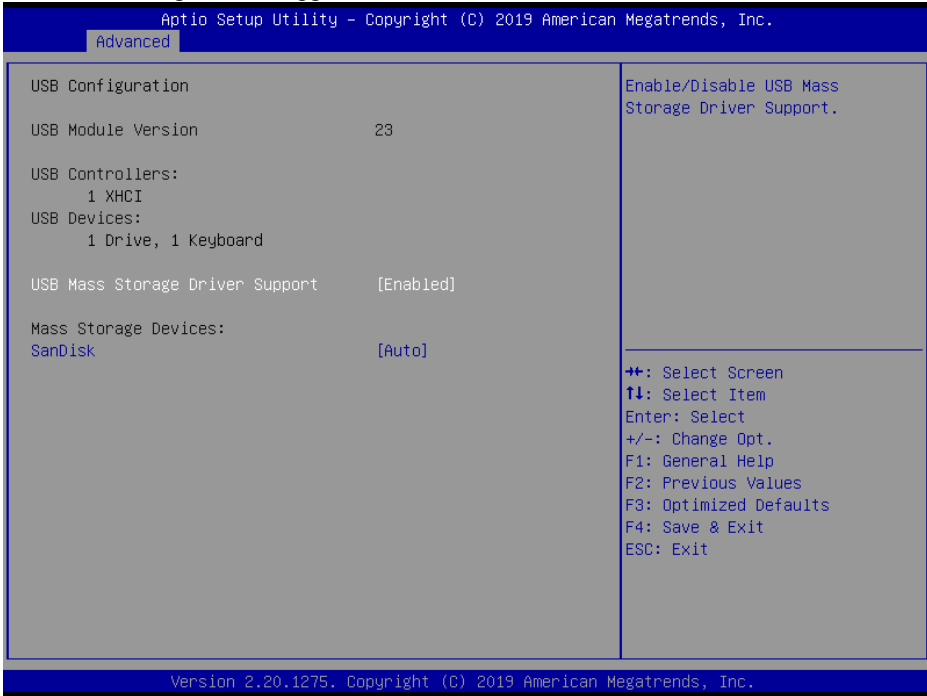


USB Configuration Screen

BIOS Setting	Options	Description/Purpose
USB Module Version	No changeable options	Displays USB module version.
USB Controllers	No changeable options	Displays number and type of USB controllers (if any).
USB Devices	No changeable options	Displays number and type of connected USB devices (if any).
USB Mass Storage Driver Support	- Disabled - Enabled (default)	Enables / Disables USB Mass Storage Driver Support.
Mass Storage Devices: [drive(s)]	- Auto (default) - Floppy - Forced FDD - Hard Disk - CD-ROM	Auto enumerates devices according to their media format. Optical drives are emulated as 'CD-ROM'. Drives with no media will be emulated according to a drive type.

5.4.10 Advanced – NVMe Configuration

Menu Path *Advanced > NVMe Configuration*

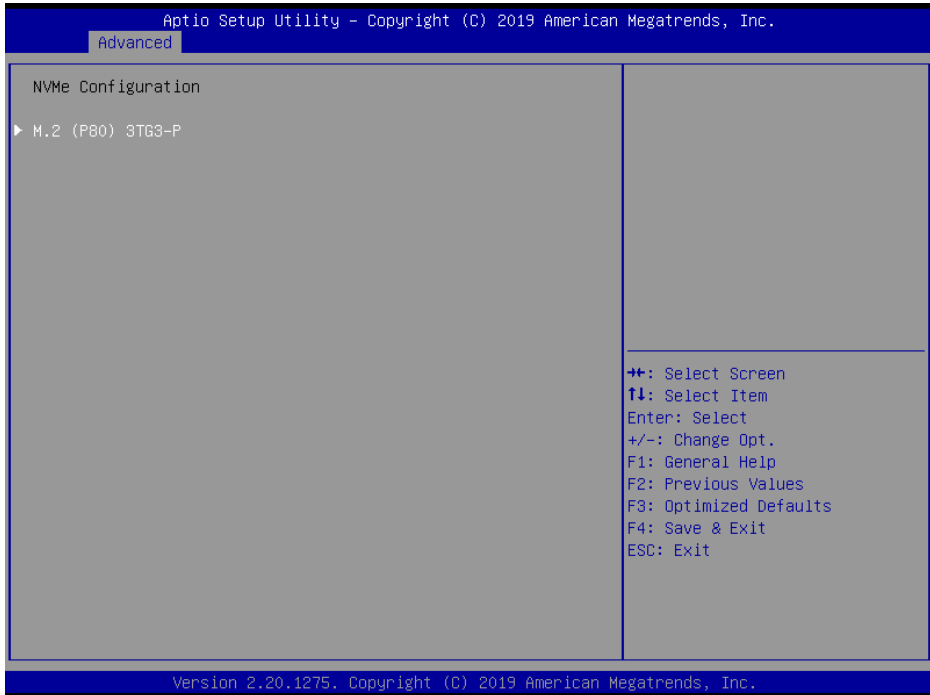

NVMe Configuration Screen

BIOS Setting	Options	Description/Purpose
NVMe Configuration	No changeable options	Displays NVMe device.

5.4.11 Advanced – Network Stack Configuration

Menu Path *Advanced > Network Stack Configuration*

The **Network Stack Configuration** allows users to enable/disable UEFI Network Stack, IPv4/IPv6 PXE (Pre-Boot Execution) support and configure PXE boot wait time and detects the media presence.

PXE allows a workstation to boot from a server on a network prior to booting the operating system on the local hard drive. A PXE-enabled workstation connects its NIC to the LAN via a jumper, which keeps the workstation connected to the network even when the power is turned off.



Network Stack Configuration Screen

BIOS Setting	Options	Description/Purpose
Network Stack	- Disabled (default) - Enabled	Enables or Disables UEFI Network Stack.
Ipv4 PXE Support	- Disabled (default) - Enabled	Enables Ipv4 PXE Boot Support. If disabled, Ipv4 PXE boot option will not be created.

BIOS Setting	Options	Description/Purpose
Ipv6 PXE Support	- Disabled (default) - Enabled	Enables Ipv6 PXE Boot Support. If disabled, Ipv6 PXE boot option will not be created.
IPSEC Certificate	- Disabled - Enabled (default)	Supports to enable/disable IPSEC certificate for Ikev.
PXE boot wait time	Numeric (from 0 to 5)	Number of seconds to wait for PXE boot to abort after the Esc key is pressed.
Media detect count	Numeric (from 1 to 50)	Number of times that the media presence will be checked.

5.5 Chipset

Menu Path *Chipset*

This menu allows users to configure advanced Chipset settings such as System Agent (SA) and PCH-IO configuration parameters.




Chipset Screen

BIOS Setting	Options	Description/Purpose
System Agent (SA) Parameters	Sub-Menu	System Agent (SA) Parameters.
PCH-IO Configuration	Sub-Menu	PCH Parameters.

5.5.1 Chipset – System Agent (SA) Configuration

Menu Path *Chipset > System Agent (SA) Configuration*

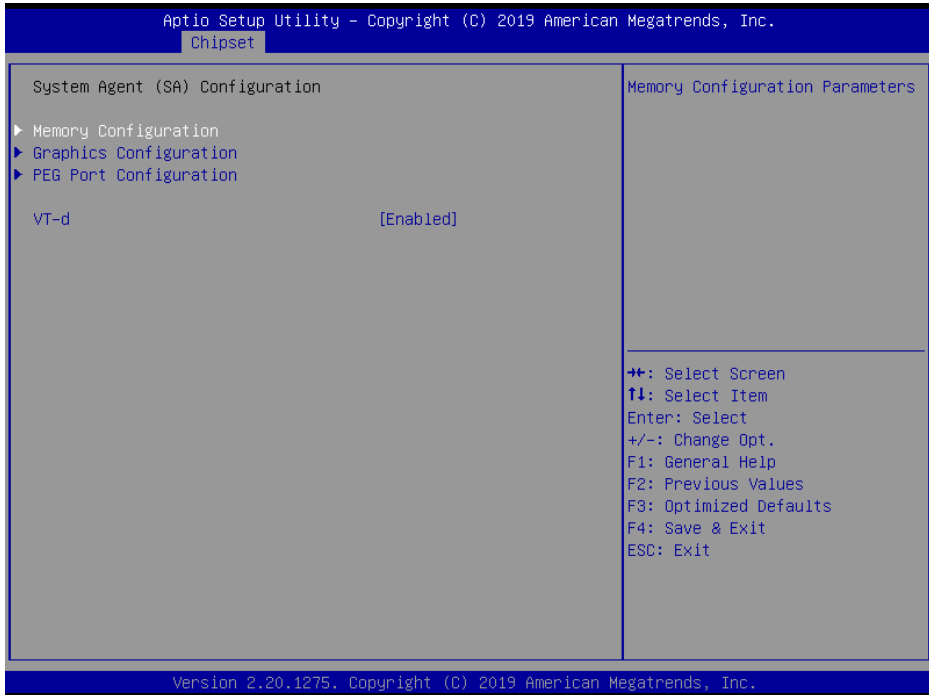


System Agent (SA) Configuration Screen

BIOS Setting	Options	Description/Purpose
Memory Configuration	Sub-Menu	Memory Configuration.
Graphics Configuration	Sub-Menu	Graphics Configuration.
PEG Port Configuration	Sub-Menu	PEG Port Configuration.
VT-d	- Disabled - Enabled (default)	Enables or Disables VT-d function.

System Agent (SA) Configuration – Memory Configuration

Menu Path *Chipset > System Agent (SA) Configuration > Memory Configuration*

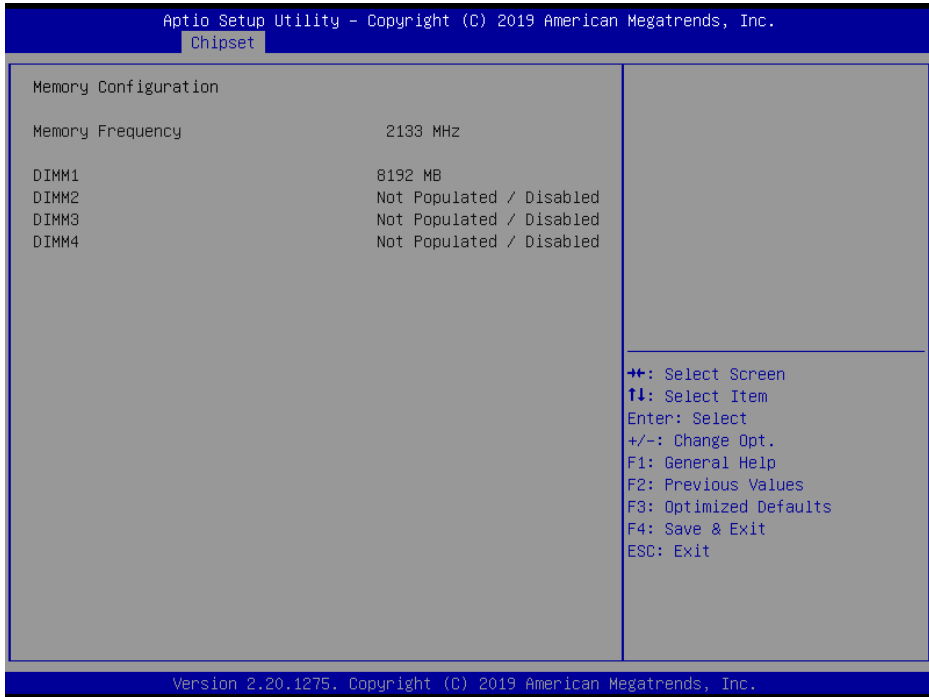


Memory Configuration Screen

BIOS Setting	Options	Description/Purpose
Memory Frequency	No changeable options	Displays the frequency of memory.
DIMM1	No changeable options	Displays the size of DIMM1.
DIMM2 <i>(for Q370/C246 only)</i>	No changeable options	Displays the size of DIMM2.
DIMM3	No changeable options	Displays the size of DIMM3.
DIMM4 <i>(for Q370/C246 only)</i>	No changeable options	Displays the size of DIMM4.

System Agent (SA) Configuration – Graphics Configuration

Menu Path *Chipset > System Agent (SA) Configuration > Graphics Configuration*

The **Graphics Configuration** allows users to configure the display settings for the LCD panel.

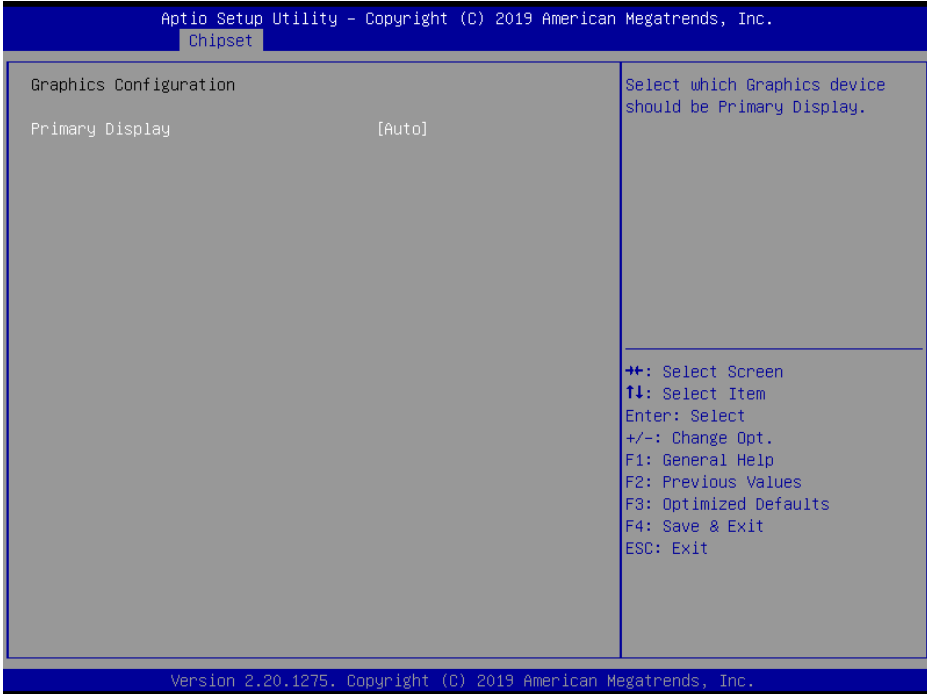


Graphics Configuration Screen

BIOS Setting	Options	Description/Purpose
Primary Display	- Auto (default) - IGFX	Selects which Graphics device should be Primary Display.

System Agent (SA) Configuration – PEG Port Configuration

Menu Path *Chipset > System Agent (SA) Configuration > PEG Port Configuration*

The **PEG Port Configuration** allows users to display the PEG status, enable Root Port and configure the maximum speed for PCI Express x16 slot.

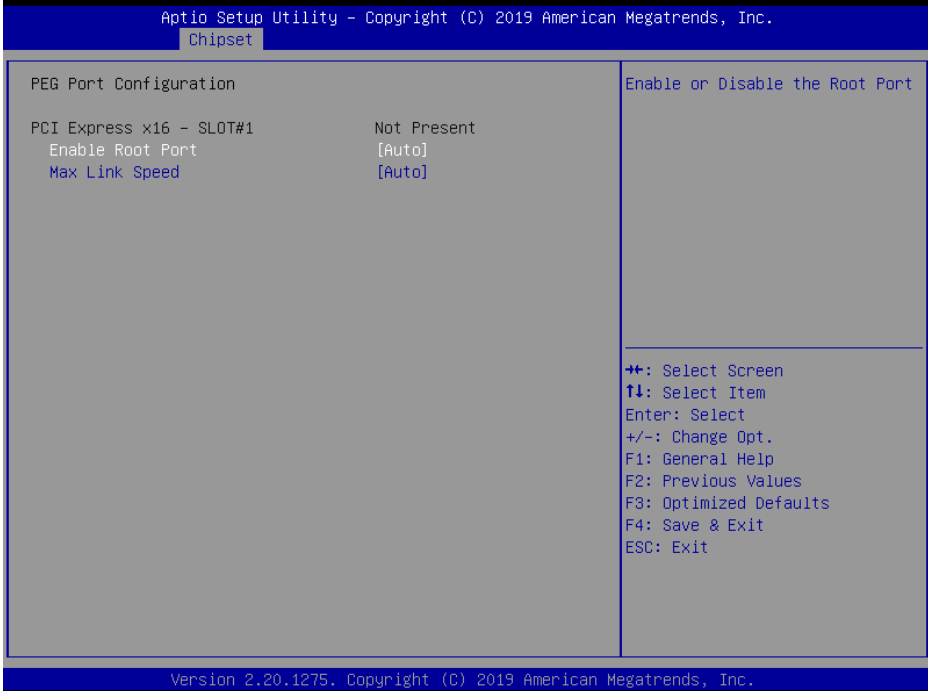


PEG Port Configuration Screen

BIOS Setting	Options	Description/Purpose
PCI Express x16 – SLOT#1	No changeable options	PCI Express x16 Slot Link and Speed information.
Enable Root Port	- Disabled - Enabled - Auto (default)	Enables or Disables the Root Port.
Max Link Speed	- Auto (default) - Gen1 - Gen2 - Gen3	Configures PCI-E1 Max Speed.

5.5.2 Chipset – PCH IO Configuration

Menu Path *Chipset > PCH-IO Configuration*

The **PCH-IO Configuration** allows users to configure PCI Express and SATA configuration parameters, enable/disable PCH LAN Controller and Wake-On-LAN function and determine the power on/off state that the system will go to following a power failure (G3 state).

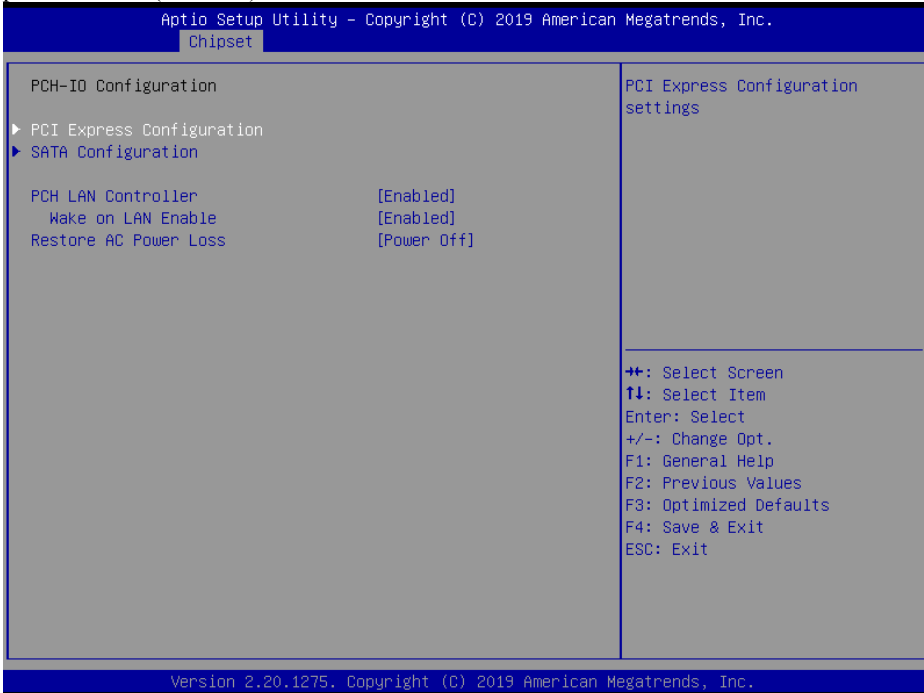


PCH-IO Configuration Screen

BIOS Setting	Options	Description/Purpose
PCI Express Configuration	Sub-Menu	PCI Express Configuration settings.
SATA Configuration	Sub-Menu	SATA Configuration settings.
PCH LAN Controller	- Disabled - Enabled (default)	Enables or Disables onboard NIC.
Wake On LAN Enable	- Disabled - Enabled (default)	Enables or Disables integrated LAN to wake up the system.
Restore AC Power Loss	- Power On - Power Off (default)	Specifies the state to go to when AC power is re-applied following a power failure (G3 state).

PCH-IO Configuration – PCI Express Configuration

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration*

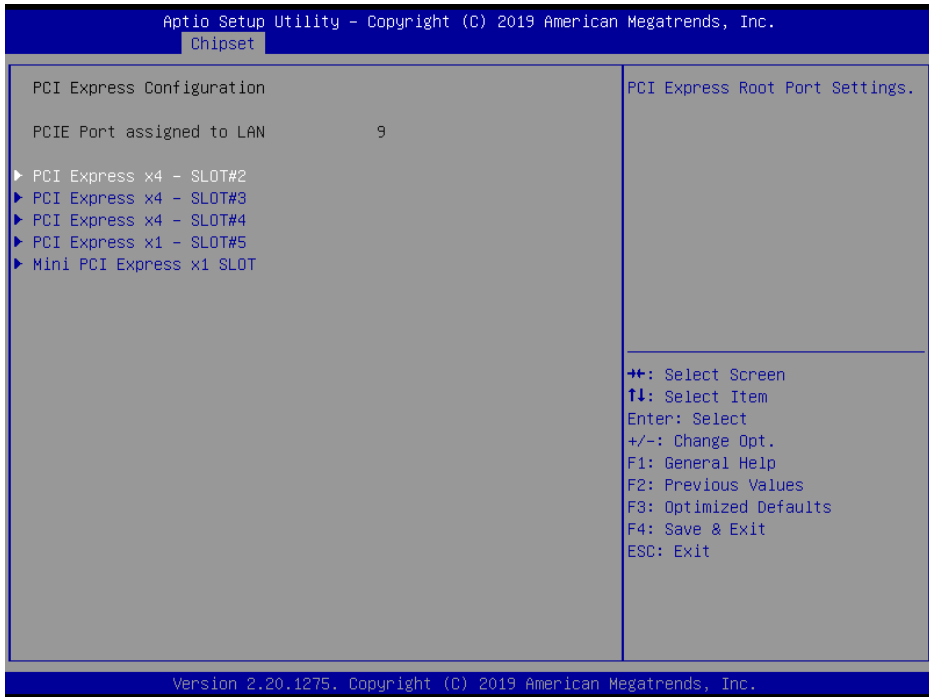


PCI Express Configuration Screen

BIOS Setting	Options	Description/Purpose
PCI Express x4 – SLOT#2 <i>(for Q370/C246 only)</i>	Sub-Menu	PCI Express x4 Slot settings.
PCI Express x4 – SLOT#3 <i>(for Q370/C246 only)</i>	Sub-Menu	PCI Express x4 Slot settings.
PCI Express x4 – SLOT#4	Sub-Menu	PCI Express x4 Slot settings.
PCI Express x1 – SLOT#5 <i>(for Q370/C246 only)</i>	Sub-Menu	PCI Express x1 Slot settings.
Mini PCI Express x1 SLOT <i>(for Q370/C246 only)</i>	Sub-Menu	Mini PCI Express x1 Slot settings.

PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#2 (For Q370 / C246 SKU Only)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express x4 – SLOT#2 (for Q370/C246 SKU only)*

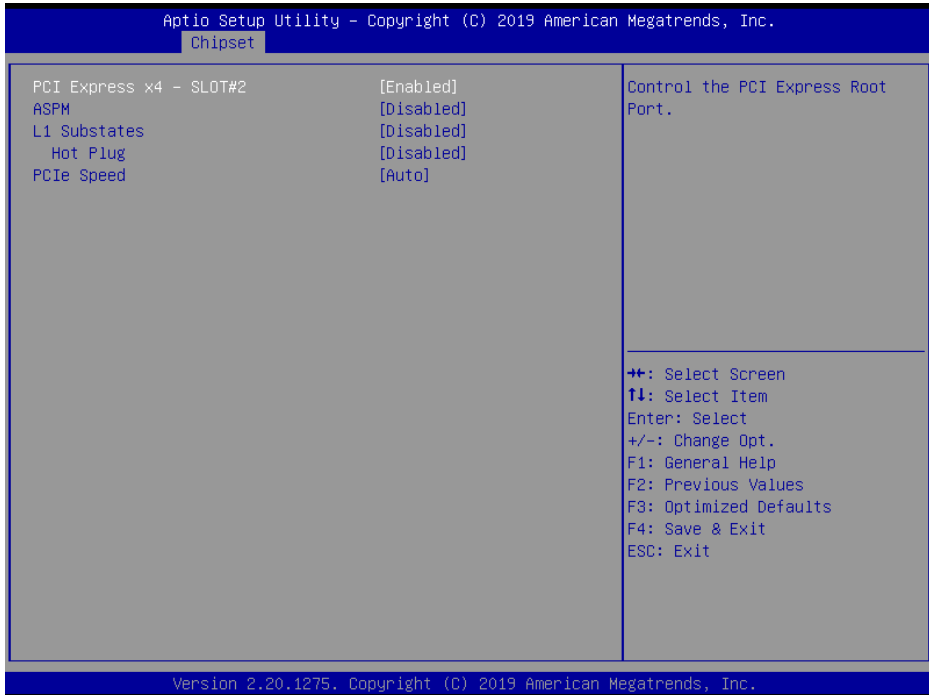


PCI Express x4 Slot#2 Screen

BIOS Setting	Options	Description/Purpose
PCI Express x4 – SLOT#2	- Disabled - Enabled (default)	Enables or Disables the PCI Express x4 slot.
ASPM	- Disabled (default) - L0s - L1 - L0sL1 - Auto	Sets the ASPM Level: <ul style="list-style-type: none"> • L0s - Force all links to L0s state. • Auto - BIOS auto configure. • Disabled - Disables ASPM.
L1 Substates	- Disabled (default) - L1.1 - L1.1 & L1.2	PCI Express L1 Substates settings.
Hot Plug	- Disabled (default) - Enabled	Enables or Disables Hot Plug support.

BIOS Setting	Options	Description/Purpose
PCIe Speed	- Auto (default) - Gen1 - Gen2 - Gen3	Configures PCIe speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#3 (For Q370 / C246 SKU Only)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express x4 – SLOT#3 (for Q370/C246 SKU only)*

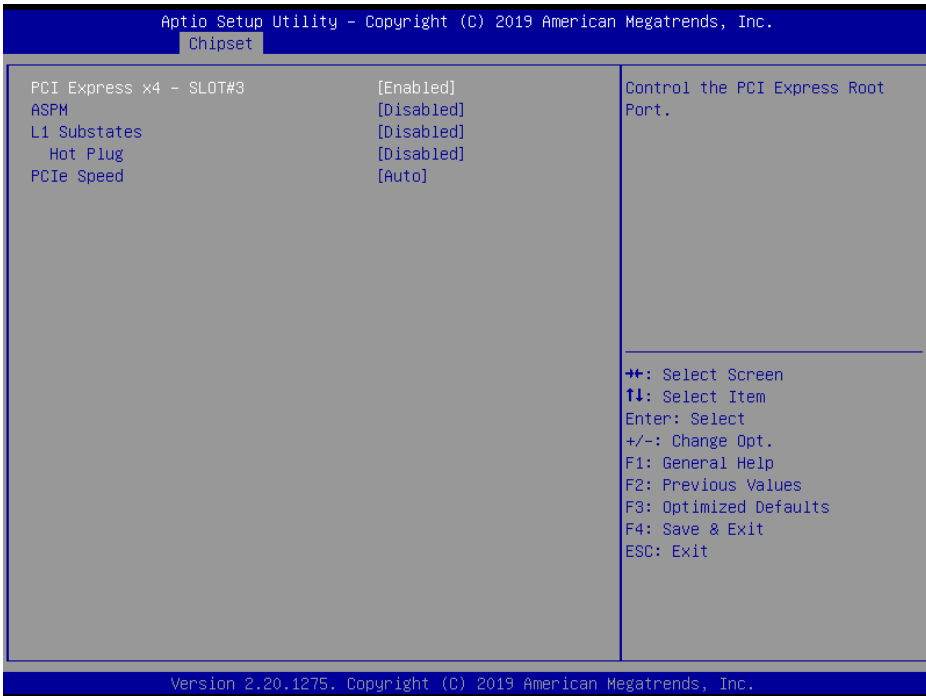


PCI Express x4 Slot#3 Screen

BIOS Setting	Options	Description/Purpose
PCI Express x4 – SLOT#3	- Disabled - Enabled (default)	Enables or Disables the PCI Express x4 slot.
ASPM	- Disabled (default) - L0s - L1 - L0sL1 - Auto	Sets the ASPM Level: <ul style="list-style-type: none"> • L0s - Force all links to L0s state. • Auto - BIOS auto configure. • Disabled - Disables ASPM.

BIOS Setting	Options	Description/Purpose
L1 Substates	- Disabled (default) - L1.1 - L1.1 & L1.2	PCI Express L1 Substates settings.
Hot Plug	- Disabled (default) - Enabled	Enables or Disables Hot Plug support.
PCIe Speed	- Auto (default) - Gen1 - Gen2 - Gen3	Configures PCIe speed.

PCH-IO Configuration – PCI Express Configuration – PCI Express x4 – SLOT#4

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express x4 – SLOT#4*

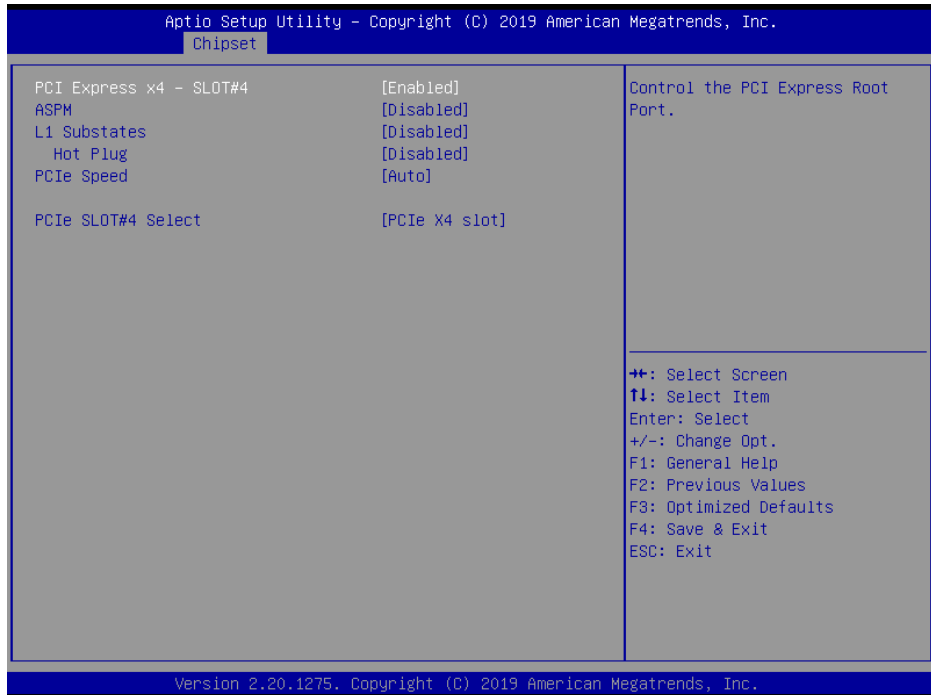


PCI Express x4 Slot#4 Screen

BIOS Setting	Options	Description/Purpose
PCI Express x4 – SLOT#4	- Disabled - Enabled (default)	Enables or Disables the PCI Express x4 slot.

BIOS Setting	Options	Description/Purpose
ASPM	<ul style="list-style-type: none"> - Disabled (default) - L0s - L1 - L0sL1 - Auto 	Sets the ASPM Level: <ul style="list-style-type: none"> • L0s - Force all links to L0s state. • Auto - BIOS auto configure. • Disabled - Disables ASPM.
L1 Substates	<ul style="list-style-type: none"> - Disabled (default) - L1.1 - L1.1 & L1.2 	PCI Express L1 Substates settings
Hot Plug	<ul style="list-style-type: none"> - Disabled (default) - Enabled 	Enables or Disables Hot Plug support.
PCIe Speed	<ul style="list-style-type: none"> - Auto (default) - Gen1 - Gen2 - Gen3 	Configures PCIe Speed.
PCIe SLOT4 Select	<ul style="list-style-type: none"> - PCIe X4 slot (default) - M.2 NVMe slot 	PCIe SLOT#4 function selection.

PCI-IO Configuration – PCI Express Configuration – PCI Express x1 – SLOT#5 (For Q370 / C246 SKU Only)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > PCI Express x1 – SLOT#5 (for Q370/C246 SKU only)*

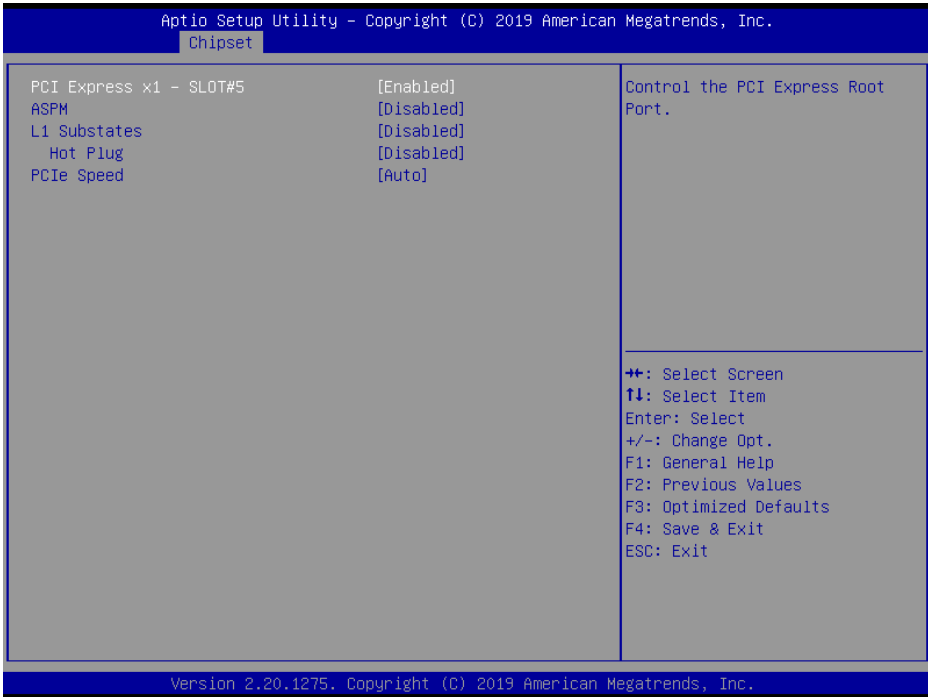


PCI Express x1 Slot#5 Screen

BIOS Setting	Options	Description/Purpose
PCI Express x1 – SLOT#5	- Disabled - Enabled (default)	Enables or Disables the PCI Express x4 slot.
ASPM	- Disabled (default) - L0s - L1 - L0sL1 - Auto	Sets the ASPM Level: <ul style="list-style-type: none"> • L0s - Force all links to L0s state. • Auto - BIOS auto configure. • Disabled - Disables ASPM.
L1 Substates	- Disabled (default) - L1.1 - L1.1 & L1.2	PCI Express L1 Substates settings
Hot Plug	- Disabled (default) - Enabled	Enables or Disables Hot Plug support.
PCIe Speed	- Auto (default)	Configures PCIe speed.

BIOS Setting	Options	Description/Purpose
	- Gen1 - Gen2 - Gen3	

PCH-IO Configuration – PCI Express Configuration – Mini PCI Express x1 Slot (For Q370 / C246 SKU Only)

Menu Path *Chipset > PCH-IO Configuration > PCI Express Configuration > Mini PCI Express x1 SLOT*

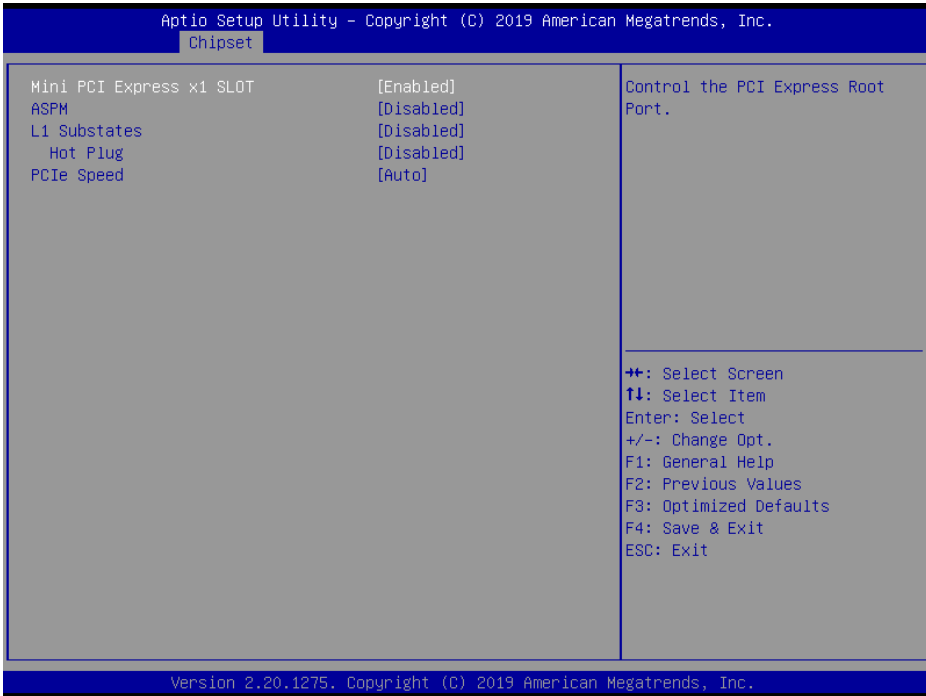


Mini PCI Express x1 Slot Screen

BIOS Setting	Options	Description/Purpose
Mini PCI Express x1 SLOTT	- Disabled - Enabled (default)	Enable or Disable the Mini PCI Express x1 slot.
ASPM	- Disabled (default) - L0s - L1 - L0sL1 - Auto	Sets the ASPM Level: <ul style="list-style-type: none"> • L0s - Force all links to L0s state. • Auto - BIOS auto configure. • Disabled - Disables ASPM.
L1 Substates	- Disabled (default) - L1.1 - L1.1 & L1.2	PCI Express L1 Substates settings.

BIOS Setting	Options	Description/Purpose
Hot Plug	- Disabled (default) - Enabled	Enables or Disables Hot Plug support.
PCIe Speed	- Auto (default) - Gen1 - Gen2 - Gen3	Configures PCIe speed.

PCH-IO Configuration – PCI Express Configuration – SATA Configuration

Menu Path *Chipset > PCH-IO Configuration > SATA Configuration*

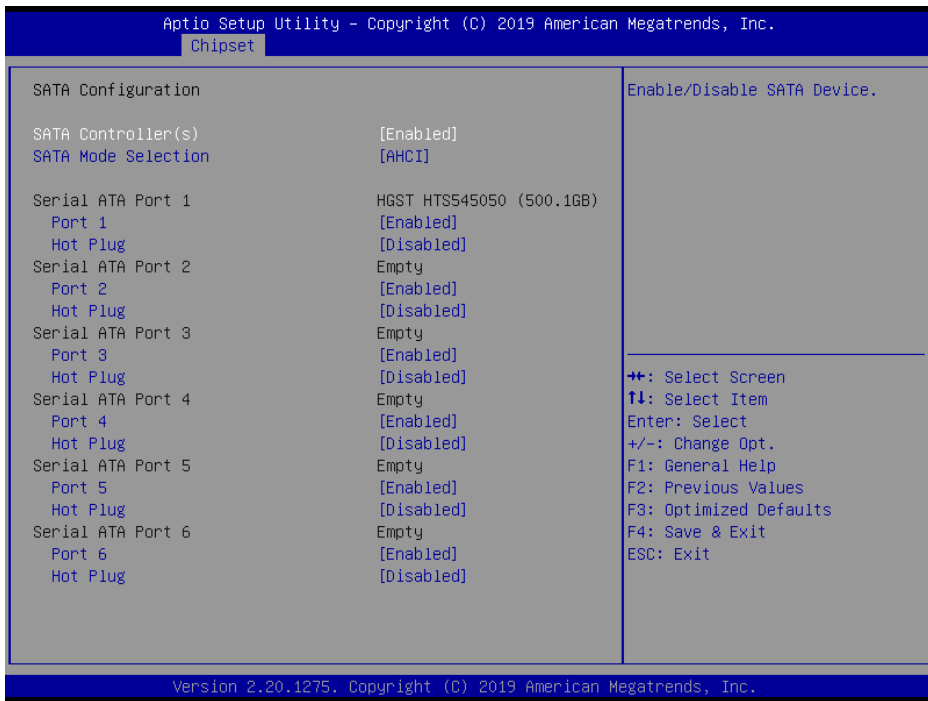

SATA Configuration Screen

BIOS Setting	Options	Description/Purpose
SATA Controller(s)	- Disabled (default) - Enabled	Enables or Disables SATA device.
SATA Mode	- AHCI (default) - Intel RST (RAID)	Determines how SATA controller(s) operate.
Serial ATA Port 1 – 6 <i>(ports 5-6 for Q370/C246 only)</i>	No changeable options	Displays the SATA device's name.


BIOS Setting	Options	Description/Purpose
Port 1 - 6	- Disabled - Enabled (default)	Enables or Disables SATA Port Device.
HotPlug	- Disabled (default) - Enabled	Enables or Disables SATA Port Device HotPlug function.

5.6 Security

Menu Path *Security*

From the **Security** menu, you are allowed to create, change or clear the administrator password. You will be asked to enter the configured administrator password before you can access the Setup Utility.

By setting an administrator password, you will prevent other users from changing your BIOS settings. You can configure an Administrator password and then configure a user password. An administrator has much more privileges over the settings in the Setup utility than a user. Heed that a user password does not provide access to most of the features in the Setup utility.

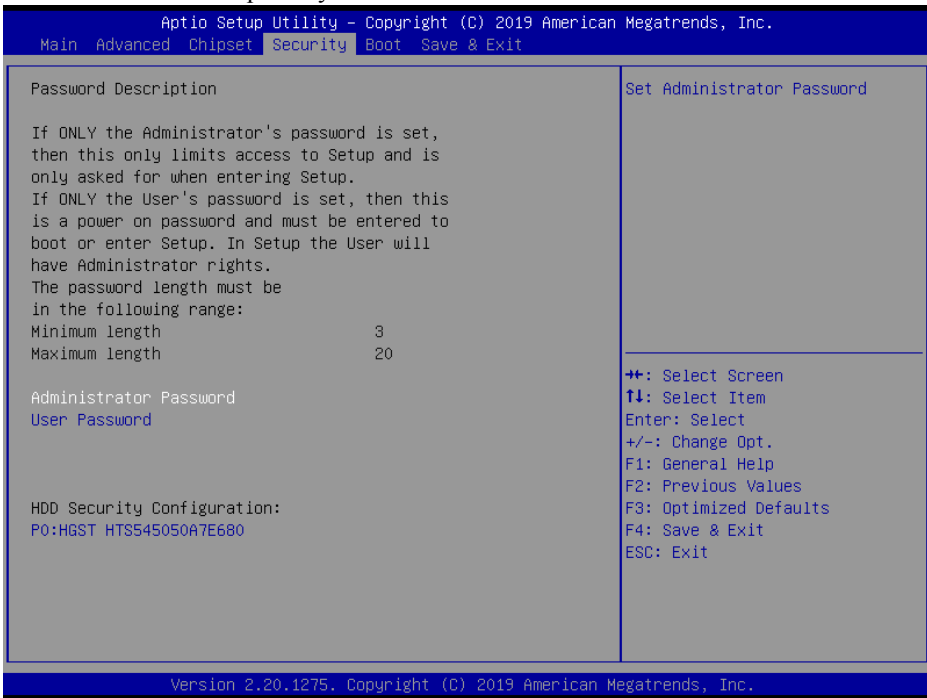

Security Screen

BIOS Setting	Options	Description/Purpose
Administrator Password	Password can be 3-20 alphanumeric characters.	Specifies the administrator password.
User Password	Password can be 3-20 alphanumeric characters.	Specifies the user password.

BIOS Setting	Options	Description/Purpose
HDD Security Configuration	Sub-Menu	Enters sub-menu with option to enable password protected HDD/SSD (if supported by SATA device).

Create an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Enter the password you want to create. A password can be 3-20 alphanumeric characters. After you have configured the password, press <Enter> to confirm.
3. Type the new password again and press <Enter>.

Change an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Select the Administrator Password or User Password that you want to change. A password can be 3-20 alphanumeric characters. After you have changed the password, press <Enter> to confirm.
3. Type the changed password again and press <Enter>.


Remove an Administrator or User Password

1. Select the **Administrator Password / User Password** option from the Security menu and press <Enter>, and the password dialog entry box appears.
2. Select the configured Administrator Password or User Password that you want to delete. Leave the dialog box blank and press <Enter>.
3. Press <Enter> again when the password confirmation box appears.

5.7 Boot

Menu Path *Boot*

This menu provides control items for setting system boot configuration and boot priorities.

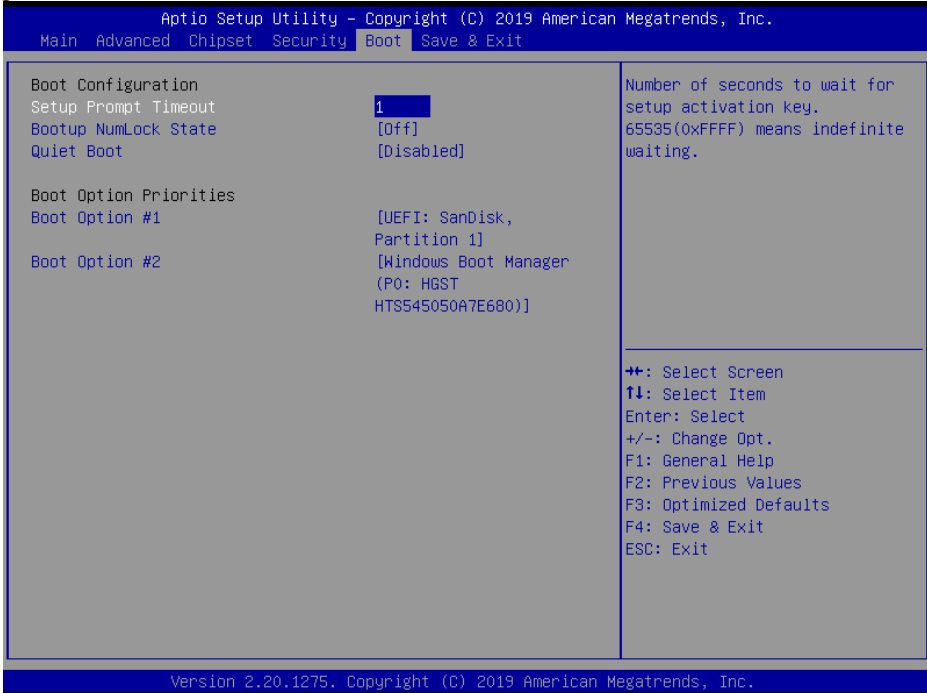

Boot Screen

BIOS Setting	Options	Description/Purpose
Setup Prompt Timeout	Numeric (from 1 to 65535)	Number of seconds to wait for setup activation key.
Bootup NumLock State	- On (default) - Off	Specifies the power-on state of the NumLock Key.
Quiet Boot	- Disabled (default) - Enabled	Enables or Disables Quiet Boot option.
Boot Option #1~#n	- [Drive(s)] - Disabled	Sets the system boot order.

5.8 Save & Exit

Menu Path	Save & Exit
-----------	-------------

The **Save & Exit** allows users to save or discard changed BIOS settings as well as load factory default settings.

Save Changed BIOS Settings


To save and validate the changed BIOS settings, select **Save Changes** from the **Save & Exit** menu, or you can select **Save Changes and Exit** (or press **F4**) to validate the changes and then exit the system. Select **Save Changes and Reset** to validate the changed BIOS settings and then restart the system.

Discard Changed BIOS Settings

To cancel the BIOS settings you have previously configured, select **Discard Changes and Exit** from this menu, or simply press **Esc** to exit the BIOS setup. You can also select **Discard Changes and Reset** to discard any changes you have made and restore the factory BIOS defaults.

Load User Defaults

You may simply press **F3** at any time to load the **Optimized Values** which resets all BIOS settings to the factory defaults.

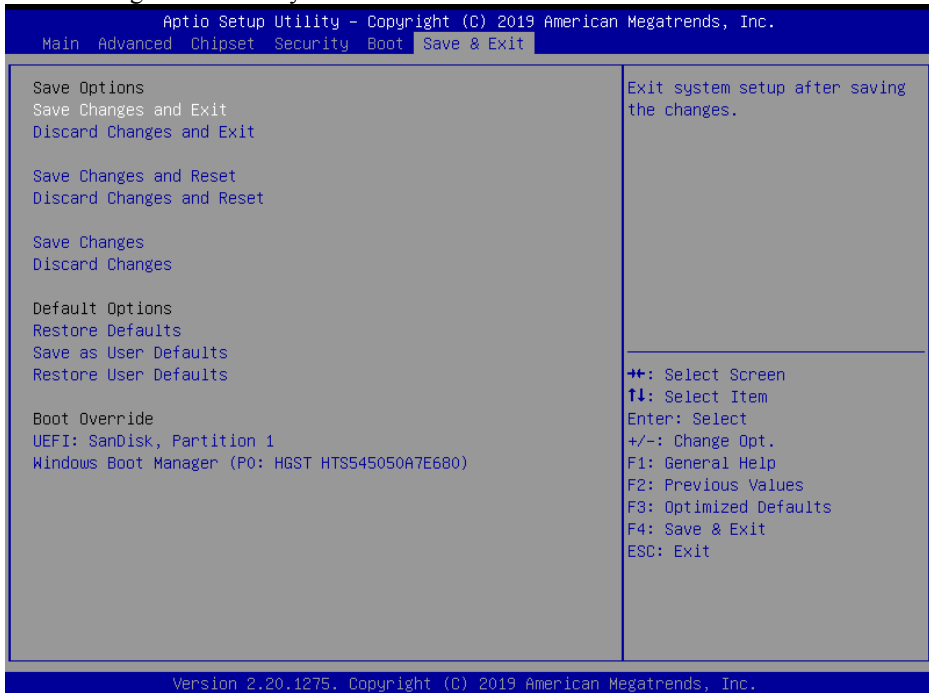

Save & Exit Screen

BIOS Setting	Options	Description/Purpose
Save Changes and Exit	No changeable options	Exits and saves the changes in NVRAM.
Discard Changes and Exit	No changeable options	Exits without saving any changes made in BIOS settings.
Save Changes and Reset	No changeable options	Saves the changes in NVRAM and resets.
Discard Changes and Reset	No changeable options	Resets without saving any changes made in BIOS settings.
Save Changes	No changeable options	Saves Changes done so far to any of the setup options.
Discard Changes	No changeable options	Discards Changes done so far to any of the setup options.
Restore Defaults	No changeable options	Loads the optimized defaults for BIOS settings.
Save as User Defaults	No changeable options	Saves the changes done so far as User Defaults.
Restore User Defaults	No changeable options	Restores the User Defaults to all the setup options.
Boot Override	- [Drive(s)]	Forces to boot from selected [drive(s)].


Appendix A Technical Summary

This appendix will give you a brief introduction of the allocation maps for BC-2602 resources.

The following topics are included:

- BC-2602 Block Diagram
- Interrupt Map
- I/O Map
- Memory Map
- DMA Map
- Configuring WatchDog Timer
- Flash BIOS Update

BA-2602 Block Diagram

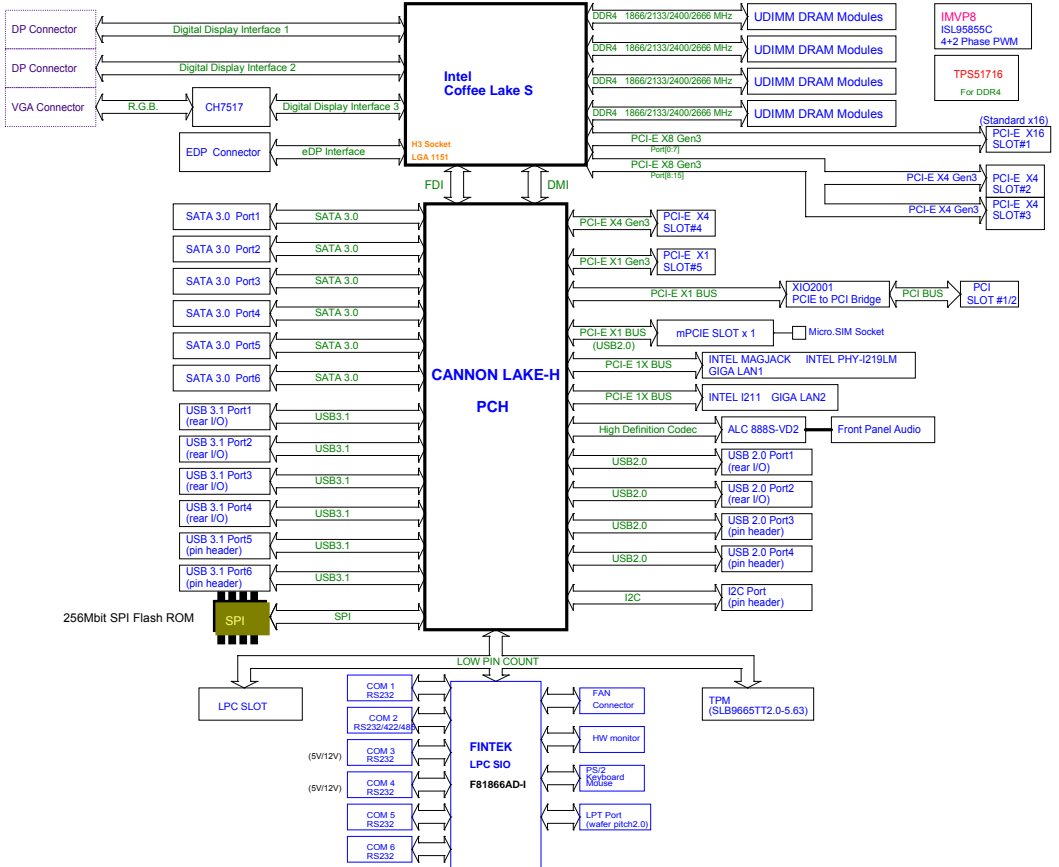

Interrupt Map

IRQ	ASSIGNMENT
IRQ 0	System timer
IRQ 1	Standard PS/2 Keyboard
IRQ 3	Communications Port (COM2)
IRQ 4	Communications Port (COM1)
IRQ 6	Communications Port (COM4)
IRQ 7	Communications Port (COM3)
IRQ 10	Communications Port (COM5)
IRQ 11	Communications Port (COM6)
IRQ 12	PS/2 Compatible Mouse
IRQ 13	Numeric data processor
IRQ 14	Intel(R) Serial IO GPIO Host Controller - INT3450
IRQ 16	Intel(R) Serial IO I2C Host Controller - A368
IRQ 16	High Definition Audio Controller
IRQ 17	Intel(R) Serial IO I2C Host Controller - A369
IRQ 19	Intel(R) Active Management Technology - SOL (COM8)
IRQ 45	Trusted Platform Module 2.0
RQ 54	Microsoft ACPI-Compliant System
IRQ 55	Microsoft ACPI-Compliant System
IRQ 56	Microsoft ACPI-Compliant System
IRQ 57	Microsoft ACPI-Compliant System
IRQ 58	Microsoft ACPI-Compliant System
IRQ 59	Microsoft ACPI-Compliant System
IRQ 60	Microsoft ACPI-Compliant System
IRQ 61	Microsoft ACPI-Compliant System
IRQ 62	Microsoft ACPI-Compliant System
IRQ 63	Microsoft ACPI-Compliant System
IRQ 64	Microsoft ACPI-Compliant System
IRQ 65	Microsoft ACPI-Compliant System
IRQ 66	Microsoft ACPI-Compliant System
IRQ 67	Microsoft ACPI-Compliant System
IRQ 68	Microsoft ACPI-Compliant System
IRQ 69	Microsoft ACPI-Compliant System
IRQ 70	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 71	Microsoft ACPI-Compliant System
IRQ 72	Microsoft ACPI-Compliant System
IRQ 73	Microsoft ACPI-Compliant System
IRQ 74	Microsoft ACPI-Compliant System
IRQ 75	Microsoft ACPI-Compliant System
IRQ 76	Microsoft ACPI-Compliant System
IRQ 77	Microsoft ACPI-Compliant System
IRQ 78	Microsoft ACPI-Compliant System
IRQ 79	Microsoft ACPI-Compliant System
IRQ 80	Microsoft ACPI-Compliant System
IRQ 81	Microsoft ACPI-Compliant System
IRQ 82	Microsoft ACPI-Compliant System
IRQ 83	Microsoft ACPI-Compliant System
IRQ 84	Microsoft ACPI-Compliant System
IRQ 85	Microsoft ACPI-Compliant System
IRQ 86	Microsoft ACPI-Compliant System
IRQ 87	Microsoft ACPI-Compliant System
IRQ 88	Microsoft ACPI-Compliant System
IRQ 89	Microsoft ACPI-Compliant System
IRQ 90	Microsoft ACPI-Compliant System
IRQ 91	Microsoft ACPI-Compliant System
IRQ 92	Microsoft ACPI-Compliant System
IRQ 93	Microsoft ACPI-Compliant System
IRQ 94	Microsoft ACPI-Compliant System
IRQ 95	Microsoft ACPI-Compliant System
IRQ 96	Microsoft ACPI-Compliant System
IRQ 97	Microsoft ACPI-Compliant System
IRQ 98	Microsoft ACPI-Compliant System
IRQ 99	Microsoft ACPI-Compliant System
IRQ 100	Microsoft ACPI-Compliant System
IRQ 101	Microsoft ACPI-Compliant System
IRQ 102	Microsoft ACPI-Compliant System
IRQ 103	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 104	Microsoft ACPI-Compliant System
IRQ 105	Microsoft ACPI-Compliant System
IRQ 106	Microsoft ACPI-Compliant System
IRQ 107	Microsoft ACPI-Compliant System
IRQ 108	Microsoft ACPI-Compliant System
IRQ 109	Microsoft ACPI-Compliant System
IRQ 110	Microsoft ACPI-Compliant System
IRQ 111	Microsoft ACPI-Compliant System
IRQ 112	Microsoft ACPI-Compliant System
IRQ 113	Microsoft ACPI-Compliant System
IRQ 114	Microsoft ACPI-Compliant System
IRQ 115	Microsoft ACPI-Compliant System
IRQ 116	Microsoft ACPI-Compliant System
IRQ 117	Microsoft ACPI-Compliant System
IRQ 118	Microsoft ACPI-Compliant System
IRQ 119	Microsoft ACPI-Compliant System
IRQ 120	Microsoft ACPI-Compliant System
IRQ 121	Microsoft ACPI-Compliant System
IRQ 122	Microsoft ACPI-Compliant System
IRQ 123	Microsoft ACPI-Compliant System
IRQ 124	Microsoft ACPI-Compliant System
IRQ 125	Microsoft ACPI-Compliant System
IRQ 126	Microsoft ACPI-Compliant System
IRQ 127	Microsoft ACPI-Compliant System
IRQ 128	Microsoft ACPI-Compliant System
IRQ 129	Microsoft ACPI-Compliant System
IRQ 130	Microsoft ACPI-Compliant System
IRQ 131	Microsoft ACPI-Compliant System
IRQ 132	Microsoft ACPI-Compliant System
IRQ 133	Microsoft ACPI-Compliant System
IRQ 134	Microsoft ACPI-Compliant System
IRQ 135	Microsoft ACPI-Compliant System
IRQ 136	Microsoft ACPI-Compliant System
IRQ 137	Microsoft ACPI-Compliant System
IRQ 138	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 139	Microsoft ACPI-Compliant System
IRQ 140	Microsoft ACPI-Compliant System
IRQ 141	Microsoft ACPI-Compliant System
IRQ 142	Microsoft ACPI-Compliant System
IRQ 143	Microsoft ACPI-Compliant System
IRQ 144	Microsoft ACPI-Compliant System
IRQ 145	Microsoft ACPI-Compliant System
IRQ 146	Microsoft ACPI-Compliant System
IRQ 147	Microsoft ACPI-Compliant System
IRQ 148	Microsoft ACPI-Compliant System
IRQ 149	Microsoft ACPI-Compliant System
IRQ 150	Microsoft ACPI-Compliant System
IRQ 151	Microsoft ACPI-Compliant System
IRQ 152	Microsoft ACPI-Compliant System
IRQ 153	Microsoft ACPI-Compliant System
IRQ 154	Microsoft ACPI-Compliant System
IRQ 155	Microsoft ACPI-Compliant System
IRQ 156	Microsoft ACPI-Compliant System
IRQ 157	Microsoft ACPI-Compliant System
IRQ 158	Microsoft ACPI-Compliant System
IRQ 159	Microsoft ACPI-Compliant System
IRQ 160	Microsoft ACPI-Compliant System
IRQ 161	Microsoft ACPI-Compliant System
IRQ 162	Microsoft ACPI-Compliant System
IRQ 163	Microsoft ACPI-Compliant System
IRQ 164	Microsoft ACPI-Compliant System
IRQ 165	Microsoft ACPI-Compliant System
IRQ 166	Microsoft ACPI-Compliant System
IRQ 167	Microsoft ACPI-Compliant System
IRQ 168	Microsoft ACPI-Compliant System
IRQ 169	Microsoft ACPI-Compliant System
IRQ 170	Microsoft ACPI-Compliant System
IRQ 171	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 172	Microsoft ACPI-Compliant System
IRQ 173	Microsoft ACPI-Compliant System
IRQ 174	Microsoft ACPI-Compliant System
IRQ 175	Microsoft ACPI-Compliant System
IRQ 176	Microsoft ACPI-Compliant System
IRQ 177	Microsoft ACPI-Compliant System
IRQ 178	Microsoft ACPI-Compliant System
IRQ 179	Microsoft ACPI-Compliant System
IRQ 180	Microsoft ACPI-Compliant System
IRQ 181	Microsoft ACPI-Compliant System
IRQ 182	Microsoft ACPI-Compliant System
IRQ 183	Microsoft ACPI-Compliant System
IRQ 184	Microsoft ACPI-Compliant System
IRQ 185	Microsoft ACPI-Compliant System
IRQ 186	Microsoft ACPI-Compliant System
IRQ 187	Microsoft ACPI-Compliant System
IRQ 188	Microsoft ACPI-Compliant System
IRQ 189	Microsoft ACPI-Compliant System
IRQ 190	Microsoft ACPI-Compliant System
IRQ 191	Microsoft ACPI-Compliant System
IRQ 192	Microsoft ACPI-Compliant System
IRQ 193	Microsoft ACPI-Compliant System
IRQ 194	Microsoft ACPI-Compliant System
IRQ 195	Microsoft ACPI-Compliant System
IRQ 196	Microsoft ACPI-Compliant System
IRQ 197	Microsoft ACPI-Compliant System
IRQ 198	Microsoft ACPI-Compliant System
IRQ 199	Microsoft ACPI-Compliant System
IRQ 200	Microsoft ACPI-Compliant System
IRQ 201	Microsoft ACPI-Compliant System
IRQ 202	Microsoft ACPI-Compliant System
IRQ 203	Microsoft ACPI-Compliant System
IRQ 204	Microsoft ACPI-Compliant System
IRQ 256	Microsoft ACPI-Compliant System
IRQ 257	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 258	Microsoft ACPI-Compliant System
IRQ 259	Microsoft ACPI-Compliant System
IRQ 260	Microsoft ACPI-Compliant System
IRQ 261	Microsoft ACPI-Compliant System
IRQ 262	Microsoft ACPI-Compliant System
IRQ 263	Microsoft ACPI-Compliant System
IRQ 264	Microsoft ACPI-Compliant System
IRQ 265	Microsoft ACPI-Compliant System
IRQ 266	Microsoft ACPI-Compliant System
IRQ 267	Microsoft ACPI-Compliant System
IRQ 268	Microsoft ACPI-Compliant System
IRQ 269	Microsoft ACPI-Compliant System
IRQ 270	Microsoft ACPI-Compliant System
IRQ 271	Microsoft ACPI-Compliant System
IRQ 272	Microsoft ACPI-Compliant System
IRQ 273	Microsoft ACPI-Compliant System
IRQ 274	Microsoft ACPI-Compliant System
IRQ 275	Microsoft ACPI-Compliant System
IRQ 276	Microsoft ACPI-Compliant System
IRQ 277	Microsoft ACPI-Compliant System
IRQ 278	Microsoft ACPI-Compliant System
IRQ 279	Microsoft ACPI-Compliant System
IRQ 280	Microsoft ACPI-Compliant System
IRQ 281	Microsoft ACPI-Compliant System
IRQ 282	Microsoft ACPI-Compliant System
IRQ 283	Microsoft ACPI-Compliant System
IRQ 284	Microsoft ACPI-Compliant System
IRQ 285	Microsoft ACPI-Compliant System
IRQ 286	Microsoft ACPI-Compliant System
IRQ 287	Microsoft ACPI-Compliant System
IRQ 288	Microsoft ACPI-Compliant System
IRQ 289	Microsoft ACPI-Compliant System
IRQ 290	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 291	Microsoft ACPI-Compliant System
IRQ 292	Microsoft ACPI-Compliant System
IRQ 293	Microsoft ACPI-Compliant System
IRQ 294	Microsoft ACPI-Compliant System
IRQ 295	Microsoft ACPI-Compliant System
IRQ 296	Microsoft ACPI-Compliant System
IRQ 297	Microsoft ACPI-Compliant System
IRQ 298	Microsoft ACPI-Compliant System
IRQ 299	Microsoft ACPI-Compliant System
IRQ 300	Microsoft ACPI-Compliant System
IRQ 301	Microsoft ACPI-Compliant System
IRQ 302	Microsoft ACPI-Compliant System
IRQ 303	Microsoft ACPI-Compliant System
IRQ 304	Microsoft ACPI-Compliant System
IRQ 305	Microsoft ACPI-Compliant System
IRQ 306	Microsoft ACPI-Compliant System
IRQ 307	Microsoft ACPI-Compliant System
IRQ 308	Microsoft ACPI-Compliant System
IRQ 309	Microsoft ACPI-Compliant System
IRQ 310	Microsoft ACPI-Compliant System
IRQ 311	Microsoft ACPI-Compliant System
IRQ 312	Microsoft ACPI-Compliant System
IRQ 313	Microsoft ACPI-Compliant System
IRQ 314	Microsoft ACPI-Compliant System
IRQ 315	Microsoft ACPI-Compliant System
IRQ 316	Microsoft ACPI-Compliant System
IRQ 317	Microsoft ACPI-Compliant System
IRQ 318	Microsoft ACPI-Compliant System
IRQ 319	Microsoft ACPI-Compliant System
IRQ 320	Microsoft ACPI-Compliant System
IRQ 321	Microsoft ACPI-Compliant System
IRQ 322	Microsoft ACPI-Compliant System
IRQ 323	Microsoft ACPI-Compliant System
IRQ 324	Microsoft ACPI-Compliant System
IRQ 325	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 326	Microsoft ACPI-Compliant System
IRQ 327	Microsoft ACPI-Compliant System
IRQ 328	Microsoft ACPI-Compliant System
IRQ 329	Microsoft ACPI-Compliant System
IRQ 330	Microsoft ACPI-Compliant System
IRQ 331	Microsoft ACPI-Compliant System
IRQ 332	Microsoft ACPI-Compliant System
IRQ 333	Microsoft ACPI-Compliant System
IRQ 334	Microsoft ACPI-Compliant System
IRQ 335	Microsoft ACPI-Compliant System
IRQ 336	Microsoft ACPI-Compliant System
IRQ 337	Microsoft ACPI-Compliant System
IRQ 338	Microsoft ACPI-Compliant System
IRQ 339	Microsoft ACPI-Compliant System
IRQ 340	Microsoft ACPI-Compliant System
IRQ 341	Microsoft ACPI-Compliant System
IRQ 342	Microsoft ACPI-Compliant System
IRQ 343	Microsoft ACPI-Compliant System
IRQ 344	Microsoft ACPI-Compliant System
IRQ 345	Microsoft ACPI-Compliant System
IRQ 346	Microsoft ACPI-Compliant System
IRQ 347	Microsoft ACPI-Compliant System
IRQ 348	Microsoft ACPI-Compliant System
IRQ 349	Microsoft ACPI-Compliant System
IRQ 350	Microsoft ACPI-Compliant System
IRQ 351	Microsoft ACPI-Compliant System
IRQ 352	Microsoft ACPI-Compliant System
IRQ 353	Microsoft ACPI-Compliant System
IRQ 354	Microsoft ACPI-Compliant System
IRQ 355	Microsoft ACPI-Compliant System
IRQ 356	Microsoft ACPI-Compliant System
IRQ 357	Microsoft ACPI-Compliant System
IRQ 358	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 359	Microsoft ACPI-Compliant System
IRQ 360	Microsoft ACPI-Compliant System
IRQ 361	Microsoft ACPI-Compliant System
IRQ 362	Microsoft ACPI-Compliant System
IRQ 363	Microsoft ACPI-Compliant System
IRQ 364	Microsoft ACPI-Compliant System
IRQ 365	Microsoft ACPI-Compliant System
IRQ 366	Microsoft ACPI-Compliant System
IRQ 367	Microsoft ACPI-Compliant System
IRQ 368	Microsoft ACPI-Compliant System
IRQ 369	Microsoft ACPI-Compliant System
IRQ 370	Microsoft ACPI-Compliant System
IRQ 371	Microsoft ACPI-Compliant System
IRQ 372	Microsoft ACPI-Compliant System
IRQ 373	Microsoft ACPI-Compliant System
IRQ 374	Microsoft ACPI-Compliant System
IRQ 375	Microsoft ACPI-Compliant System
IRQ 376	Microsoft ACPI-Compliant System
IRQ 377	Microsoft ACPI-Compliant System
IRQ 378	Microsoft ACPI-Compliant System
IRQ 379	Microsoft ACPI-Compliant System
IRQ 380	Microsoft ACPI-Compliant System
IRQ 381	Microsoft ACPI-Compliant System
IRQ 382	Microsoft ACPI-Compliant System
IRQ 383	Microsoft ACPI-Compliant System
IRQ 384	Microsoft ACPI-Compliant System
IRQ 385	Microsoft ACPI-Compliant System
IRQ 386	Microsoft ACPI-Compliant System
IRQ 387	Microsoft ACPI-Compliant System
IRQ 388	Microsoft ACPI-Compliant System
IRQ 389	Microsoft ACPI-Compliant System
IRQ 390	Microsoft ACPI-Compliant System
IRQ 391	Microsoft ACPI-Compliant System
IRQ 392	Microsoft ACPI-Compliant System
IRQ 393	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 394	Microsoft ACPI-Compliant System
IRQ 395	Microsoft ACPI-Compliant System
IRQ 396	Microsoft ACPI-Compliant System
IRQ 397	Microsoft ACPI-Compliant System
IRQ 398	Microsoft ACPI-Compliant System
IRQ 399	Microsoft ACPI-Compliant System
IRQ 400	Microsoft ACPI-Compliant System
IRQ 401	Microsoft ACPI-Compliant System
IRQ 402	Microsoft ACPI-Compliant System
IRQ 403	Microsoft ACPI-Compliant System
IRQ 404	Microsoft ACPI-Compliant System
IRQ 405	Microsoft ACPI-Compliant System
IRQ 406	Microsoft ACPI-Compliant System
IRQ 407	Microsoft ACPI-Compliant System
IRQ 408	Microsoft ACPI-Compliant System
IRQ 409	Microsoft ACPI-Compliant System
IRQ 410	Microsoft ACPI-Compliant System
IRQ 411	Microsoft ACPI-Compliant System
IRQ 412	Microsoft ACPI-Compliant System
IRQ 413	Microsoft ACPI-Compliant System
IRQ 414	Microsoft ACPI-Compliant System
IRQ 415	Microsoft ACPI-Compliant System
IRQ 416	Microsoft ACPI-Compliant System
IRQ 417	Microsoft ACPI-Compliant System
IRQ 418	Microsoft ACPI-Compliant System
IRQ 419	Microsoft ACPI-Compliant System
IRQ 420	Microsoft ACPI-Compliant System
IRQ 421	Microsoft ACPI-Compliant System
IRQ 422	Microsoft ACPI-Compliant System
IRQ 423	Microsoft ACPI-Compliant System
IRQ 424	Microsoft ACPI-Compliant System
IRQ 425	Microsoft ACPI-Compliant System
IRQ 426	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 427	Microsoft ACPI-Compliant System
IRQ 428	Microsoft ACPI-Compliant System
IRQ 429	Microsoft ACPI-Compliant System
IRQ 430	Microsoft ACPI-Compliant System
IRQ 431	Microsoft ACPI-Compliant System
IRQ 432	Microsoft ACPI-Compliant System
IRQ 433	Microsoft ACPI-Compliant System
IRQ 434	Microsoft ACPI-Compliant System
IRQ 435	Microsoft ACPI-Compliant System
IRQ 436	Microsoft ACPI-Compliant System
IRQ 437	Microsoft ACPI-Compliant System
IRQ 438	Microsoft ACPI-Compliant System
IRQ 439	Microsoft ACPI-Compliant System
IRQ 440	Microsoft ACPI-Compliant System
IRQ 441	Microsoft ACPI-Compliant System
IRQ 442	Microsoft ACPI-Compliant System
IRQ 443	Microsoft ACPI-Compliant System
IRQ 444	Microsoft ACPI-Compliant System
IRQ 445	Microsoft ACPI-Compliant System
IRQ 446	Microsoft ACPI-Compliant System
IRQ 447	Microsoft ACPI-Compliant System
IRQ 448	Microsoft ACPI-Compliant System
IRQ 449	Microsoft ACPI-Compliant System
IRQ 450	Microsoft ACPI-Compliant System
IRQ 451	Microsoft ACPI-Compliant System
IRQ 452	Microsoft ACPI-Compliant System
IRQ 453	Microsoft ACPI-Compliant System
IRQ 454	Microsoft ACPI-Compliant System
IRQ 455	Microsoft ACPI-Compliant System
IRQ 456	Microsoft ACPI-Compliant System
IRQ 457	Microsoft ACPI-Compliant System
IRQ 458	Microsoft ACPI-Compliant System
IRQ 459	Microsoft ACPI-Compliant System
IRQ 460	Microsoft ACPI-Compliant System
IRQ 461	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 462	Microsoft ACPI-Compliant System
IRQ 463	Microsoft ACPI-Compliant System
IRQ 464	Microsoft ACPI-Compliant System
IRQ 465	Microsoft ACPI-Compliant System
IRQ 466	Microsoft ACPI-Compliant System
IRQ 467	Microsoft ACPI-Compliant System
IRQ 468	Microsoft ACPI-Compliant System
IRQ 469	Microsoft ACPI-Compliant System
IRQ 470	Microsoft ACPI-Compliant System
IRQ 471	Microsoft ACPI-Compliant System
IRQ 472	Microsoft ACPI-Compliant System
IRQ 473	Microsoft ACPI-Compliant System
IRQ 474	Microsoft ACPI-Compliant System
IRQ 475	Microsoft ACPI-Compliant System
IRQ 476	Microsoft ACPI-Compliant System
IRQ 477	Microsoft ACPI-Compliant System
IRQ 478	Microsoft ACPI-Compliant System
IRQ 479	Microsoft ACPI-Compliant System
IRQ 480	Microsoft ACPI-Compliant System
IRQ 481	Microsoft ACPI-Compliant System
IRQ 482	Microsoft ACPI-Compliant System
IRQ 483	Microsoft ACPI-Compliant System
IRQ 484	Microsoft ACPI-Compliant System
IRQ 485	Microsoft ACPI-Compliant System
IRQ 486	Microsoft ACPI-Compliant System
IRQ 487	Microsoft ACPI-Compliant System
IRQ 488	Microsoft ACPI-Compliant System
IRQ 489	Microsoft ACPI-Compliant System
IRQ 490	Microsoft ACPI-Compliant System
IRQ 491	Microsoft ACPI-Compliant System
IRQ 492	Microsoft ACPI-Compliant System
IRQ 493	Microsoft ACPI-Compliant System
IRQ 494	Microsoft ACPI-Compliant System

IRQ	ASSIGNMENT
IRQ 495	Microsoft ACPI-Compliant System
IRQ 496	Microsoft ACPI-Compliant System
IRQ 497	Microsoft ACPI-Compliant System
IRQ 498	Microsoft ACPI-Compliant System
IRQ 499	Microsoft ACPI-Compliant System
IRQ 500	Microsoft ACPI-Compliant System
IRQ 501	Microsoft ACPI-Compliant System
IRQ 502	Microsoft ACPI-Compliant System
IRQ 503	Microsoft ACPI-Compliant System
IRQ 504	Microsoft ACPI-Compliant System
IRQ 505	Microsoft ACPI-Compliant System
IRQ 506	Microsoft ACPI-Compliant System
IRQ 507	Microsoft ACPI-Compliant System
IRQ 508	Microsoft ACPI-Compliant System
IRQ 509	Microsoft ACPI-Compliant System
IRQ 510	Microsoft ACPI-Compliant System
IRQ 511	Microsoft ACPI-Compliant System
IRQ 4294967280	Intel(R) Management Engine Interface
IRQ 4294967281	Intel(R) Ethernet Connection (7) I219-LM
IRQ 4294967282	Intel(R) I211 Gigabit Network Connection
IRQ 4294967283	Intel(R) I211 Gigabit Network Connection
IRQ 4294967284	Intel(R) I211 Gigabit Network Connection
IRQ 4294967285	Intel(R) I211 Gigabit Network Connection
IRQ 4294967286	Intel(R) I211 Gigabit Network Connection
IRQ 4294967287	Intel(R) I211 Gigabit Network Connection
IRQ 4294967288	Intel(R) I211 Gigabit Network Connection
IRQ 4294967289	Intel(R) I211 Gigabit Network Connection
IRQ 4294967290	Intel(R) I211 Gigabit Network Connection
IRQ 4294967291	Intel(R) I211 Gigabit Network Connection
IRQ 4294967292	Intel(R) USB 3.1 eXtensible Host Controller - 1.10 (Microsoft)
IRQ 4294967293	Intel(R) UHD Graphics P630
IRQ 4294967294	Standard SATA AHCI Controller

Note: These resource information were gathered using Windows 10 (the IRQ could be assigned differently depending on OS).

I/O MAP

I/O	ASSIGNMENT
0x00000000-0x00000CF7	PCI Express Root Complex
0x00000020-0x00000021	Programmable interrupt controller
0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller
0x0000002C-0x0000002D	Programmable interrupt controller
0x0000002E-0x0000002F	Motherboard resources
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x00000040-0x00000043	System timer
0x0000004E-0x0000004F	Motherboard resources
0x00000050-0x00000053	System timer
0x00000060-0x00000060	Standard PS/2 Keyboard
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000064-0x00000064	Standard PS/2 Keyboard
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000070-0x00000070	Motherboard resources
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B2-0x000000B3	Motherboard resources
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller

I/O	ASSIGNMENT
0x000000F0-0x000000F0	Numeric data processor
0x000002E0-0x000002E7	Communications Port (COM6)
0x000002E8-0x000002EF	Communications Port (COM4)
0x000002F0-0x000002F7	Communications Port (COM5)
0x000002F8-0x000002FF	Communications Port (COM2)
0x00000378-0x0000037F	Printer Port (LPT1)
0x000003E8-0x000003EF	Communications Port (COM3)
0x000003F8-0x000003FF	Communications Port (COM1)
0x000004D0-0x000004D1	Programmable interrupt controller
0x00000680-0x0000069F	Motherboard resources
0x00000A00-0x00000A0F	Motherboard resources
0x00000A10-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x00000D00-0x0000FFFF	PCI Express Root Complex
0x0000164E-0x0000164F	Motherboard resources
0x00001800-0x000018FE	Motherboard resources
0x00001854-0x00001857	Motherboard resources
0x00002000-0x000020FE	Motherboard resources
0x00003000-0x00003FFF	Intel(R) PCI Express Root Port #11 - A332
0x00004000-0x0000403F	Intel(R) UHD Graphics P630
0x00004060-0x0000407F	Standard SATA AHCI Controller
0x00004080-0x00004083	Standard SATA AHCI Controller
0x00004090-0x00004097	Standard SATA AHCI Controller
0x0000EFA0-0x0000EFBF	Intel(R) SMBus - A323
0x0000FFF8-0x0000FFFF	Intel(R) Active Management Technology - SOL (COM8)

Memory Map

MEMORY MAP	ASSIGNMENT
0xFED10000-0xFED17FFF	Motherboard resources
0xFED18000-0xFED18FFF	Motherboard resources
0xFED19000-0xFED19FFF	Motherboard resources
0xE0000000-0xEFFFFFFF	Motherboard resources
0xFED20000-0xFED3FFFF	Motherboard resources
0xFED90000-0xFED93FFF	Motherboard resources
0xFED45000-0xFED8FFFF	Motherboard resources
0xFEE00000-0xFEEFFFFFFF	Motherboard resources
0xA1100000-0xA111FFFF	Intel(R) I211 Gigabit Network Connection
0xA1100000-0xA111FFFF	Intel(R) PCI Express Root Port #11 - A332
0xA1120000-0xA1123FFF	Intel(R) I211 Gigabit Network Connection
0xFED00000-0xFED003FF	High precision event timer
0xA1220000-0xA122FFFF	Intel(R) USB 3.1 eXtensible Host Controller - 1.10 (Microsoft)
0xFE1DD000-0xFE1DDFFF	Intel(R) Serial IO I2C Host Controller - A369
0xFD000000-0xFD69FFFF	Motherboard resources
0xFD6C0000-0xFD6CFFFF	Motherboard resources
0xFD6F0000-0xFDFFFFFFF	Motherboard resources
0xFE000000-0xFE01FFFF	Motherboard resources
0xFE200000-0xFE7FFFFFFF	Motherboard resources
0xFF000000-0xFFFFFFFF	Motherboard resources
0x90000000-0xDFFFFFFF	PCI Express Root Complex
0x90000000-0xDFFFFFFF	Intel(R) UHD Graphics P630
0xFC800000-0xFE7FFFFFFF	PCI Express Root Complex
0xA1234000-0xA1235FFF	Standard SATA AHCI Controller
0xA123A000-0xA123A0FF	Standard SATA AHCI Controller
0xA1239000-0xA12397FF	Standard SATA AHCI Controller
0xFE010000-0xFE010FFF	Intel(R) SPI (flash) Controller - A324
0xFE1DF000-0xFE1DFFFF	Intel(R) Active Management Technology - SOL (COM8)

MEMORY MAP	ASSIGNMENT
0xFED40000-0xFED44FFF	Trusted Platform Module 2.0
0xFE1DC000-0xFE1DCFFF	Intel(R) Management Engine Interface
0xFE1DE000-0xFE1DEFFF	Intel(R) Serial IO I2C Host Controller - A368
0xA0000000-0xA0FFFFFF	Intel(R) UHD Graphics P630
0xFE1E0000-0xFE1FFFFF	Intel(R) Ethernet Connection (7) I219-LM
0xFD6E0000-0xFD6EFFFF	Intel(R) Serial IO GPIO Host Controller - INT3450
0xFD6D0000-0xFD6DFFFF	Intel(R) Serial IO GPIO Host Controller - INT3450
0xFD6B0000-0xFD6BFFFF	Intel(R) Serial IO GPIO Host Controller - INT3450
0xFD6A0000-0xFD6AFFFF	Intel(R) Serial IO GPIO Host Controller - INT3450
0xFE1D8000-0xFE1DBFFF	High Definition Audio Controller
0xFCF00000-0xFCFFFFFF	High Definition Audio Controller
0xA1238000-0xA12380FF	Intel(R) SMBus - A323
0xA0000-0xBFFFF	PCI Express Root Complex
0xE0000-0xE3FFF	PCI Express Root Complex
0xE4000-0xE7FFF	PCI Express Root Complex
0xE8000-0xEBFFF	PCI Express Root Complex
0xEC000-0xEFFFF	PCI Express Root Complex
0xF0000-0xFFFFF	PCI Express Root Complex
0x40000000-0x403FFFFF	Motherboard resources

DMA Map

DMA MAP	ASSIGNMENT
Channel 3	Printer Port (LPT1)

Configuring WatchDog Timer

The I/O port address of the watchdog timer is 2E (hex) and 2F (hex). 2E (hex) is the address port. 2F (hex) is the data port. Users must first assign the address of register by writing address value into address port 2E (hex), then write/read data to/from the assigned register through data port 2F (hex).

Configuration Sequence

To program F81866 configuration registers, the following configuration sequence must be followed:

(1) Enter the extended function mode

To place the chip into the Extended Function Mode, two successive writes of 0x87 must be applied to Extended Function Enable Registers (EFERs, i.e. 2Eh or 4Eh).

(2) Configure the configuration registers

The chip selects the Logical Device and activates the desired Logical Devices through Extended Function Index Register (EFIR) and Extended Function Data Register (EFDR). The EFIR is located at the same address as the EFER, and the EFDR is located at address (EFIR+1). First, write the Logical Device Number (i.e. 0x07) to the EFIR and then write the number of the desired Logical Device to the EFDR. If accessing the Chip (Global) Control Registers, this step is not required. Secondly, write the address of the desired configuration register within the Logical Device to the EFIR and then write (or read) the desired configuration register through the EFDR.

(3) Exit the extended function mode

To exit the Extended Function Mode, writing 0xAA to the EFER is required. Once the chip exits the Extended Function Mode, it is in the normal running mode and is ready to enter the configuration mode.

Code example for watch dog timer

Enable watchdog timer and set timeout interval to 30 seconds.

```


;----- Enter extended function mode -----
mov    dx,    2Eh
mov    al,    87h
out    dx,    al
out    dx,    al
;----- Select Logical Device 7 of watchdog timer -----
mov    al,    07h
out    dx,    al
inc    dx
mov    al,    07h
out    dx,    al
;----- Enable Watch dog feature -----
dec    dx
mov    al,    30h
out    dx,    al
inc    dx
mov    al,    01h
out    dx,    al
;----- Set timeout interval as 30 seconds and start counting -----
dec    dx
mov    al,    F6h
out    dx,    al
inc    dx
mov    al,    1Eh
out    dx,    al
;----- Enable Watch PME-----
dec    dx
mov    al,    FAh
out    dx,    al
inc    dx
in     al,    dx
or     al,    51h
out    dx,    al
;----- Set second as counting unit -----
dec    dx
mov    al,    F5h
out    dx,    al
inc    dx
in     al,    dx
and   al,    DEh
out    dx,    al
;----- Start the watchdog timer -----
or     al,    20h
out    dx,    al
;----- Exit the extended function mode -----
dec    dx
mov    al,    AAh
out    dx,    al

```

Flash BIOS Update

I. Prerequisites

- 1 Prepare a bootable media (e.g. USB storage device) which can boot system to EFI Shell.
Note: Copy UEFI Shell into the storage device under specific directory path. (/efi/boot/bootx64.efi)
- 2 Download and save the BIOS file (e.g. 26020PW1.bin) to the bootable device.
- 3 Copy AMI flash utility – AfuEfix64.efi (v5.12.02.2028) into bootable device.
- 4 Make sure the target system can first boot to the bootable device.
 - (1) Connect the bootable USB device.
 - (2) Turn on the computer and press <ESC> or during boot to enter BIOS Setup.
 - (3) Select [**Boot**] menu and set the USB bootable device as the 1st boot device.
 - (4) Press <F4> to save the configuration and exit the BIOS setup menu.

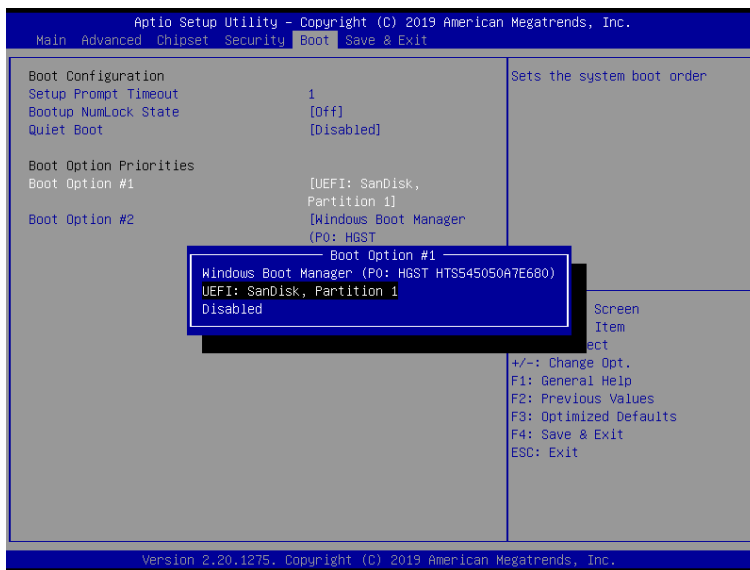

II. AFUEFI Command For System BIOS Update

AfuEfix64.efi is the AMI firmware update utility. The command line is shown as below:

AfuEfix64 <ROM File Name> [option1] [option2]....

Users can type “**AfuEfix64/ ?**” to view the definition of each control option. The recommended options for BIOS ROM update include the following parameters:

- /P**: Program main BIOS image.
- /B**: Program Boot Block.
- /N**: Program NVRAM.
- /X**: Don't check ROM ID.

III. BIOS Update Procedure

- 1** Use the bootable USB storage to boot up the system into the EFI Shell.
- 2** Type "**AfuEfix64 2602xxxx.bin /p /b /n /x**" and press “Enter” to start the flash procedure. (xxxx means the BIOS revision part, e.g. 0PM1...)
- 3** During the update procedure, you will see the BIOS update process status and its percentage. Beware! **DO NOT** turn off the system power or reset your computer if the whole procedure is not completed yet, or it may crash the BIOS ROM and make the system unable to boot up next time.
- 4** After BIOS update procedure is completed, the messages below will display:


```
fs0:\> AfuEfix64 26020PW1.bin /p /b /n /x
+-----+
|          AMI Firmware Update Utility v5.12.02.2028          |
| Copyright (C) 1985-2019, American Megatrends International LLC. |
| All Rights Reserve. Subject to AMI licensing agreement.      |
+-----+
Reading flash ..... done
- FFS checksums ..... ok
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
Erasing Main Block ..... done
Updating Main Block ..... done
Verifying Main Block ..... done
Erasing NVRAM Block ..... done
Updating NVRAM Block ..... done
Verifying NVRAM Block ..... done

fs0:\>
```

- 5 Restart the system and boot up with the new BIOS configurations.
- 6 The BIOS Update is completed after the system is restarted.
- 7 Reboot the system and verify if the BIOS version shown on the initialization screen has been updated.

